

Model **PBD**
26-CT

Owner's Guide

This Manual Applies To:	
Part #	Series #
100011	0004
100012	0004

- **Assembly**
- **Operation**
- **Maintenance**
- **Troubleshooting**
- **Accessories**
- **Parts List**



\$10.00 CDN

Printed in Canada.
18/12/2017

Polar Bear Water Distillers
Mfg. Co. Ltd.

99001A

Polar Bear Distiller Warranty

POLAR BEAR WATER DISTILLERS MFG. CO. LTD. warrants to the original purchaser, their products against defects in materials for a period of one (1) full year on all electrical components, other parts and labor, and ten (10) years on all stainless steel parts.

If the Distiller is found to have defective stainless steel components within the first five years or electrically defective parts within the first year, the parts will be repaired or replaced at no cost to the customer. If the Distiller is found to have been consumer damaged or abused, the warranty does not obligate POLAR BEAR WATER DISTILLERS MFG. CO. LTD. to bear any transportation charges in connection with the repair or replacement of defective parts.

After five years from the date of purchase, stainless steel parts are warranted on a fully pro-rated replacement cost basis not to exceed 10 years from date of purchase.

This warranty is invalid if the damage or defect is caused by accident, act of God, customer abuse, unauthorized alteration or repair, vandalism or misuse.

This warranty is made in lieu of any other express warranty and except for the foregoing warranty which is exclusive, there is no other express warranty being made.

The purchaser is responsible for all shipping charges to and from the service center. The manufacturer, dealer or service center is not responsible for damages incurred during shipping.

POLAR BEAR WATER DISTILLERS MFG. CO. LTD. believes the information contained in this manual to be accurate. Parts, specifications, and instructions are subject to change without notice.

Contents

Polar Bear Distiller Warranty.....	ii
Distiller Information	5
Introduction	7
The Model 26-CT & Accessories.....	8
Distiller Features.....	9
As You Begin.....	10
Know Your Distiller.....	11
Distilled Water – Benefits, Uses, & Questions	15
Benefits.....	15
Uses	16
Answers to Some Frequent Questions.....	17
The Process of Distilling Water	19
Assembly	21
Parts Included.....	21
Location of Distiller Installation.....	22
Unpacking	22
Holding Tank Drain Faucet	23
Pump Kit (Option) Installation.....	24
External Charcoal Filter (Option) Installation.....	25
Boiling Tank Drain Extension	26
Charcoal Filter Leg.....	27
Automatic Water Feed Line	28
Sediment Filter (Option) Installation.....	30
Boiling Tank Lid	31
Final Assembly.....	32
Operation	33
Safety Precautions	33
Controls	34
Before Operating.....	36
Initial Sterilization	37

Manual Operation.....	39
Automatic Operation	41
Maintenance	43
Cleaning the Boiling Tank	43
Cleaning the Boiling Tank - Using P.B.W.D. Cleaner and Descaler	44
Charcoal Replacement.....	46
External Charcoal Filter Replacement.....	48
Sediment Filter Replacement	48
Air Filter Replacement	49
Steam Sterilization	50
Boiler Float Gasket.....	52
Troubleshooting.....	55
Water Testing Program	59
Supplies & Accessories	61
Technical Information.....	63
Wiring List	64
Wiring Diagram	65
Parts List: Head Assembly	66
Parts Diagram: Head Assembly.....	67
Parts List: Float Box Assembly.....	68
Parts Diagram: Float Box Assembly.....	69
Parts List: Holding Tank Assembly.....	70
Parts Diagram: Holding Tank Assembly.....	70
Parts List: Solenoid Valve Assembly	72
Parts Diagram: Solenoid Valve Assembly	72
Parts List: Boiler Tank Assembly	74
Parts Diagram: Boiler Tank Assembly.....	74
Other Miscellaneous Parts	76
Dealer Information	77

Distiller Information

Model: _____

Series: _____

Serial Number: _____

Purchase Date: _____

Purchased From: _____

Telephone: _____

Installation Date: _____

Installed By: _____

Pump Serial Number(Optional): _____

Purchase Date: _____

Auto Drain Serial Number(Optional): _____


Purchase Date: _____

Shipping Weight 19 kg (42 lb)
 Machine Weight 14.5 kg (32 lb)
 Machine Height 540 mm (21¼")
 Machine Width 483 mm (19")
 Machine Depth 280 mm (11")

Electrical Ratings:
 110 Volts, 9 Amps, 1100 Watts
 220 Volts, 5 Amps, 1100 Watts

Distilling Capacity:.....30 Litres/Day
 or 8 US Gal./Day
 (Based on 24 hours continuous operation under ideal
 conditions - actual production may vary)

Holding Tank: 20 Litres
 or 5.5 US Gal.

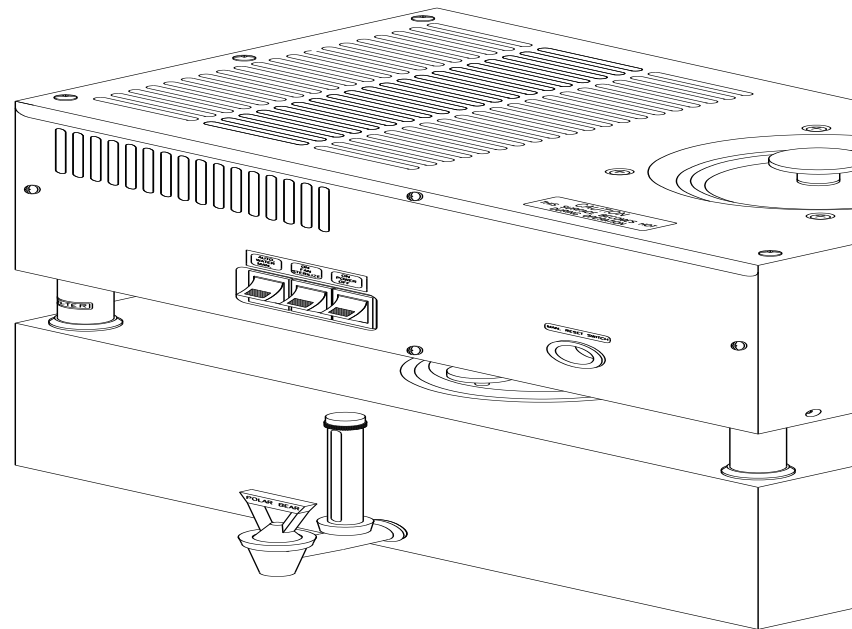

This page intentionally left blank.

Introduction

Congratulations! You are now the owner of one of the many fine products manufactured by **Polar Bear Water Distillers Mfg. Co. Ltd.**, a world leader in the water purification industry. We take pride in our solid reputation for product quality and industry-proven performance.

This product has been carefully inspected to comply with rigid factory quality control standards, as well as, where applicable, those of the Canadian Standards Association(CSA), Underwriters Laboratories (UL)*, and National Sanitation Foundation International (NSF)**. We are sure that, with reasonable care, it will provide you with years of reliable performance.


Polar Bear Water Distillers Mfg. Co. Ltd. compliments you on your choice - and know you will enjoy the purest and healthiest water available, because...

"We care about the water you drink!"

** Note: The physiological effects of the operation of this appliance, beneficial or otherwise have not been investigated by Underwriters Laboratories Inc.*

*** Note: The National Sanitation Foundation International has only tested for reduction of certain chemicals in accordance with Standard 62, Drinking Water Distillation Systems (TDS, Flouride & Mercury).*

The Model 26-CT & Accessories

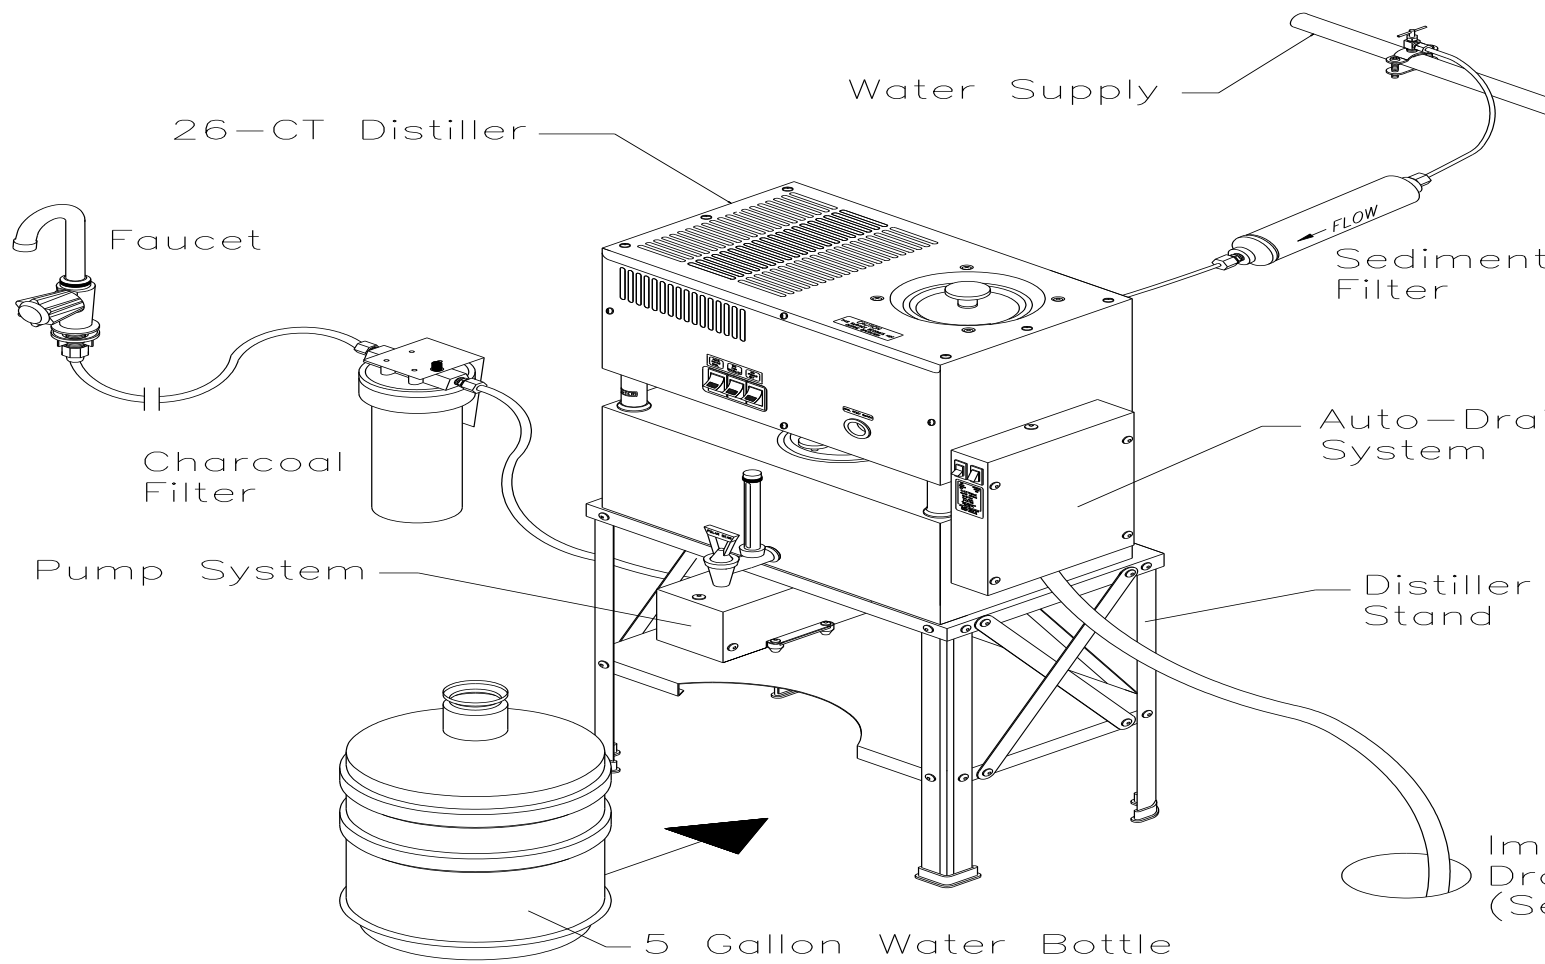

For more information on available accessories, see the section on **Accessories** in this guide.

Distiller Features

- Compact, countertop, and portable. Install in any area of your home for automatic operation or use manual operation for travel.
- Optional Accessories: Stand, Auto-drain system, Pump kit with faucet, external Charcoal Filters, and feed line Sediment Filters.
- Easy to clean and maintain.
V-shaped boiling tank bottom for fast, efficient drainage of impurities. Just open the tap and drain. For automatic draining and even less frequent cleaning, install a Polar Bear Auto-Drain.
- The distiller and holding tank are manufactured from attractive, long-lasting high grade 304 stainless steel.
- Double-baffle system for the purest distilled drinking water available.
- Volatile gas release vent – expels contaminants with a lower boiling point than water.
- Automatic start/stop float system.
- Built-in safety system that automatically shuts off the distiller should it overheat.
- Comes complete with all parts needed for fully automatic operation.
- Flush mount, boiler lid for easier clean-up and a more compact design.
- Low level pump shut off prevents pump from running dry.
- Coconut Charcoal Filter.
- Air filter on Holding Tank prevents airborne contamination.
- Ten year limited warranty on all stainless steel parts and one year on all electrical parts and labor. See: **Polar Bear Distiller Warranty**.


As You Begin...

1. It is important to fill out and return the warranty card in this manual. The information is necessary should parts or repairs be needed during the warranty period.
2. Each distiller is operated at the factory and tested for leaks and proper operation. Therefore, the distiller may have a water ring inside the boiling tank.
3. Proper cleaning is important! Keep the distiller and especially the inside of the boiling tank clean at all times. This is necessary to produce the purest water possible. See section on Maintenance for more information.
4. The boiling tank is TIG (Tungsten Inert Gas) welded. As water is distilled, minerals may cling to the weld, appearing as rust. This does NOT affect the quality of the water! Discoloration in corners of the boiling tank is caused by the heat during welding.
5. Distilled water may have a different taste. This is not a "taste", but a lack of taste. You will become accustomed to this the same way you did to the water in your area.

Know Your Distiller

Use this picture as a reference throughout this manual.

1. Boiling Tank Lid Knob
2. Boiling Tank Lid
3. Distiller Head
4. Reset Button
5. Impurities Drain Valve
6. Impurities Drain Extension Tube
7. Auto-Drain Power Receptacle

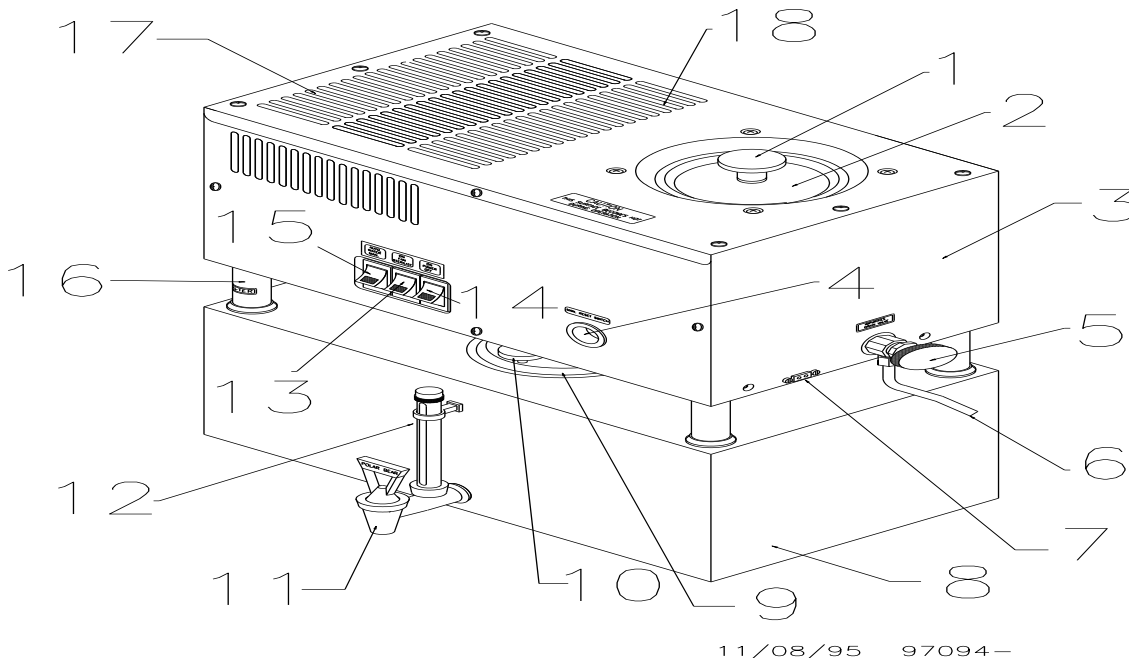

8. Holding Tank
9. Holding Tank Lid & Lid Knob
10. Holding Tank Filter Vent

11. Distilled Water Drain Faucet
12. Sight Gauge
13. Fan Switch
14. Main Power Switch
15. Water Fill Switch
16. Coconut Charcoal Filter
17. Fan Vent Holes
18. Volatile Gas Release Vent (inside)

This page intentionally left blank.

Distilled Water – Benefits, Uses, & Questions

You have made an excellent choice in using distilled water. To help answer some questions of your own, or those of others, here are some of the benefits, uses, and answers to common questions about distilled water.

There is also a section on how distilled water is made.

Benefits

- Provides the *purest drinking water* - reduction of certain chemicals, impurities, pollutants, and bad taste.
- Distillation does not rely on physical barriers which can break down or fail. The prolonged boiling process in water distillers is critical for killing and eliminating bacteria and viruses. No other process is as effective or as reliable.
- Eliminates scale build-up on pots, tea kettles, coffee pots, humidifiers, vaporizers, steam irons, etc.
- Produces less waste water than reverse osmosis.
- Distillers are not affected by low or varying water pressures, temperatures, or pH. Consistent, high quality water will be produced for the life of the Distiller.
- **Polar Bear** water distillers are extremely durable, trouble-free appliances that require a minimum of service and maintenance for efficient and complete operation.

Uses

- Drinking – Distilled water is an excellent drink all on its own.
- Ice cubes - not only are they more shiny due to the absence of impurities in the water, but they are also harder.
- Tea and coffee. When you use distilled water to make coffee or tea, try approximately 1/3 less grounds or tea leaves. There will be a somewhat light color, but just as rich flavor, as well as a less-bitter taste.
- Juices and drinks. Try adding about 25% more water. Because the distilled water is free from chlorine, there will be no interaction between the chlorine and the Vitamin C.
- Cooking and baking - for standard results from favorite recipes. Flavors come through naturally, baked goods have a better texture. *Pasta products* will absorb more distilled water than tap water, producing better texture and flavor, as well as less tendency to cling together. Canning fruits and vegetables - not only do they retain a more natural color, but the flavor is better.
- Infant care and formulas. (Be sure to follow your Doctor's advice on sterilizing water for infants)
- Wine making or mixing drinks.
- Drinking water for pets and for topping off aquariums.
- Automobile care - for batteries, as well as windshield washers - leaves no spotting.
- Photographic equipment and laboratories.
- Watering plants.
- Water based paints.
- All types of cleaning – less streaking on mirrors, windows, etc.

Answers to Some Frequent Questions

Question: Is tap water really safe for drinking?

Answer: Many tap water supplies are, for the most part, safe in terms of being free of disease-causing bacteria. There are tests of water supplies throughout the world that now show varying degrees of contamination by modern chemical pollutants. In many cases, the chlorine used to rid water of bacteria is now interacting with these chemicals, creating additional pollutants. Water supplies may also be contaminated by asbestos, copper, cadmium and lead from water pipes. Drinking water from untested wells can be very unreliable, particularly when located on ½ - acre plots where it is almost impossible to keep seepage from the cesspool or septic tank out of the well.

Question: Why is distilled water the safest water to drink?

Answer: Distillation is more effective than any other purification system in removing bacteria, chemicals, and minerals from the water. Independent test results show a greater than 99% efficiency removal of contaminants, such as chlorine, nitrate and sodium, when water is distilled using a Polar Bear water distiller*. Distilled water is virtually pure H₂O and the safest of all drinking water.

Question: Does distillation remove minerals from water that our bodies need?

Answer: Distillation does remove minerals from water, however these minerals are inorganic and cannot be used by the body. The body assimilates the organic minerals which are abundant in the foods we eat.

* Results from: *An Evaluation of Polar Bear Water Distillers For Removing Toxic Industrial and Agricultural Contaminants*. 'Enviro-Test Laboratories', September 28, 1987, Ref. No. 762.REP.

Question: Are water softeners considered water purifiers?

Answer: No. Water softeners do not kill bacteria or take out any contaminants. Rather, they add salts to the water. No one on a sodium (salt) restricted or sodium-free diet should drink softened water.


Question: Are there any other benefits of distilled water?

Answer: Food has more flavor. A glass of cold, distilled water tastes 'clean'. Everything remains pure, as there is nothing left in the water to interfere with or change the original natural flavor.

The Process of Distilling Water

The process of distillation duplicates Nature's hydrologic cycle:

1. In nature, the heat of the sun vaporizes the surface water and draws it into the atmosphere, leaving the impurities behind.
2. As the vapor cools, it condenses and falls back to Earth as rain or snow.
3. As it falls back towards Earth through smog and dust, the water can pick up many forms of contamination.
4. Even more contamination is absorbed through ground contamination.

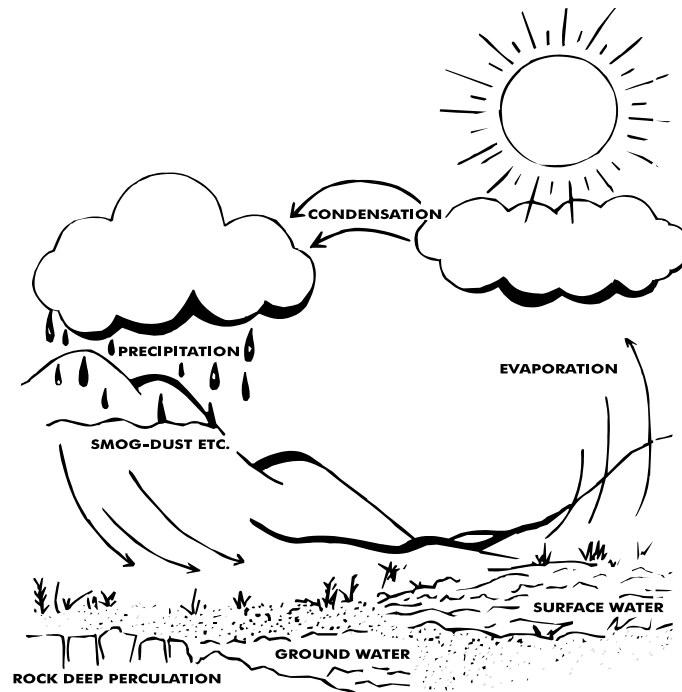

Distillers are designed to duplicate Nature's hydrological cycle, but they take it a step further by producing high purity water in a chamber, essentially free from pollution. Distillers boil the feed water, creating steam. The steam rises, leaving almost all of the impurities behind in the Boiling Tank. The steam is collected and condensed as clean, distilled water and stored in a stainless steel Holding Tank. The impurities that remain in the Boiling Tank are then expelled to a drain or sewer.

Polar Bear Water Distillers

Distillation is the only water treatment process that does not rely on physical barriers to separate good, clean water from contaminants.

With proper maintenance, Polar Bear distillers will reject contaminants just as effectively ten years after installation as they do the day they are purchased.

Our distillers also include a charcoal filter, designed to handle the contaminants that boil at lower temperatures than the boiling point of water.

Assembly

The Distiller & parts have been shipped in one box . While unpacking, save all packing material until the Distiller is in full operation. Save the box should the Distiller require transportation.

Parts Included

- 1- Distillation Head
- 1- Distilled water Holding Tank
- 1- Parts Box:
 - 1- Instruction Manual and Warranty Card
 - 1- Saddle Valve kit
 - 1- Holding Tank drain faucet with sight gauge
 - 1- Direct water feed line – ¼” x 16 ft.
 - 1- Boiling tank impurities drain extension (stainless steel)
 - 1- Lid for boiling tank
 - 1- Sample jar of P.B.W.D. Cleaner & Descaler
 - 1- Sample jar of Activated Coconut Charcoal
 - 1- Length of Sterilization Drip Tube
 - 1- Brass Reducer Nut with Feed Line Fitting

**** Note: Distiller installation must comply with all local and state regulations.***

Location of Distiller Installation

Before installing your Distiller, decide where it will go, keeping in mind the following important factors:


1. The Distiller requires cool air to operate properly. Air flow must not be restricted by placing objects on top of Distiller, and it must be installed in an area that receives plenty of cool air.
2. Location of power. Distiller must be plugged directly into a wall outlet which should be on a dedicated circuit. (see Distiller Information for power requirements)
3. Close proximity of water supply (when using the automatic water feed).
4. Access to drain impurities using a pail or other suitable container, OR close proximity to a water drain (sewer) if an auto-drain is to be installed.
5. Size & location of the Distiller including options such as Pump Kit, Auto-Drain, Sediment Filter, external Charcoal Filter, or Distiller stand.

Unpacking

1. Follow box unpacking instructions in top of box.
2. Remove all packing material from outside distiller.
3. Remove paper packing inside boiling tank to free up Boiler Tank Float – be careful not to bend float arm.
4. Remove tape securing float inside Holding Tank – be careful not to bend float arm.
5. Strip off any protective plastic from Distiller, Holding Tank, and Lids.


Holding Tank Drain Faucet

1. Separate Distiller Head from Holding Tank by disconnecting cable between Head and Holding tank. Lift Distiller Head off of Holding Tank and set aside.
2. Remove any remaining tape from float inside Holding Tank (inside of top of Holding Tank) – be careful not to bend float arm.
3. Place gasket on threaded faucet end (as shown).
4. Insert threaded section through hole in bottom front of tank.
5. Reaching through top of the tank (While holding faucet in position with other hand), install the nut on Threaded Faucet End.
6. To tighten the nut, turn faucet counter-clockwise 1/8 of a turn, **finger-tighten** the nut on the inside of the tank.
7. Holding the nut, turn the faucet clockwise until upright. *Do not push on sight gauge as it is fragile!*
8. Install Screw for sight gauge support as shown.
9. Rinse out the Holding Tank to remove any dust, etc. that may be present from shipping and/or packaging materials.
10. Install Pump Kit Adapter Fitting from Pump Kit (if purchased). See section on Pump Kit Installation.
11. Replace Holding Tank Lid.
12. Replace Distiller Head onto Holding Tank.
13. Connect Cable from Holding Tank Switch Box to Distiller Head.

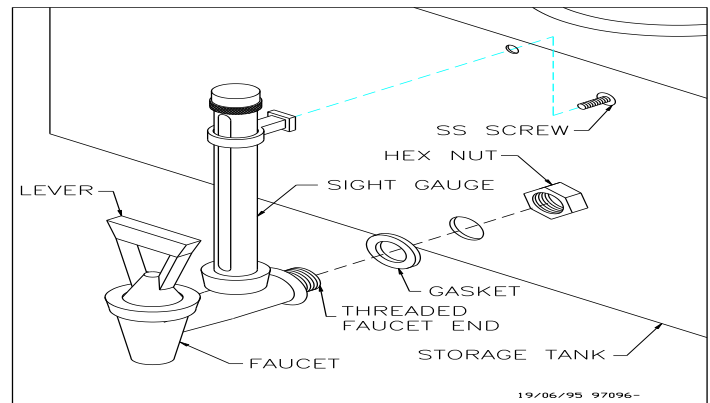

Pump Kit (Option) Installation


The Pump Kit with Faucet is an option to the Distiller that provides distilled water to be conveniently pumped to a separate faucet (kitchen sink, for example).

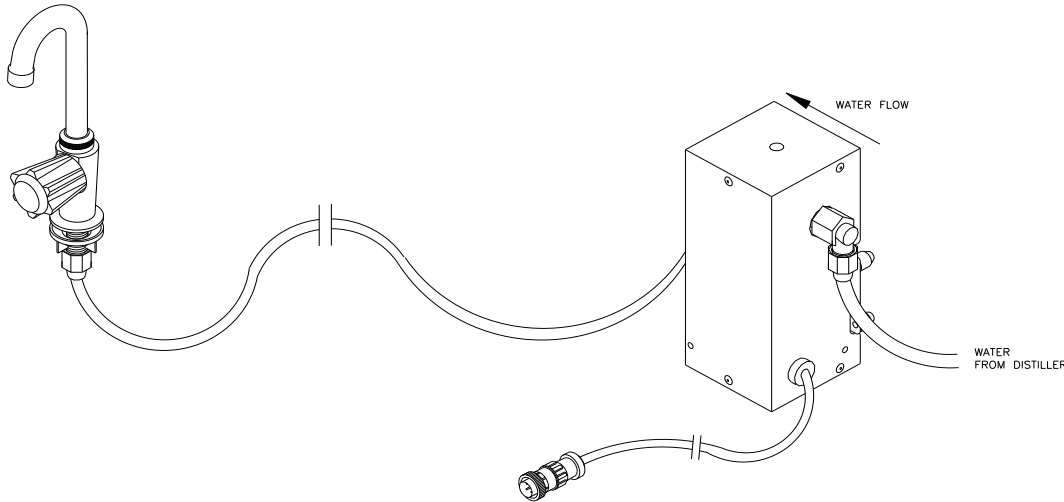

Follow instructions provided with the Pump Kit to complete installation.

External Charcoal Filter (Option) Installation

Installed Between a Pump and Faucet (from optional Pump Kit), an External Charcoal Filter will provide longer periods between changes than the standard Charcoal Filter provided with the Distiller. Contact your dealer for more information.

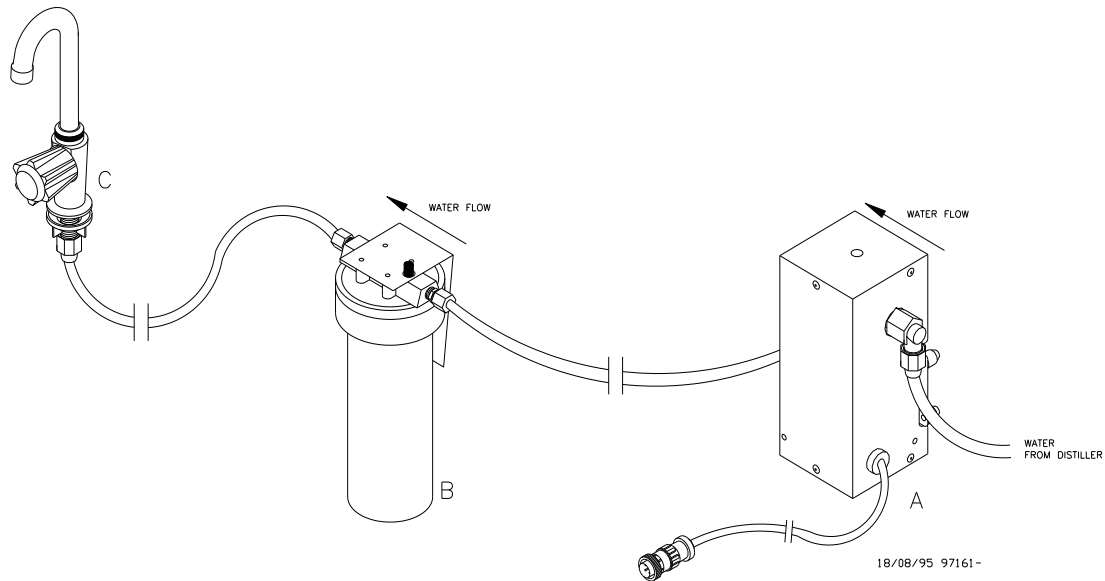


Follow instructions provided with the Charcoal Filter to complete installation.

Boiling Tank Drain Extension

The Drain Extension will allow you to manually drain the Boiler Tank into a waste container. If you have purchased an automatic drain (Auto-Drain) system, installation of the Drain Extension is not necessary – follow the installation instructions in the Auto-Drain.

1. Remove the compression nut and brass compression ring from the boiling tank drain valve.

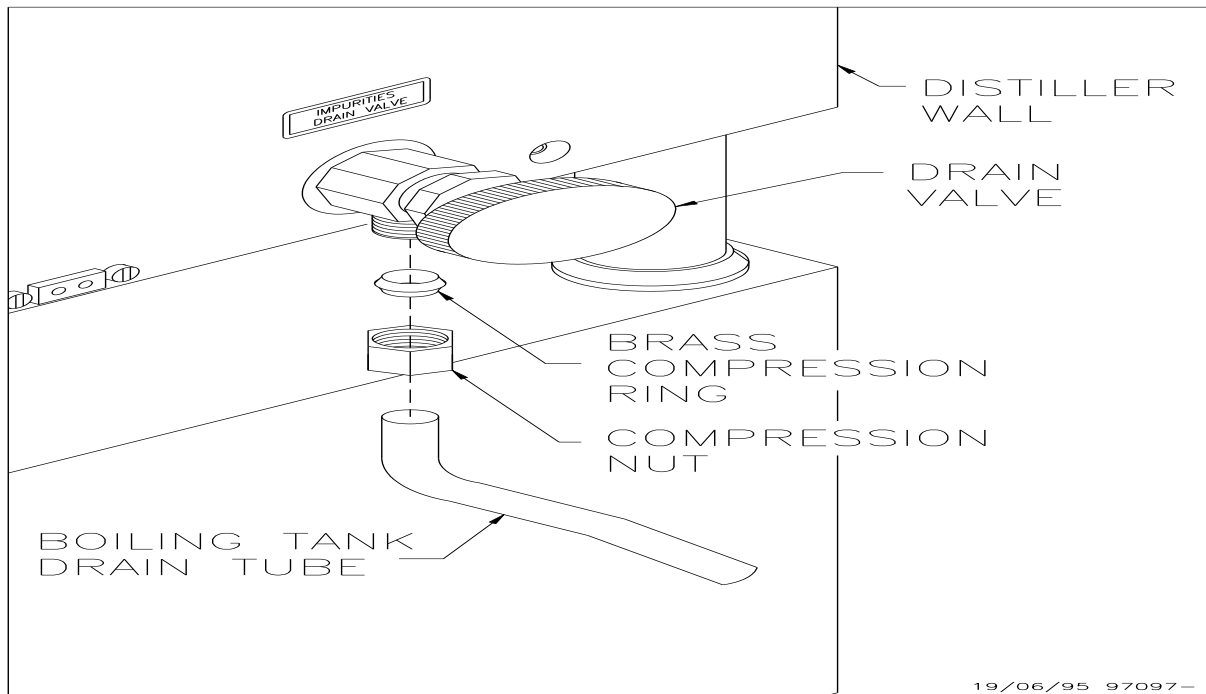


2. Slip the compression nut over the tube, small opening first, then slip on the brass compression ring (as shown).
3. Push the Drain Tube into the opening of the drain valve, turning Tube to point away from Distiller.
4. Thread compression nut onto the drain valve and tighten.

Charcoal Filter Leg


The model 26-CT is factory shipped with the Charcoal Filter Leg installed with **no** charcoal.

For the initial installation of the Distiller, leave the filter empty of charcoal. This will allow you to perform the Initial Sterilization procedure after assembly is complete.

CHARCOAL FILTER

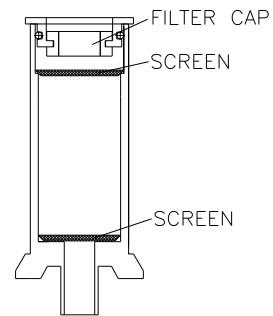

11/08/95 97158-

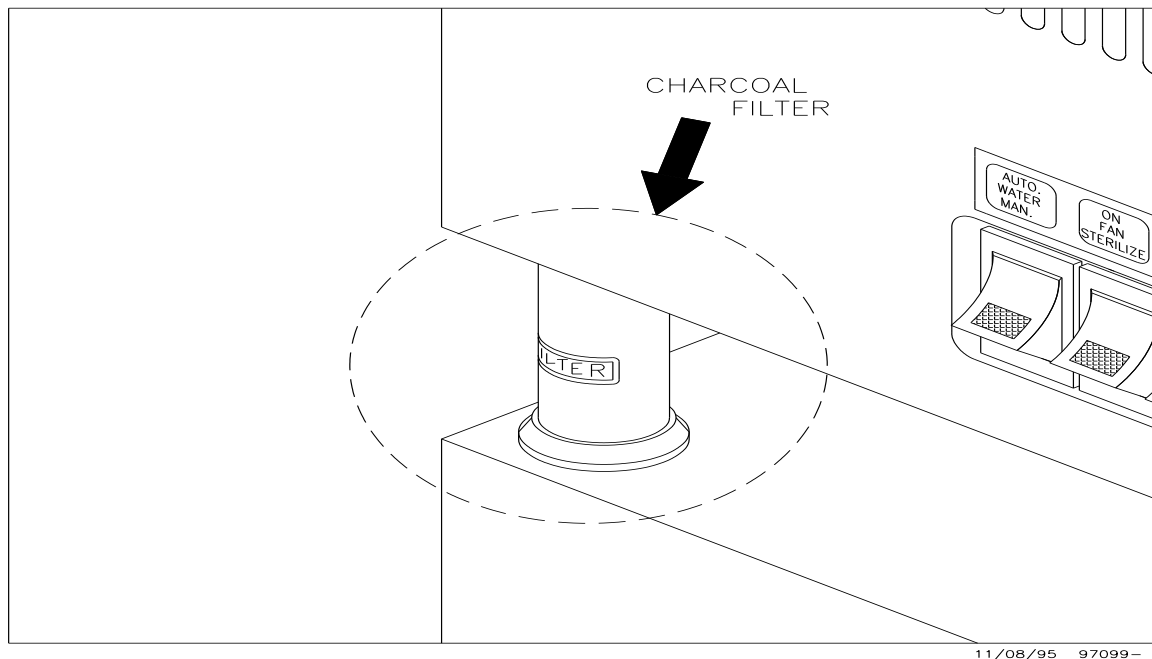


11/08/95 97099-

Automatic Water Feed Line

This section installs the Saddle Valve (a self-piercing valve) onto a pressurized water supply pipe for automatic operation. Skip this section if you intend to operate this Distiller manually.

1. Tighten Brass Reducer Nut(5) with hose washer snugly onto Solenoid Valve(4) at the back of Distiller Head. Wetting gasket inside Brass Reducer Nut with water will make assembly easier.

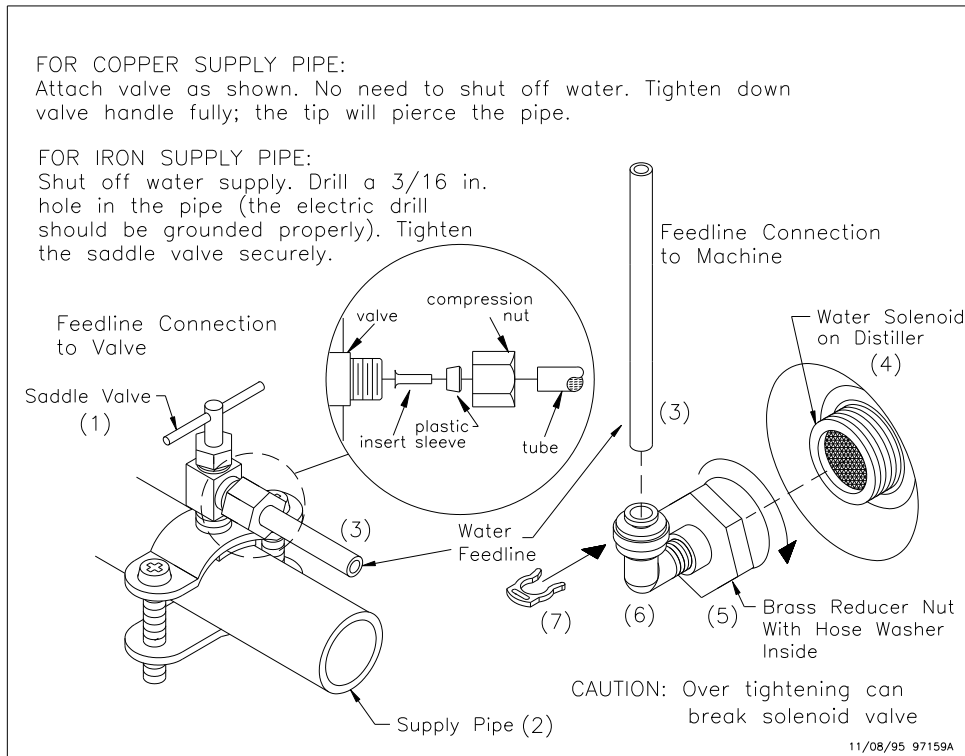


2. Cut the water feed line square.
3. Remove red Retaining Clip(7) from Water Feed Connection(6).
4. Push water Feed Line end into the distiller's Water Feed Connection(6) as far as it will go. Reinsert retaining clip(7).

5. Install Sediment Filter (if purchased). See section on Sediment Filter Installation.
6. Connect other end of Water Feed Line(3) onto saddle valve(1). Mount saddle valve to the cold water supply pipe(8). Be sure rubber gasket is centered underneath valve bracket.
You may use the output line from a water softener in your home, if available – this may make cleaning and maintaining the Distiller easier.
*Use of the hot water supply from a hot water heater is **not recommended**, because there is little benefit since the Distiller draws very small quantities of water at a time, and sediment and scale May plug water supply line.*
7. When mounting on iron pipe, turn in valve handle first so that self piercing tip protrudes through rubber gasket. Turn off water supply. Align tip into pre-drilled hole on pipe.
8. Make sure the boiling tank drain valve is closed and Distiller is unplugged.
9. Tighten saddle valve handle completely to pierce pipe (Copper pipe only).
10. Open saddle valve 1 to 1-1/2 turns by turning handle counter-clockwise to allow water into distiller.
11. Iron Pipe: Turn on water supply.
12. Check for leaks.

Sediment Filter (Option) Installation

A sediment filter is used when problems with coarse particles are present in the raw water supply. Coarse particles such as sand can make cleaning difficult, and are prone to plugging or jamming the automatic water feed system inside the Distiller. This may cause over filling of the Boiling Tank.


Contact your Dealer for more information on Sediment filters.

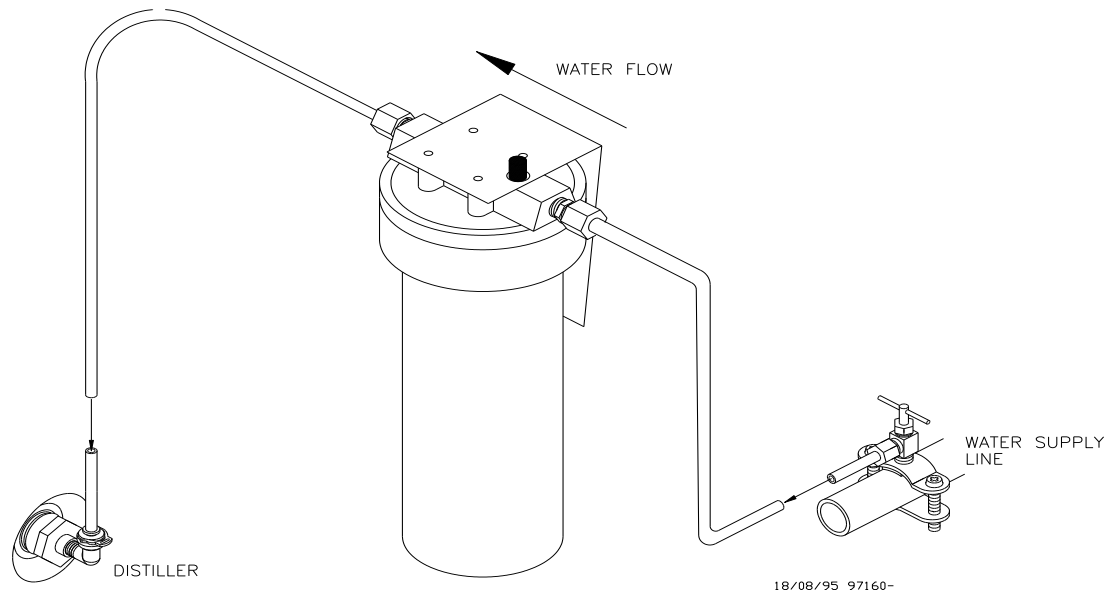

Follow instructions provided with the Sediment Filter to complete installation.

Boiling Tank Lid

1. Remove any protective plastic coating (white or clear blue) from lid.
2. Loosen the Lid Knob (turn counter-clockwise). Tip the bar at the bottom.
3. Slip bar under the rim of Boiling Tank opening.
4. Center Lid Knob over the opening and tighten. This will need to be removed each time the distiller is cleaned or operated manually.

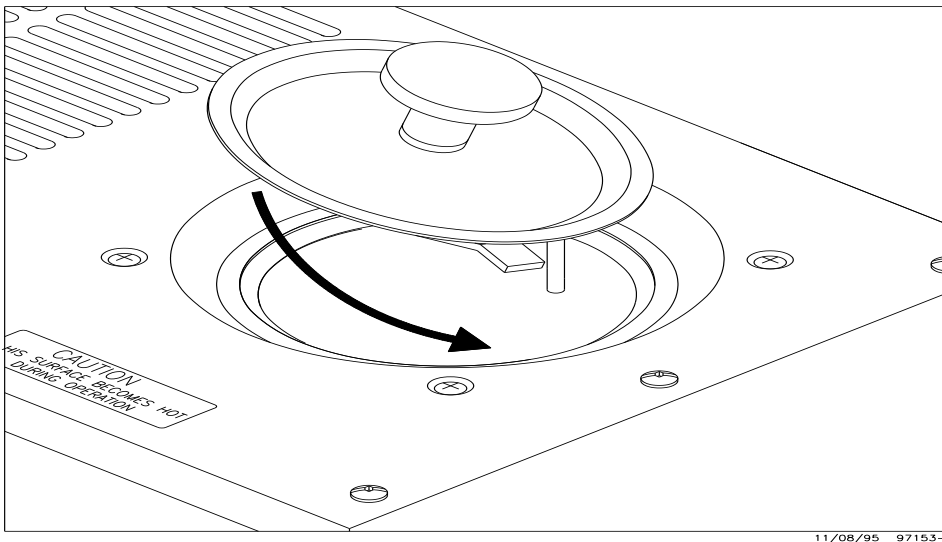

Final Assembly

1. Make sure all switches (Water, Fan, Power, and Auto-Drain power) are turned OFF.
2. Your Distiller is now ready to produce distilled water. Please read section on Operation thoroughly before operating Distiller.

Operation

This Distiller is designed to operate automatically, which is perfect for most installations. It can also be run manually – when moved for portable use or when a pressurized water supply is not available.

Before operating Distiller for the first time, please read the safety precautions and Distiller Controls, and perform the following Before-Operation checks and Initial Sterilization procedure.

Safety Precautions


1. Always unplug Distiller from power source before servicing.
2. If the electrical cord becomes damaged or cut, have it changed immediately!
3. Operate indoors. Do not expose the Distiller to any natural elements (rain, sun, snow).
4. This Distiller is air-cooled. *Do not restrict air-flow or place inside a closet or cupboard to operate.*
5. Distiller must be plugged directly into a firm fitting and grounded wall receptacle. Extension cords must only be used during assembly and for temporary installations. (see section Distiller Information for power requirements)

Controls

There are three (3) switches located on the front of the distiller that allow you to control all functions of the distiller:


Water Supply – "Automatic / Manual"

- Blue lens color.
- Normally turned to AUTOMATIC (for automatic operation).
- Allows water from water supply pipe to enter Boiling Tank to be distilled.
- Turn OFF whenever operating Distiller without water feed line operating (manual operation).
- Switch illuminates when raw water is entering Boiling Tank to be distilled. Normally, switch will occasionally illuminate for a short period when water level in Boiling Tank is low, and light will remain off until more water is required.

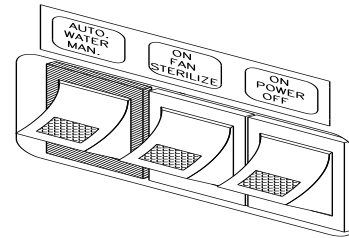


Fan – "ON / Sterilize"

- Clear lens color, illuminates amber.
- Normally turned ON.
- Supplies power to cooling fan if Holding Tank level is 2/3 full or less.
- Turn to STERILIZE (OFF) only when performing a sterilization process.
- Switch illuminates when Holding Tank needs filling. Fan will start running, and distillation will begin. Switch light will remain off when Holding Tank is full, or when there is not enough water in the Boiling Tank to operate.

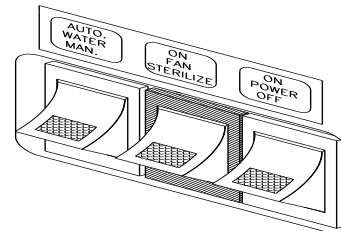

Power – "ON / OFF"

- Red lens color.
- Normally turned ON. Controls power to entire Distiller.
- Turn OFF to stop operation of Distiller.
- Illuminates whenever switch is turned ON. Remains illuminated even when Distiller is not operating.
- Power will remain to Pump and Auto-Drain even with Power switch OFF - **Unplug Distiller before servicing.**

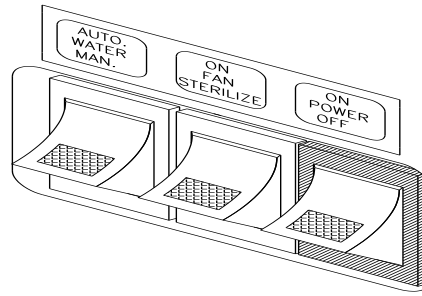


Before Operating

After installing a new Distiller, it is a good idea to check its operation and look for any leaks or other problems.

1. Ensure Saddle Valve on Water Supply Pipe is turned ON (counter-clockwise).
2. Make sure control switches are turned off (down): Water to MANUAL, Fan to STERILIZE, Power to OFF, and Auto-Drain Power to OFF(if purchased).
3. Plug in Distiller, turn Power Switch to ON: Red light on Power switch should illuminate.
4. Check for leaks around Saddle Valve on Supply pipe, and around the Water Solenoid on Distiller.
5. Turn Water switch to AUTOMATIC and Fan switch to ON. Fan should start, and water should enter boiling tank (open Boiler Lid to check).
6. All switches should be illuminated.
7. Turn off (down) Water, Fan, and Power switches.

Initial Sterilization

1. Fill the Boiling Tank 2/3 full with water (manually with pail, or automatically by turning on Power and Water switches for a minute until Water Supply switch is not illuminated).
2. Ensure the Boiling Tank Lid is back on and snug.
3. Loosen, but do not remove Holding Tank Lid to allow steam to escape.
4. Turn ON the Power switch, and set the Fan switch to the STERILIZE position. The Water switch can remain AUTOMATIC if you have installed the Water Feed line.
5. Allow the distiller to run 30-40 minutes (or until the Distiller shuts itself off – manual fill). **WARNING: The Distiller, empty Charcoal Filter, and Holding Tank will get VERY hot (this is normal).**
6. Turn Power Switch OFF and Water Supply to MANUAL (off). Allow to cool 1 hour.
7. Drain any water from Holding Tank.
8. Remove Charcoal Filter Leg. Separate Filter Cap from Filter Body.

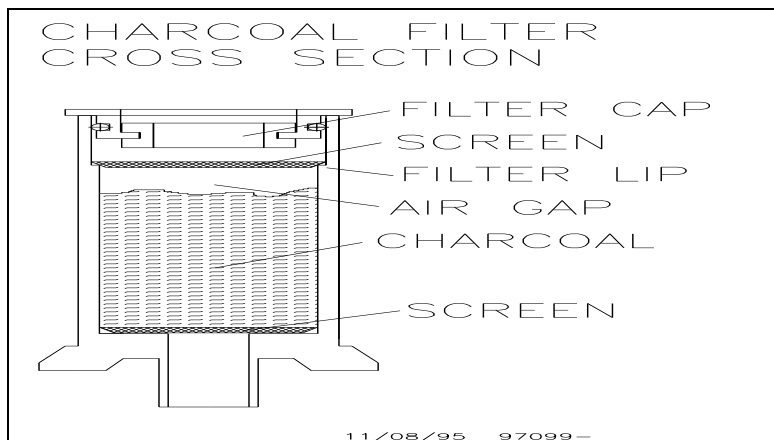

9. Remove top screen.
10. Fill Filter 2/3 full of new coconut charcoal.
11. Place Screen above charcoal by using your


fingers to evenly slide the screen down until it is placed against the Filter Lip.

12. Rinse with water (distilled, if available) until the water runs clear (one or two cupfuls).
13. Press Filter Cap onto Filter Body. To ease installation, moisten grommets on top of Holding Tank and in Filter Cap.
14. Place Filter leg onto Distiller by lifting up corner of distiller to separate it from the Holding Tank. Twist Filter while inserting into grommet in Holding Tank.
15. Tighten Holding Tank Lid until snug.
16. The Distiller is now sterilized and ready to produce distilled water.

Manual Operation

Please go to the next section: 'Automatic Operation' if your distiller is set up for automatic feed.

1. Remove Boiling Tank lid. Fill with water until it touches the bottom of the Water Gauge. **Caution: Filling water above the bottom of the water gauge as shown may allow un-distilled water to flow into the Condensing Coil and into the Holding Tank.**

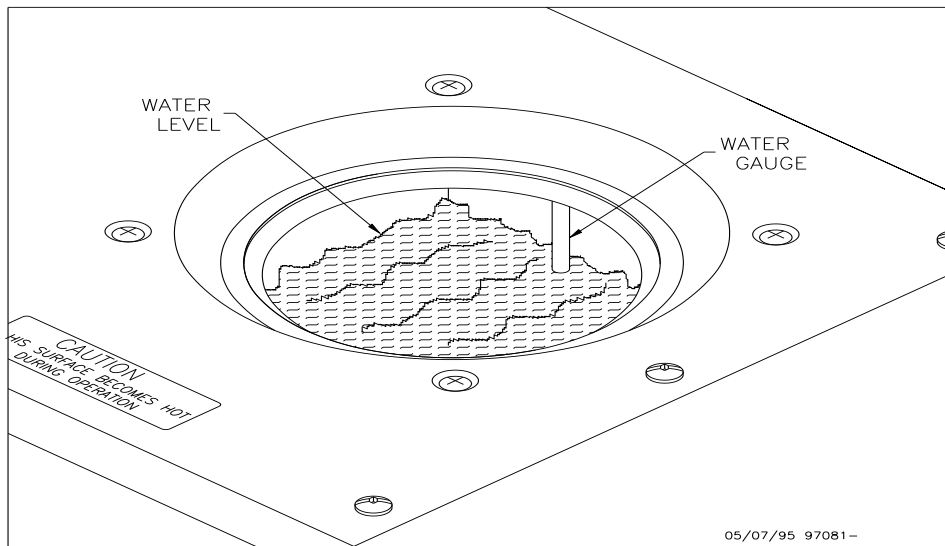

2. Place boiling tank lid onto Distiller and tighten lid knob. Do not over tighten - it only needs to be snug enough to prevent steam from leaking.
3. Turn fan switch to ON position. Water fill switch should be in the MANUAL position.
4. The Distiller will now distill the water into the Holding Tank. Distillation will stop when the Boiler is about 1/3 full (water level is just above Heating Element) or when the Holding Tank is full.

5. When the distiller has stopped, refill the Boiling Tank with water (Caution: Distiller remains HOT for several hours). Fan switch (white) will illuminate only when Distiller is making water. Power Switch (red) will remain on whenever it is turned ON and Distiller is plugged in.
6. To help prevent a concentration of chemicals, pollutants and other material from building up in the Boiling Tank, drain the Boiler Tank after at least every 10 gallons distilled using the Impurities Drain Valve and a Pail.

Automatic Operation

1. Ensure Boiling Tank and Holding Tank lids are on and snug.
2. Turn ON Power, Fan, and Water switches.
3. Water fill switch (blue) will illuminate only when the distiller is filling the boiling tank with water and then it will turn off.
4. Fan switch (white) will illuminate only when Distiller is distilling water.
5. Power switch (red) will be illuminated whenever the distiller is plugged into a power source.
6. Distiller will continually fill Boiling tank and run until the Holding Tank is full.
7. When approximately 1/3 of the distilled water is removed from the Holding Tank, the Distiller will automatically start up to refill the Holding Tank.
8. To help prevent a concentration of chemicals, pollutants and other material from building up in the Boiling Tank, drain the Boiler Tank after at least every 10 gallons distilled using the Impurities Drain Valve and a Pail. Alternatively, this can be done automatically with an optional electronic Auto-drain (see section on Supplies & Accessories).

This page intentionally left blank.

Maintenance

With proper care, your Polar Bear Water Distiller should give you years of trouble free distilled water. Regular maintenance will help ensure that your Distiller will provide top quality distilled water.

Cleaning the Boiling Tank

The most important aspect of Distiller maintenance is keeping the Boiling Tank free from the build-up of contaminants and scale. These impurities removed from the water during distillation collect inside the Boiling Tank.


To remove these impurities:


1. After every 10 gallons distilled, drain the boiling tank with the Impurities Drain Valve into the drain or a pail. This step is not necessary when an Auto-Drain is installed, however, you must still check the condition of the boiler as in the next step:
2. Every two weeks or 50 gallons distilled, and when Distiller is cool, observe the inside of boiler (remove Boiling Tank Lid). Walls of boiler and especially the heating element should be relatively clear of scale (less than 1/8" build up). If build up is excessive, use the following procedure: **'Cleaning - Using P.B.W.D. Cleaner and Descaler'**.
 - When cleaning we recommend that you use our industrial cleaner, **P.B.W.D. Cleaner & Descaler**. A sample is included with every new Distiller.
 - *Do not use an abrasive cleaner or steel wool cleaning pads.* Plastic pads may be used.
 - The sample of the Descaler enclosed with the distiller should last for approximately six cleanings.

Cleaning the Boiling Tank - Using P.B.W.D. Cleaner and Descaler

This procedure requires the use of our Cleaner and Descaler – a corrosive and poisonous substance. Read safety precautions on package before proceeding.

1. Turn the Power Switch to the OFF position. Allow Distiller to cool.
2. Remove the Boiling Tank Lid.
3. Drain the Boiling Tank by opening Impurities Drain Valve (or pressing Manual Drain Switch on Auto-Drain). Rinse and drain.
4. Remove all loose scale build-up, if any, inside the Boiling Tank.
5. Close the Drain Valve (or release Manual Drain switch on Auto-Drain).
6. Remove Charcoal Filter and install Sterilization Drip Tube as shown.
7. Fill the Boiling Tank half-full of tap water (preferably hot from a kettle).
8. **SLOWLY** add 3 level tablespoons of P.B.W.D. Cleaner and Descaler.
9. Mix well to dissolve the cleaner.

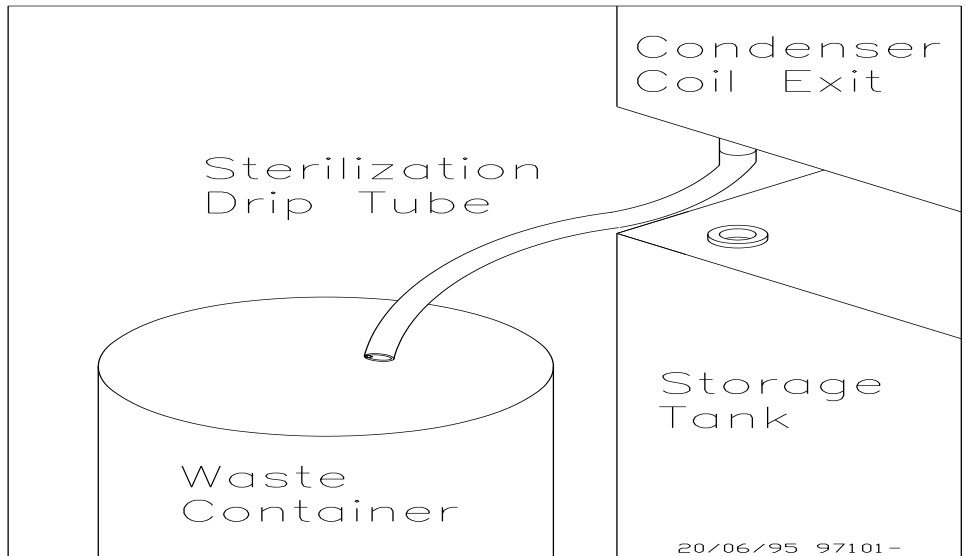

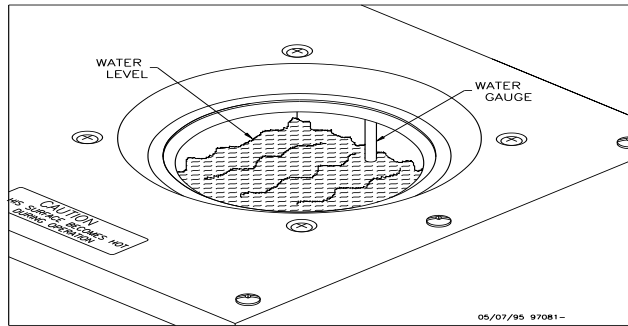

10. Fill Boiling Tank with hot water to bottom of Water level gauge only. *Do not over-fill boiling tank!*

11. Let solution stand overnight, or until mineral content softens. Leave *boiling*


tank lid open during cleaning so that Descaler fumes do not enter the cooling (Condensing) coil.


12. The next morning, or when mineral content is soft, drain the Boiling Tank. Repeat cleaning if necessary.
13. Rinse Boiler **THOROUGHLY** using warm tap water: Fill the Boiler with water to bottom of Water Level Gauge, stir gently, drain. Repeat several times.
14. Replace Boiling tank lid.
15. Ensure Sterilization Drip Tube is on Distiller as shown.
16. Turn on Power Switch, set the Fan switch to STERILIZE.
17. Allow the Distiller to run 30-40 minutes. Steam will escape into the waste container.
18. Replace Charcoal Filter, first replacing charcoal if necessary (see section: Charcoal Replacement).
19. The Distiller is now cleaned, and ready to produce distilled water.

Charcoal Replacement

Replace charcoal in filter every two months or every 100 gallons of distilled water.

1. Remove Charcoal Filter.
2. Over a sink, remove top cap and top stainless steel screen. Empty charcoal from filter and rinse.
3. Fill filter 2/3 full of new coconut charcoal.
4. Place Screen above charcoal by using your fingers to evenly slide the screen down until it is placed against the Filter Lip.
5. Rinse with water (distilled, if available) until the water runs clear (one or two cupfuls).
6. Press filter cap onto filter body.
7. Replace charcoal in filter every two months or every 100 gallons of distilled water.

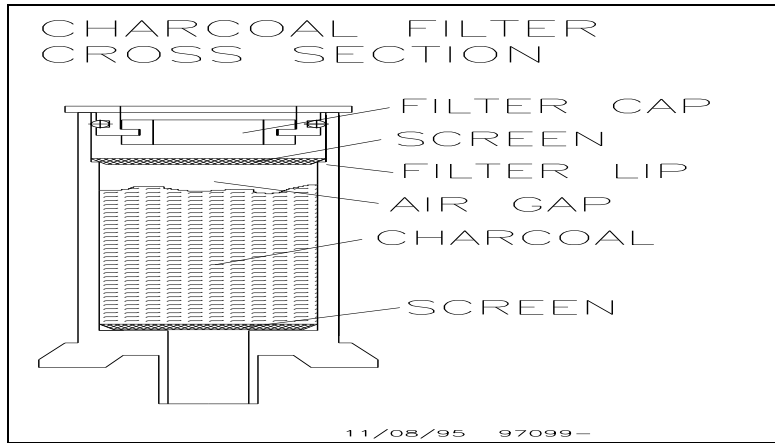

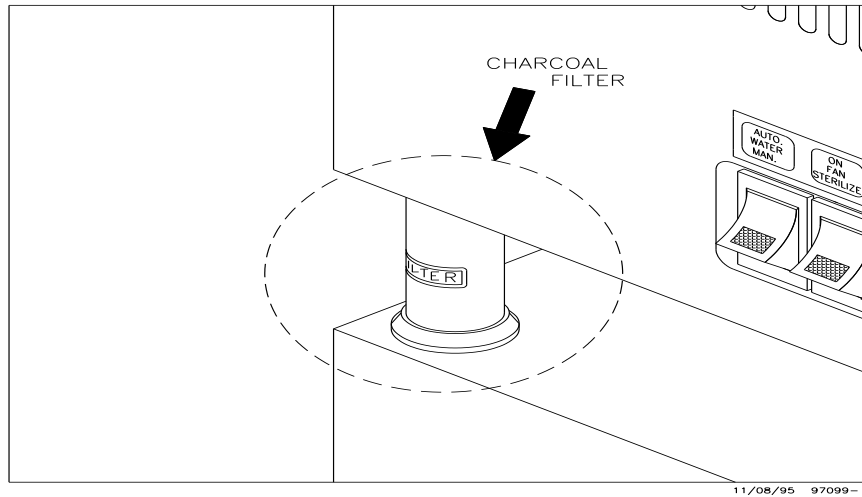

8. Place Filter leg onto Distiller by lifting up corner of distiller to separate it from the Holding Tank. Twist Filter while inserting into grommet in Holding Tank.

External Charcoal Filter Replacement



External Charcoal Filters are replaced depending on the volume of water used. Refer to the instructions provided with the Charcoal Filter.

Sediment Filter Replacement

Sediment Filters are replaced depending on the volume of water used, and the quality of raw water supply. Refer to the instructions provided with the Sediment Filter.

Air Filter Replacement

Replace the Air Filter on the Holding Tank Lid every six months.

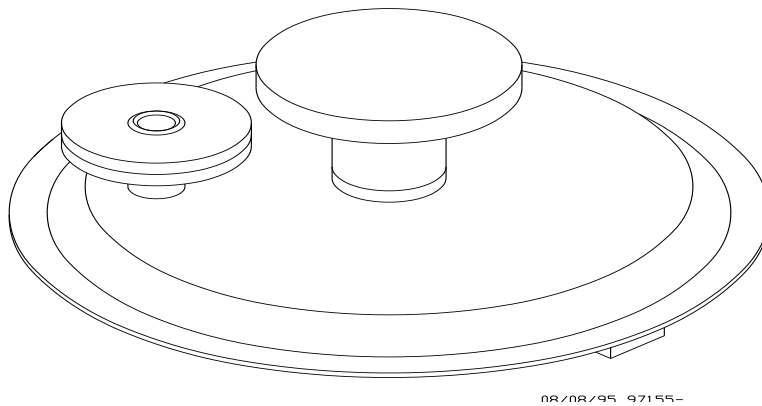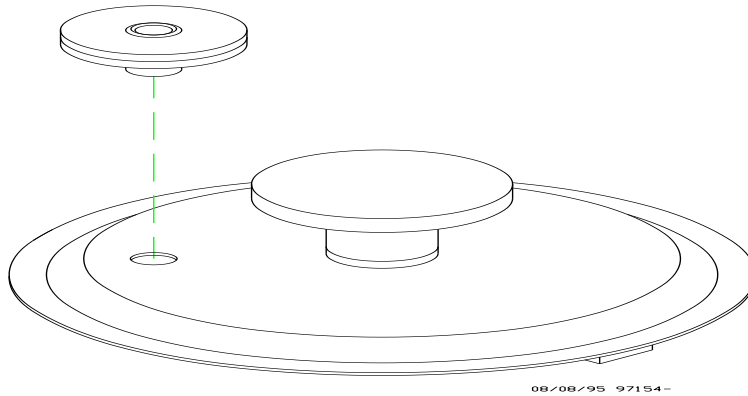

1. Remove Holding Tank Lid.
2. Pull out Air Filter while turning gently.
3. Press new Air Filter gently into hole in Holding Tank Lid.
4. Replace Holding Tank Lid onto Holding Tank.

Steam Sterilization

This procedure should be performed whenever you wish to clean the Holding Tank of your Distiller, after any maintenance, or if there are any problems with the quality of your distilled water.

Before Sterilization:

IF DISTILLER BOILING TANK HAS JUST BEEN CLEANED WITH P.B.W.D. CLEANER AND DESCALER, ENSURE BOILER TANK HAS BEEN RINSED AND THAT DISTILLER HAS BEEN CLEANED WITH THE STERILIZATION DRIP TUBE AS DESCRIBED IN THE PROCEDURE: 'CLEANING - USING P.B.W.D. CLEANER AND DESCALER'


To prepare your Distiller for Steam Sterilization:

1. Ensure Boiler tank is clean – see section: Cleaning.
2. Place **EMPTY** charcoal filter on Distiller.
3. Drain Holding Tank.

Performing Steam Sterilization:

1. Fill the Boiling Tank 2/3 full with water (manually with pail, or automatically by turning on Power and Water switches for a minute until Water Supply switch is not illuminated).
2. Ensure the Boiling Tank Lid is back on and snug.
3. Loosen, but do not remove Holding Tank Lid to allow steam to escape.
4. Turn ON the Power switch, and set the Fan switch to the STERILIZE position. The Water switch can remain AUTOMATIC if you have installed the Water Feed line.

5. Allow the distiller to run 30-40 minutes (or until the Distiller shuts itself off – manual fill). **WARNING: The Distiller, empty Charcoal Filter, and Holding Tank will get VERY hot (this is normal).**
6. Turn Power Switch OFF and Water Supply to MANUAL (off). Allow to cool 1 hour.
7. Drain any water from Holding Tank.
8. Remove Charcoal Filter Leg. Separate Filter Cap from Filter Body.

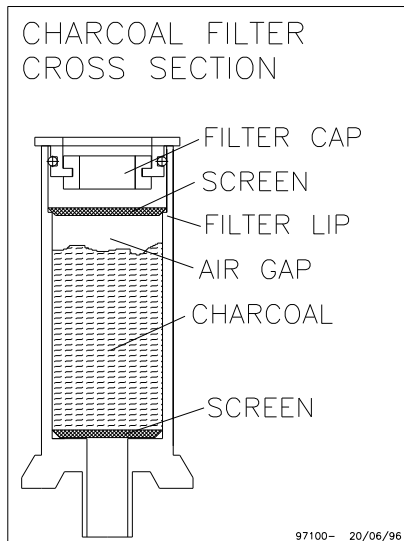

9. Remove top screen.
10. Fill Filter 2/3 full of new coconut charcoal.
11. Place Screen on top of charcoal by using your fingers to evenly slide the screen until it is placed firmly against the charcoal.
12. Rinse with water (distilled, if available) until the water runs clear (one or two cupfuls).
13. Press Filter Cap onto Filter Body. To ease installation, moisten grommets on top of Holding Tank and in Filter Cap.
14. Place Filter leg onto Distiller by lifting up corner of distiller to separate it from the Holding Tank. Twist Filter while inserting into grommet in Holding Tank.
15. Tighten Holding Tank Lid until snug.
16. The Distiller is now sterilized and ready to produce distilled water.


Boiler Float Gasket

The Boiler Float inside the Distiller has a gasket on the wall of the Boiler to seal in water. Since the Boiler is subject to high temperatures for long periods of time, this gasket will require replacing every three to five years.

Inspection of this gasket should be done every month or two – inspecting during cleaning is an excellent time!

Inspect the Boiler Float Gasket:

1. Turn OFF Distiller and unplug.
2. When Distiller is cool, remove Boiler Tank Lid. Looking inside the Boiler Lid hole from the rear of the Distiller towards the front, you will see the following:

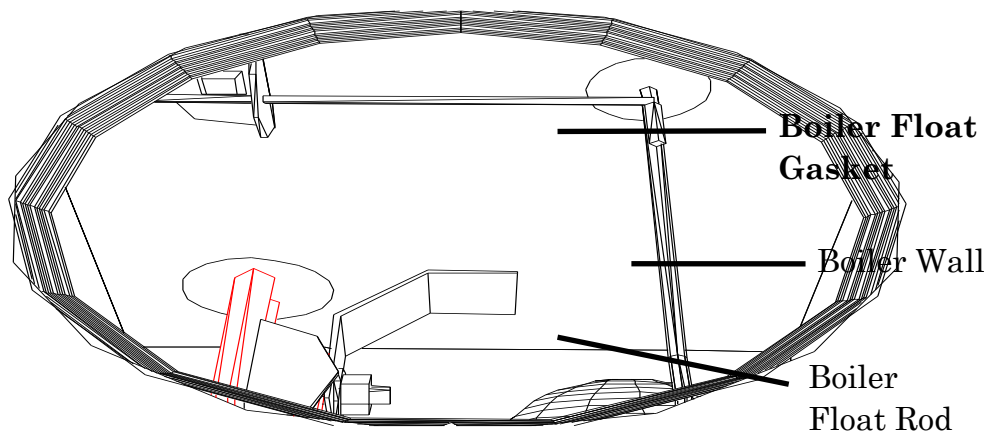

3. Look for float and rod connecting it to boiler wall (towards front of Distiller inside boiler).
4. You will see where Boiler Float rod passes through Boiler wall. On boiler wall you will be able to see or feel the Boiler Float Gasket.

5. Gasket should feel pliable and should not appear to be cracked or have any visible holes.

Should Gasket require replacing, contact your dealer. Polar Bear recommends that gasket replacement be done by qualified personnel only.

Troubleshooting

Problem: Water tastes 'funny'.

- Causes:**
1. Storage container needs to be cleaned or changed – especially if distilled water is drawn from Distiller and cooled in a fridge.
 2. Boiling Tank is badly scaled with impurities – see section on Maintenance, Cleaning.
 3. Auto-Drain has malfunctioned. Check Boiling tank for scale build up – see section on Maintenance, Cleaning.
 4. Boiling Tank has overfilled: Open Boiler Tank and observe that Boiler water level is below water gauge. If water level is to top of Boiler, Boiler Float mechanism has failed and undistilled water has flowed into Holding Tank.
 5. If water is spilling out onto the floor, and Boiler Tank is also overfilled, the Water Solenoid is defective and needs replacement.
 6. Boiling tank may have been overfilled during cleaning, or cleaning procedure was not completed. This can allow dissolved solids to pass through the Condenser and into the Holding Tank. Drain the Holding Tank, rinse, and follow the Sterilization procedure in the section on Maintenance.

Problem: Boiling tank will not fill with water automatically.

- Causes:**
1. Water Fill switch is turned to MANUAL or Power switch is OFF.
 2. The Saddle Valve is turned off.
 3. Check for kinks in the Direct Feed Line.
 4. Float inside the Boiling Tank may be stuck.
 5. If the Distiller is buzzing (calling for water) then the water supply is plugged. Turn off the water (saddle valve) and disconnect Direct Feed Line from Distiller. Momentarily turn on water – if water flows out of Direct Feed Line problem is in Distiller. If no water flows, attempt to clear saddle valve by closing completely and reopening.
 6. Ensure water feed opening inside boiler is not scaled over.

Problem: **Boiling Tank is getting water but not filling or holding water & Distiller has Auto-Drain installed.**

Causes: 1. Solenoid Drain Valve is stuck open or is defective: Attempt to clear valve by depressing Manual drain switch several times. Valve should be heard every time it is cycled.

Problem: **Fan Operates, little or no water is distilled.**

Causes: 1. Boiler Tank Lid is loose or Boiler Tank Lid Gasket requires replacement.
2. Heating element may be defective.
3. Reset button may be defective.
4. Water supply plugged. See: Boiling Tank will not fill...

Problem: **Distiller does not operate.**

Causes: 1. Main Power switch on Distiller is OFF position.
2. Distiller is not plugged in securely or circuit breaker is OFF.
3. Reset button needs to be reset. Distiller must be cool before the button can be reset. This reset button is for your safety. It is designed to stop all operation should the distiller overheat. This will happen if the water level gets too low in the boiling tank. If at any time the reset button needs resetting, it indicates that the float switch mechanism may need adjusting.
4. Reset button may need replacing.

Problem: **Fan does not operate automatically.**

Causes: 1. Fan switch is in the STERILIZE position.
2. Fan motor may be defective.
3. Holding tank is full – Distiller has shut itself off.

Problem: Steam escapes through charcoal filter or Charcoal Filter is extremely hot.

- Causes:**
1. Fan switch is in the STERILIZE position.
 2. Fan may have dropped on the motor shaft preventing proper cooling. Steam will be produced through condenser coil instead of water.
 3. Condensing Coil may have moved down onto Fan Blade.
 4. Fan motor may be defective.

Problem: Steam or water escapes from volatile gas release vent on top of distiller.

- Causes:**
1. The condensing coil has one small hole drilled in the top, located inside the Distiller at the center rear (facing the Distiller). This hole is not a defect, but rather it is provided to release certain volatile gases. Should some steam escape from this hole, there is no cause for concern.

Problem: Water is overflowing from the Charcoal Filter.

- Causes:**
1. Charcoal filter is more than 2/3 full of charcoal. Ensure there is a small air gap between charcoal and top Filter Screen.
 2. Charcoal is old and 'caked up'. replace with new charcoal.
 3. Charcoal Filter grains are too fine. Use Polar Bear charcoal to ensure correct grain size.
 4. Water solenoid is stuck open.

Problem: Loud noises occur in my water pipes whenever the Distiller fills with water, or
Water light flashes on & off rapidly due to a bouncing float in Boiler Tank.

- Causes:**
1. Water flow through Direct Feed Line is too great: Turn down Saddle Valve so that water flows slower into boiler. Water light should come on for 15-30 seconds at a time.

**Should problems arise that are not covered in this guide,
please contact your local qualified Polar Bear service person.**

This page intentionally left blank.

Water Testing Program


In a continuing effort to provide the purest drinking water possible, Polar Bear is proud to offer you a water testing program. Choosing to be part of this program will ensure your investment runs trouble free and you receive the quality of water promised. The Polar Bear testing program is available through all of our distributors across Canada and the USA and where all products are sold Internationally. By sending a distilled water sample in at least every six months for analysis, Polar Bear can determine whether your machine is operating properly or if it may require cleaning or repair.

A water sample bottle is enclosed with your Polar Bear Water Distiller as well as a bubble-pack envelope.

Please follow the following procedure:

1. Ensure sample bottle is clean and free of debris as well as structurally intact (no holes or leaks).
2. The charcoal filter must first be removed. (see owners manual; use **caution** as canister may be hot) Attach sterilization drip tube to nipple. Run the tube into the small water bottle until 3/4 full. Do not completely fill the bottle. Leave some room in bottle for water expansion in case of freezing temperatures during shipping.(see illustration on next page) Place charcoal filter back on unit following procedure.
3. Firmly screw top on sample bottle and place bottle in bubble pack envelope.
4. Send package to your local authorized Polar Bear Dealer, Polar Bear head office or Polar Bear USA. Please ensure that a return name and address is clearly marked so that the test results and a new Water sample kit can be sent to you. Enclose appropriate payment and send package prepaid by mail or courier.

5. Results of the water test will be sent to you within approximately three weeks. Along with the results, a new water sample kit will arrive in the mail. If you would like your water sample analysis to be sent via fax then please indicate on form with kit.

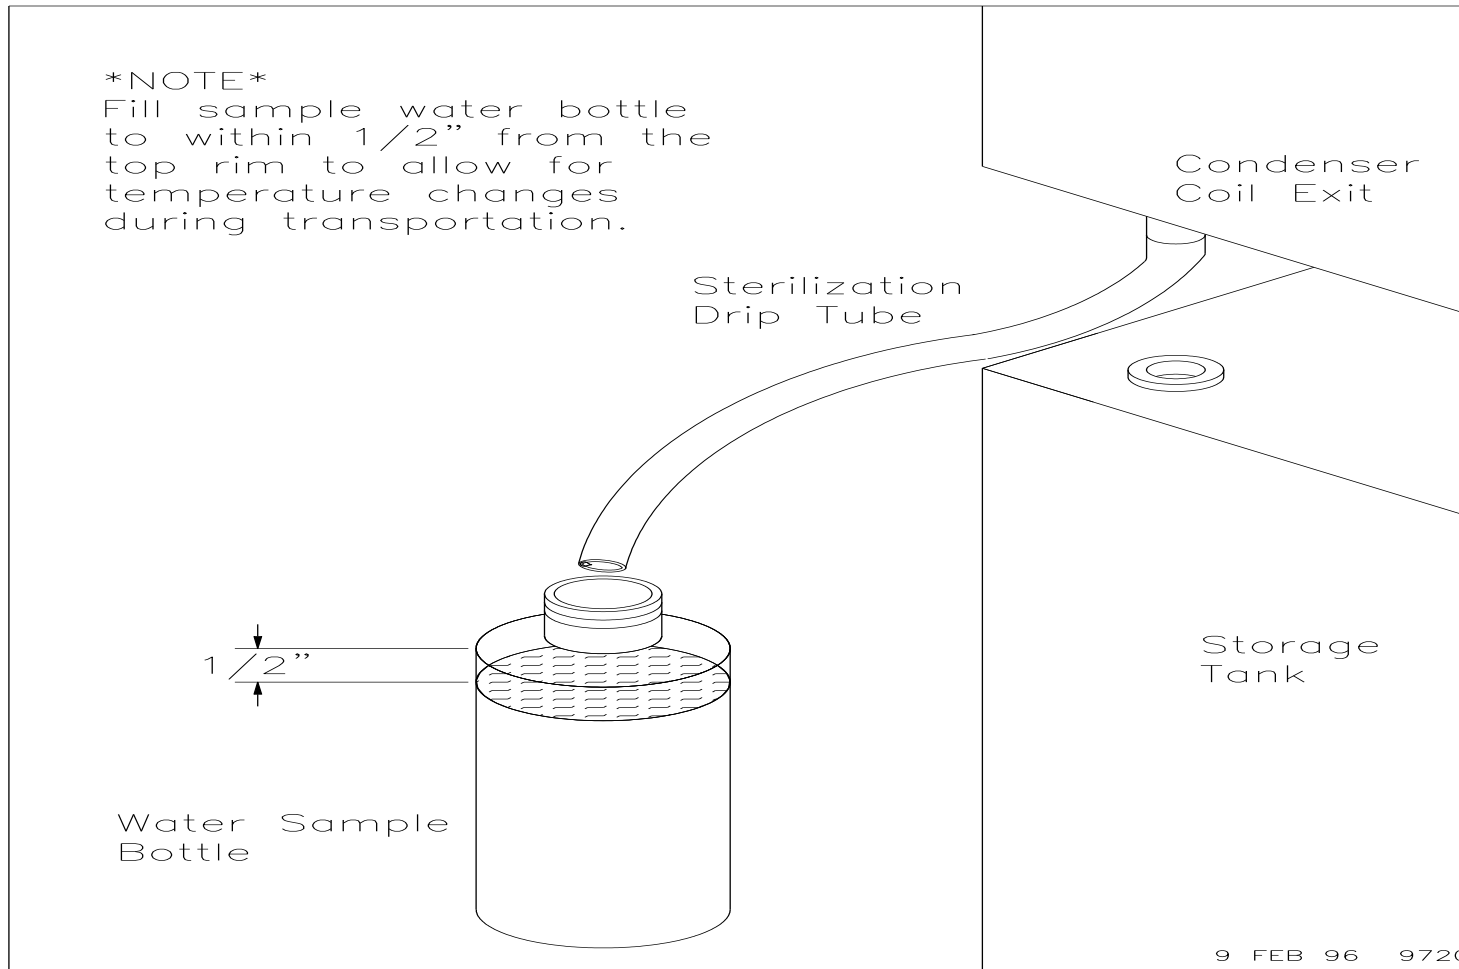

Note: This service is in accordance with NSF (National Sanitation Foundation) Standard 62, Drinking Water Distillation Systems, and must be completed at least once every six months.



Supplies & Accessories

P.B.W.D. CLEANER & DESCALER

Not only for the Distiller Boiling Tank, use wherever scale is a problem: In water distillers, coffee pots, dishwashers, humidifiers and most metal products. Two to three tablespoons per gallon of water does the job! More Descaler may be used if scale build-up is excessive. Available in 600 gram or 1.2 kg jars.

REPLACEMENT COCONUT CHARCOAL

Activated coconut charcoal has the ability to absorb over 50% its own weight in gases and odors. Non-toxic. The coconut charcoal will not breed bacteria, as only distilled water passes through the filter. Made from 100% pure coconut shells. *Do not use aquarium charcoal!* Available in 250 gram and 500 gram jars.

POLAR BRITE STAINLESS STEEL POLISH

An odorless liquid polish for stainless steel. Use on outside surfaces of your Distiller.

PUMP AND FAUCET KIT

Provides a convenient source of distilled water directly from your distiller to a tap in the kitchen. Pump can also be connected to ice makers, water dispensers, and humidifiers.

AUTO-DRAIN KIT

An electronic Auto-drain provides automatic draining of your Boiling Tank. Can be set to drain in 3, 6, 12, or 24 hour intervals depending on the total dissolved solids content in your particular source water. An Auto-Drain does **not** clean the Boiling tank, but it does make cleanings easier and less frequent.

OPTIONAL DISTILLER STAND

This attractive stand with it's steel construction allows your counter top 26-CT to become a floor model distiller. The stand also allows your distiller the ability to accept our Auto-drain and Pump options. Another feature of the stand is it's accessibility for filling up an optional 5 gallon water bottle which can be used in your home or office water cooler.

PLASTIC 5 GALLON BOTTLE (c/w handle and screw top lid)

This bottle provides easy transport of distilled water and fits into the top of available water coolers.

SEDIMENT FILTERS


Sediment filters help prevent the plugging and/or jamming of Water Solenoid Valves.

EXTERNAL CHARCOAL FILTERS

External Charcoal Filters have a greater capacity than the standard Charcoal Filter supplied with your Distiller. They require changing less often, and are well suited for high volume installations.

WATER COOLER

Water coolers are available through your water distiller dealer. They are available in room temperature, cold only, cook and cold, and hot & cold models.

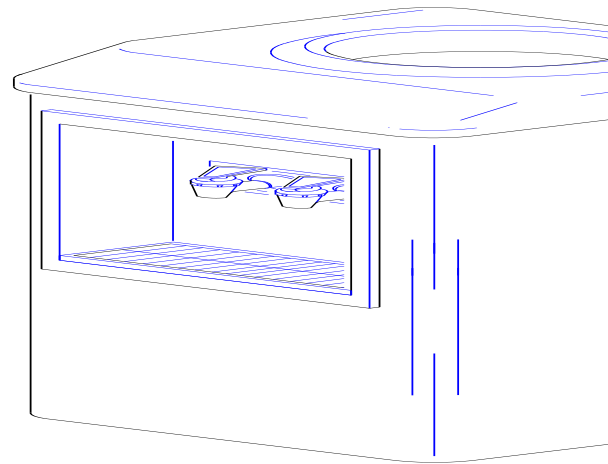

1 4 / 08 / 95 971

Technical Information

The following information can be used for repairing the Distiller, and when contacting your Polar Bear dealer to order replacement parts.

WARNING:

There are exposed high voltage and high temperature areas inside the water Distiller. Do not operate while covers are removed. Repairs must be made by qualified personnel only.

Wiring List

Main Wiring


1	100316	ORG	16	16.5	419	F/M PIN 60014	PIGG 60016	CONN #1	MAIN PWR SW #B
2	100317	YLW	16	19	483	F/M PIN 60014	F250 60001	CONN #3	RELAY #6
3	100318	BLK	16	19	483	F/M PIN 60014	PIGG 60016	CONN #4	RELAY #B
4	100319	WHT	16	7	178	F/M PIN 60014	PIGG 60016	CONN #5	WATER SOLENOID B
5	100320	GRN	16	4	102	F/M PIN 60014	RING 60002	CONN #6	GROUND STUD
6	100321	BLK	16	3	76	F250 60001	F250 60001	RELAY #9	RELAY #B
7	100322	BLU	16	3	76	PIGG 60016	PIGG 60016	WATER SW #D	FAN SW #D
8	100323	BLU	16	3	76	PIGG 60016	F250 60001	PWR SW #D	FAN SW #D
9	100324	BLU	16	10	254	PIGG 60016	F250 60001	RELAY #A	WATER SW #D
10	100325	ORG	16	5	127	SPADE 60012	F187 60011	RESET #1	BOT MSW #C (Water)
11	100326	BLK	16	6	152	F187 60011	SPADE 60012	TOP MSW #NC(Heater)	HEATER #A
12	100327	BLK	16	12.5	318	SPADE 60012	F250 60001	HEATER #A	FAN SW #B
13	100328	BRN	16	16	406	F187 60011	F250 60001	BOT MSW #NC (Water)	WATER SW #B
14	100329	YLW	16	19	483	F250 60001	F250 60001	WATER SW #C	WATER SOLENOID A
15	100330	WHT	16	17.5	445	SPADE 60012	PIGG 60016	RESET #4	WATER SOLENOID B
16	100331	BLU	16	3.5	89	SPADE 60012	SPADE 60012	HEATER #B	RESET #3
17	100332	BLU	16	12.5	318	SPADE 60012	F250 60001	RESET #3	RELAY #A
18	100333	YLW	16	8	203	SPADE 60012	F187 60011	RESET #1	TOP MSW #C (Heater)
19	100334	RED	16	9.5	241	F250 60001	F250 60001	MAIN PWR SW #C	RELAY #4
20	100335	ORG	16	11.5	292	F250 60001	SPADE 60012	RELAY #7	RESET #2
21	100531	ORG	16	9	229	BUTT 60019	PIGG 60016	AUTODRAIN RIBBED 7"(178mm)	MAIN PWR SW #B
22	100531		18				SPADE 60012	AUTODRAIN SMOOTH 7" (178mm)	HEATER #B
23	100532(110V) 100533(220V)		18				F250 60010	FAN 6"(152mm)	FAN SW #C
24	100532(110V) 100533(220V)		18				F250 60010	FAN 6" (152mm)	PWR SW #D
25	60003		16				F250 60001	PWR CORD BLK 15.5"(394mm)	MAIN PWR SW #B
26	60003		16				F250 60001	PWR CORD WHT 5.5"(140mm)	WATER SOLENOID #B
27	60003		16				RING 60002	PWR CORD GRN 3"(76mm)	GROUND STUD

Switch Box

1	100372		18			F187X 60028	AUTODRAIN SMOOTH 6.5"(165mm)	PUMP SHUTOFF SW (No)
2	100372		18			FLAG 60031	AUTODRAIN RIBBED 2.5"(64mm)	FUSE SIDE TERMINAL
3	100338	WHT	16	11.5	292	FLAG 60023	F187X 60058	FUSE END TERMINAL
4	100339	WHT	16	3.5	89	F187X 60058	(same)	UPPER LEVEL MSW (C)
5	100336	WHT	18	8	203	(same)	M PIN 60015	(same)
6	100336	BLK	18	9	229	M PIN 60015	F187 60061	CONN #4
7	100336	RED	18	8	203	M PIN 60015	F187 60061	CONN #3
8	100336	BLU	18	8.5	216	M PIN 60015	F187 60061	CONN #5
9	100336	GRN	18	2	51	M PIN 60015	RING 60020	CONN #6

PART #	DESCRIPTION	60030	Ring, #10, 10-12 AWG
60001	Receptacle, F250, 14-16 AWG	60031	Receptacle, F250, FLAG, 18-22 AWG
60002	Ring, #10, 14-16 AWG	60032	Tab, F250, 14-16 AWG
60010	Receptacle, F250, 18-22 AWG	60033	Ring, 1/4", 14-16 AWG
60011	Receptacle, F187, 14-16 AWG	60034	Ring, #6, 14-16 AWG
60012	Spade, #10, 14-16 AWG	60050	Tab, F250, 18-22 AWG
60013	Receptacle, F250, PIGGI, 18-22 AWG	60056	Receptacle, F250, 18-22 AWG,large opening
60014	Pin, Female	60057	Receptacle, F250, 10-12 AWG
60015	Pin, Male	60058	Receptacle, F187, 14-16 AWG,large opening
60016	Receptacle, F250, PIGGI, 14-16 AWG	60059	Tab, F250, 18-22 AWG, large opening
60019	Butt Splice, 14-16 AWG	60060	Ring, #10, 18-22 AWG
60020	Ring, 1/4", 18-22 AWG	60061	Receptacle, F187, 18-22 AWG
60023	Receptacle, F250, FLAG, 14-16 AWG	60062	Ring, #6, 18-22 AWG
60028	Receptacle, F187, 18-22 AWG,large opening	60025	Butt Splice, 18-22 AWG


Wiring Diagram

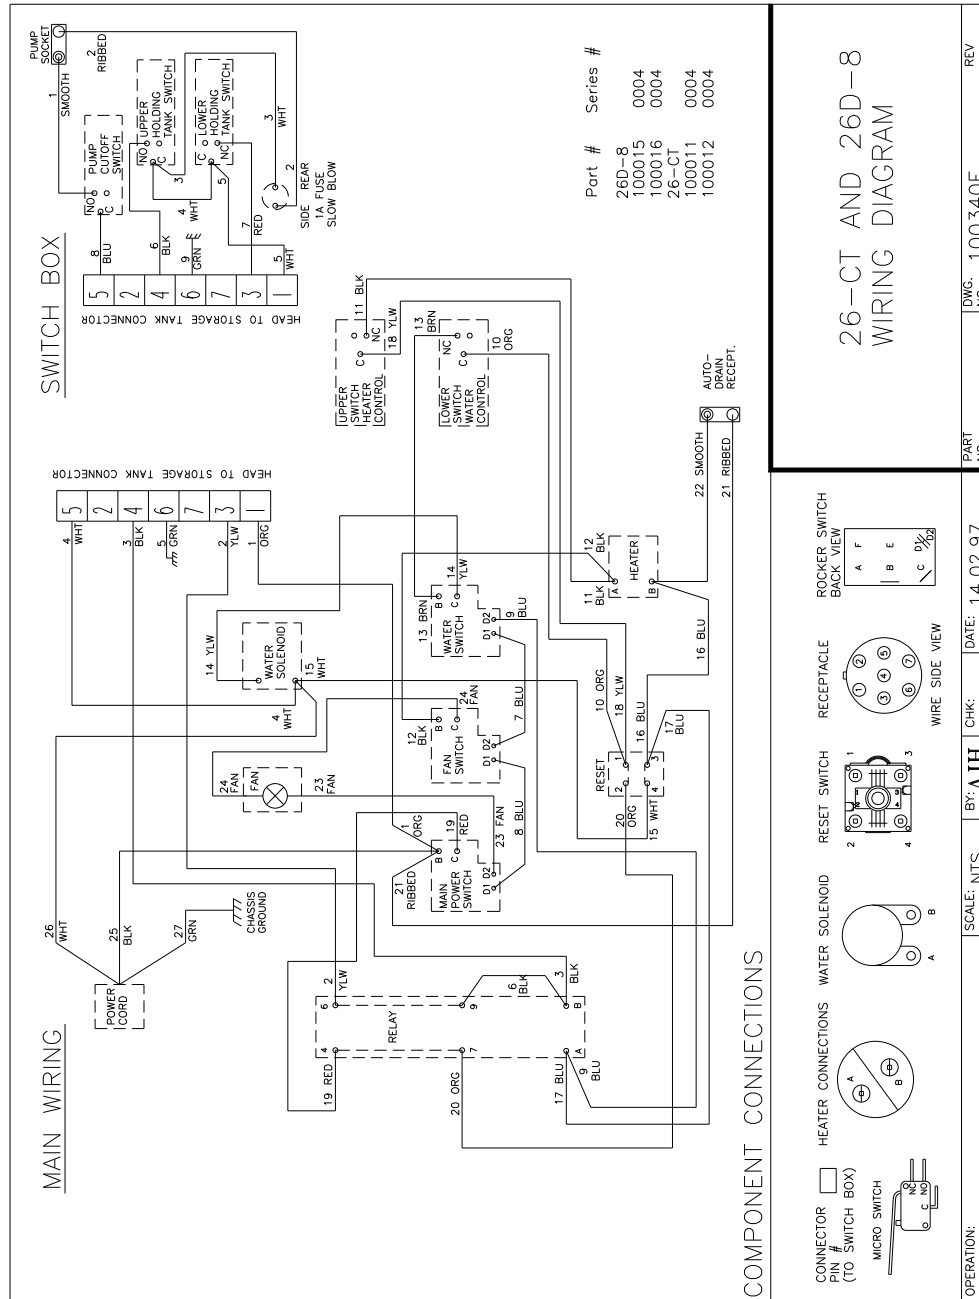

Parts List: Head Assembly

Line	Qty	Item	Description
1	1	100420	FRONT COVER, SERIES 3, 26-CT
2	1 EA	102092	SWITCH,ROCKER,RED,SPST120 220V
3	1 EA	102093	SWITCH,ROCK,CLR,SPST120 220V
4	1 EA	102094	SWITCH,ROCK,BLU,SPST120 220V
5	10 EA	80004	RIVET, ALUMINUM, 1/8"X5/16"
6	1	100215	DIVIDER, MIDDLE, D8, CT
7	1 EA	30008	ELBOW, 90DEG, 3/8"BARB-1/8"MPT
8	1 EA	100129	RELAY, 120V 15A
9	4	15101	WASHER,FLAT,ALUM,0.140x3/8"
10	1	100501	ASSEMBLY, SOLENOID VALVE, 120V
11	2 EA	15505	NUT,KEP #8-32
12	1	100532	FAN MOTOR ASSM,120V,D-8/CT
13	1 EA	100088	FAN,BLADE,ALUMINUM, 7"
14	1	100226	CONDENSOR COIL, 26CT, D8, C8
15	1	30002	NUT, COMPRESION,PLTD. BRASS
16	1 EA	30003	SLEEVE,COMPRESSION,3/8"
17	1	100412	COVER, TOP/BACK, 26CT, D8,
18	1	100302	B.T. T-BAR ASSEM
19	1 EA	100069	SPRING, B.T. LID
20	1	100070	LID DISC, B.T. S.S.
21	1 EA	100205	ORING,RUBBER,1/2"IDx11/16"OD
22	1 EA	100071	KNOB,LID,PLASTIC STAMPED
23	4 EA	10123	SCREW,SS,#10-24X3/8"OVAL HEAD
24	13 EA	10109	SCREW,SHTMTL,SS,#10-12x1/2"
25	1	100528	B.TANK ASSY,26AUTO,125V,S3
26	1	15102	WASHER,FLAT,ALUM,7/8x1-1/2"
27	1	100428	UNIVERSAL LEXAN SWITCH PLATE
28	4	15003	WASHER, FLAT,S.S.,5/16"X11/16"
29	4 EA	10105	SCREW, MACH,RND,SLOT,#4-40X3/4
30	1 EA	100122	SWITCH,BOILER TANK RESET
31	1	100119	PLATE-B.T.-LEXAN-RESET
32	3 EA	15502	NUT,HEX,1/4",PLATED
33	2 EA	60004	MICROSWITCH,B.T. FLOAT
34	4 EA	15504	NUT,KEP,#4-40
35	1 EA	100124	CONNECTOR, 7 PIN RECEPTACLE
36	1	100414	BODY, 26-CT, SERIES 3
37	1 EA	100079	VALVE,ANGL STP,1/2"FPT-3/8COMP
38	1 EA	30003	SLEEVE,COMPRESSION,3/8"
39	1	30002	NUT, COMPRESION,PLTD. BRASS
40	1	100152	TUBE-DRAIN-B.T-E1,M,14,CT
41	2 EA	10105	SCREW, MACH,RND,SLOT,#4-40X3/4
42	1 EA	80061	STRAIN RELIEF 7K2
43	1	60003	POWER CORD SET 16/3 SJTW 105C
44	3 EA	10124	BOLT,PLTD,HEX,5/16"X 1/2"
45	3 EA	15011	WASHER,FLAT,7/8",PLTD
46	3	100530	26-CT LEG COMPLETE ASSEMBLY
47	1	100531	26D FEMALE AUTODRAIN PLUG
48	2 EA	15504	NUT,KEP,#4-40
49	1 EA	10103	SCREW,MACH,SS,TRS/SKT#10-24X1"
50	3 EA	15503	NUT,KEP.#10-24
51	1	100081	CLIP, CONDENSER, ALUM, SECT.
52	2 EA	10109	SCREW,SHTMTL,SS,#10-12x1/2"
53	1	100080	CLIP, CONDENSER, S.S., SECT.
54	1 EA	100146	BUSHING,SNAP,NYLON,1.25"HOLE
55	1	100529	B.TANK ASSY,26AUTO,220V,S3
56	1	100526	ASSEMBLY, SOLENOID VALVE, 220V
57	1 EA	100128	RELAY, 220V 15A
58	1	100533	FAN MOTOR ASSM,220V,D-8/CT


Parts Diagram: Head Assembly

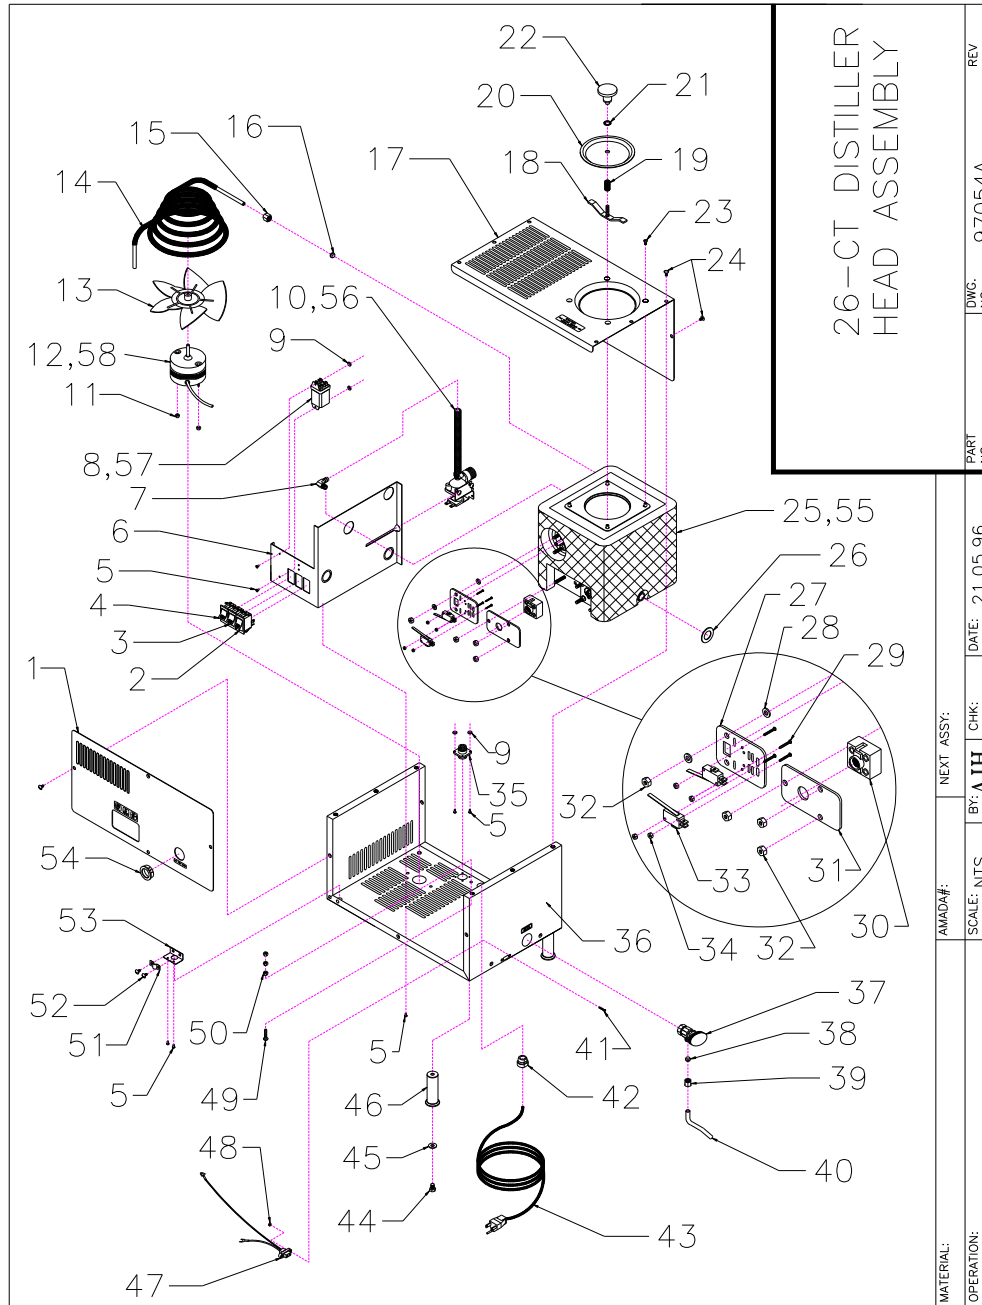

Parts List: Float Box Assembly

Line	Qty	Item	Description
1	1	100159	COVER-H.T.-LEVEL CONTROL D8/C8
2	2 EA	10107	SCREW,SHTMTL,SS,10-12X1/4BPT
3	4 EA	15504	NUT,KEP,#4-40
4	4 EA	10105	SCREW, MACH,RND,SLOT,#4-40X3/4
5	1 EA	60017	MICROSWITCH,SHORT ARM
6	2 EA	10105	SCREW, MACH,RND,SLOT,#4-40X3/4
7	1	100158	BOX-H.T.-LEVEL CONTROL D8/C8
8	1 EA	80061	STRAIN RELIEF 7K2
9	1	100337	FLOAT BOX HARNESS W/PLUG
10	1 EA	100161	FUSE, 1 AMP SLOW BLOW
11	1 EA	100160	FUSE,HOLDER,CHASSIS,15 AMP
12	2 EA	10105	SCREW, MACH,RND,SLOT,#4-40X3/4
13	1	100372	WIREASS,PUMP RECEPT ASSM,26D
14	2 EA	15504	NUT,KEP,#4-40
15	2 EA	15504	NUT,KEP,#4-40
16	1	100428	UNIVERSAL LEXAN SWITCH PLATE
17	2 EA	60005	MICROSWITCH,H.T. FLOAT


Parts Diagram: Float Box Assembly

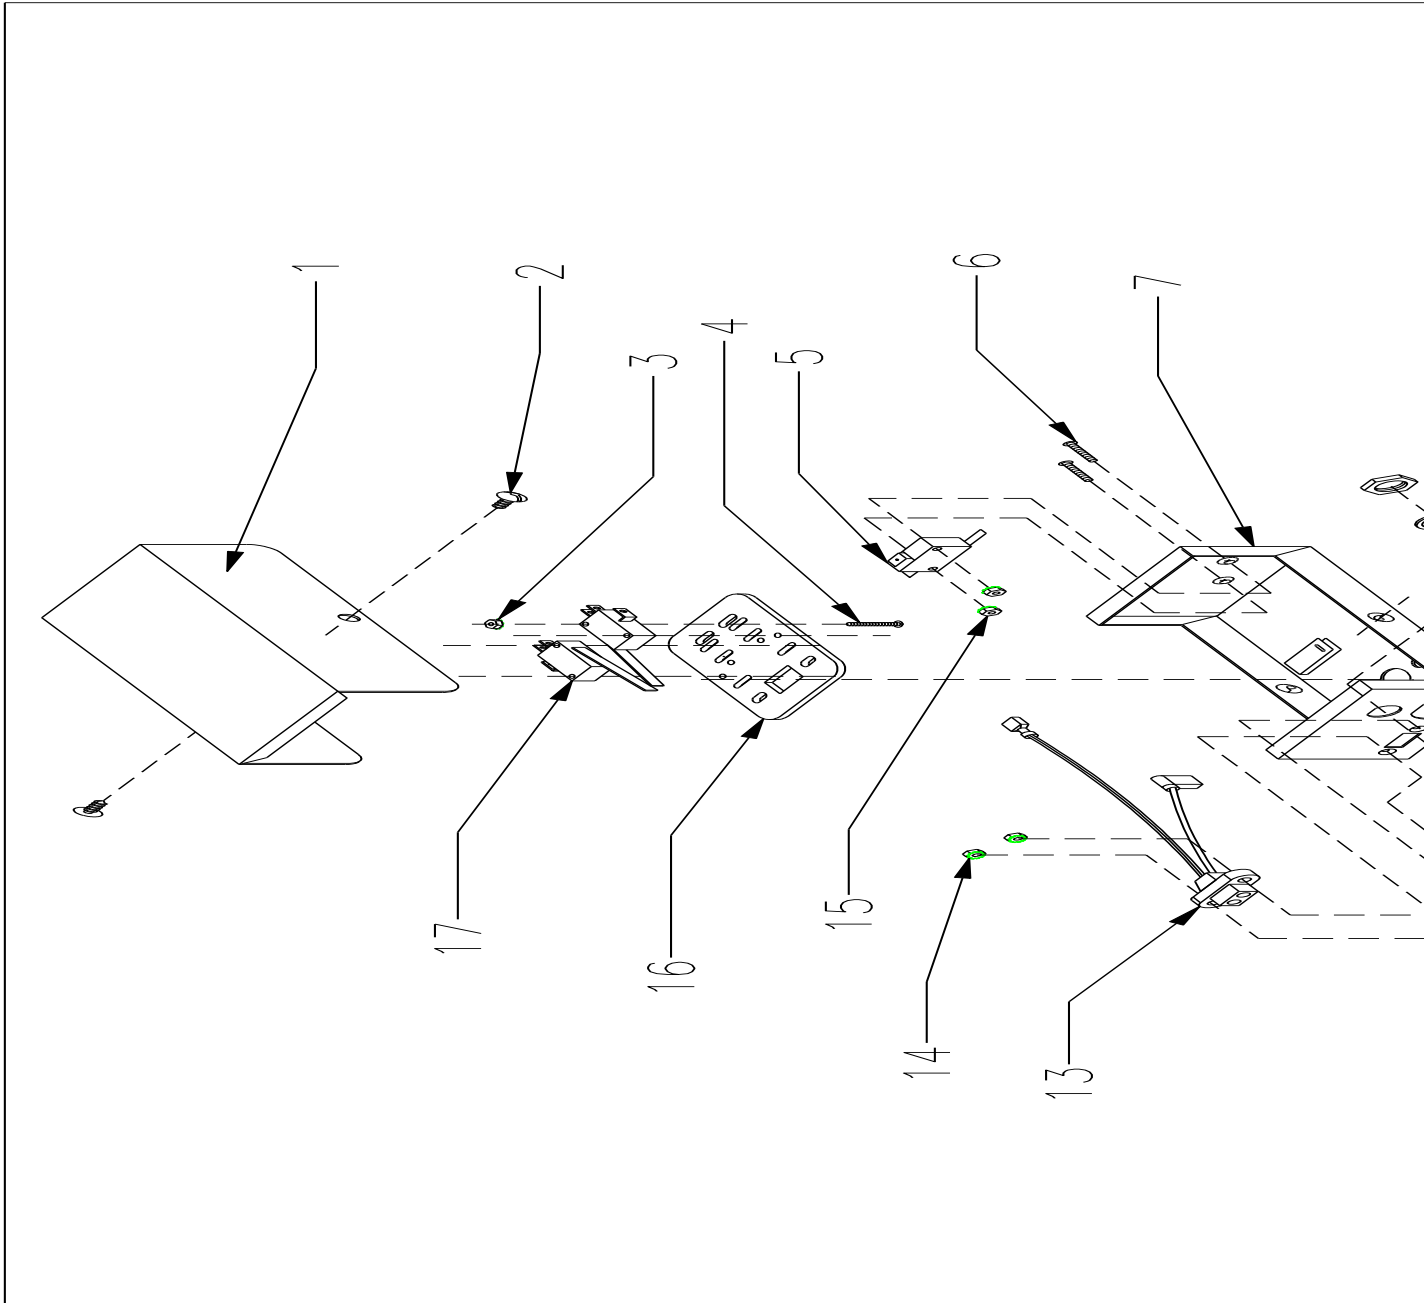

Parts List: Holding Tank Assembly

Line	Qty	Item	Description
1	1	100525	PUMP SHUTOFF ROD W.A., CT
2	2 EA	100162	FLOAT, H.T.,PF-29 1-1/2X2-5/8"
3	1	100364	ASSEMBLY, LEVEL FLOAT, H.T.
4	1	15006	WASHER,FLAT,SS,5/16X1-1/4
5	1 EA	15501	HEX NUT, SS, 1/4" - 20
6	1 EA	80010	NUT, JAM, 3/8"-18NPS, POLY
7	1 EA	80006	WASHER,BLK NEOPREAN,1"x5/8x1/8
8	1 EA	100155	DRAIN VALVE ASSEM., 6"
9	1 EA	10140	SCREW,MACH,SS,TRUS,#10-24x1/2"
10	2 EA	80099	GROMMET,3/8" I.D.,1/2" HOLE
11	1 EA	100406	FILTER,CT, ONE PIECE
12	1	100419	SCREEN, LEG FILTER, .875,
13	1	100426	CT LEG SCREEN,.906, TOP
14	1 EA	80100	ORING,BUNA-N,1/16x11/16x13/16
15	1 EA	100310	FILTER, TOP CAP,CT
16	1	100302	B.T. T-BAR ASSEM
17	1	100054	H.T. LID DISC
18	1 EA	100117	FILTER CANNISTER,2U,PTFE .2uM
19	1 EA	100071	KNOB,LID,PLASTIC STAMPED
20	1 EA	100205	ORING,RUBBER,1/2"IDx11/16"OD
21	1	100159	COVER-H.T.-LEVEL CONTROL D8/C8
22	1 EA	15203	WASHER,SS,LOCKTOOTH,EXT.,1/4"
23	6	15003	WASHER, FLAT,S.S.,5/16"X11/16"
24	5 EA	15501	HEX NUT, SS, 1/4" - 20
25	3 EA	15507	NUT,KEP,#6-32
26	3 EA	100415	FEET,VINYL, 24.0MM X 14.0MM
27	1	100391	ASSEMBLY, H.T. FLOAT BOX,
28	1	100066	BOILER TANK FLOAT GASKET SILIC
29	1	100507	ASSY, H.T. DRAIN PLUG
30	1	100213	GASKET,(CT,14) H.T. DRAIN PLUG
31	1	100254	26CT,H.T.W.A, W. PSO
32	1	100165	NYLON PLUG, 7/16" DRILLED


Parts Diagram: Holding Tank Assembly

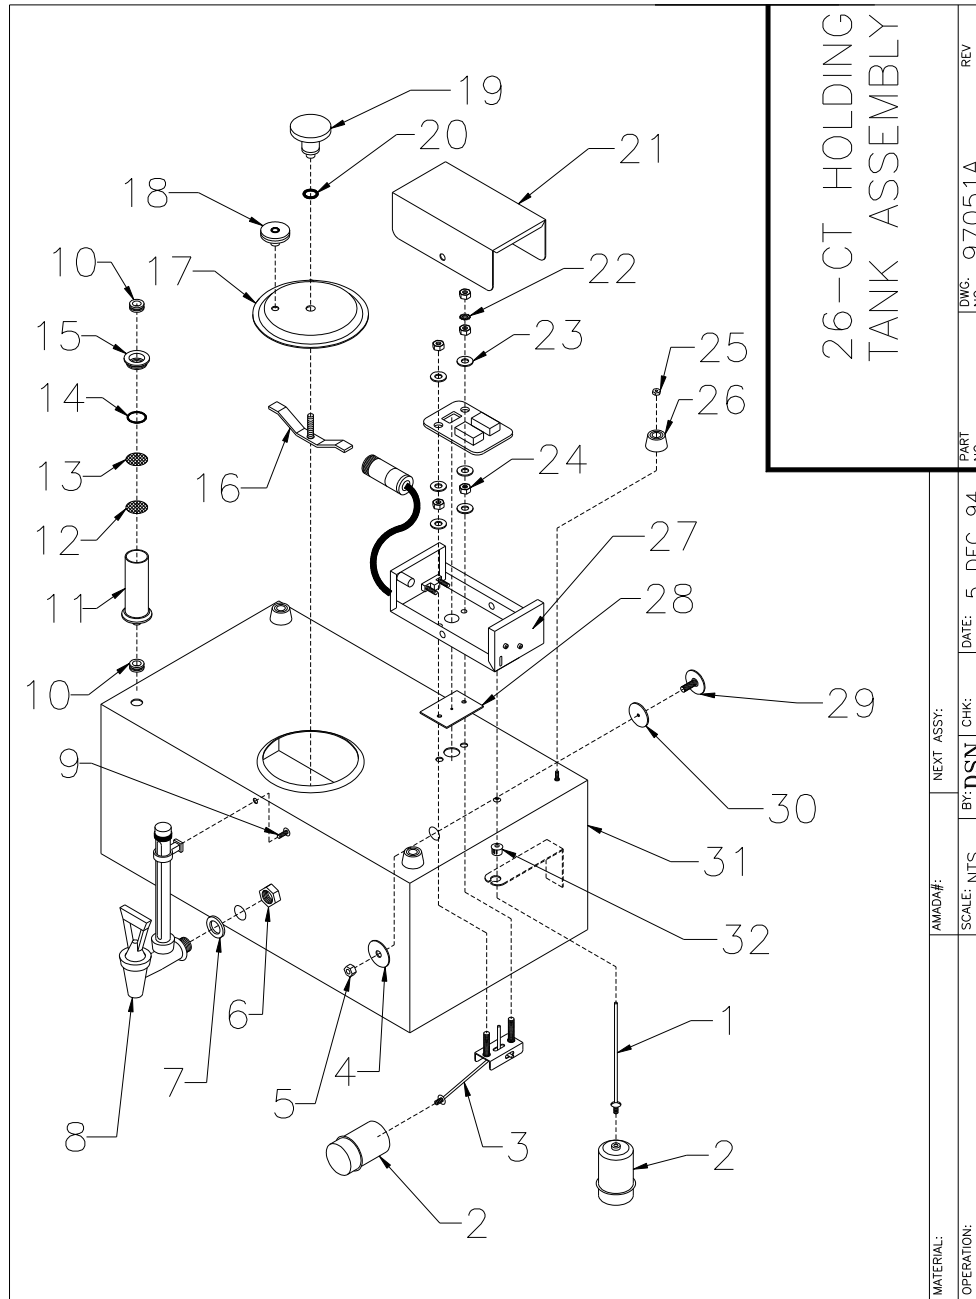

Parts List: Solenoid Valve Assembly

Line	Qty	Item	Description
1	2 EA	80015	GEAR CLAMP, 1/4" S.S.
2	1	100370	TUBE, BRAIDED JAYON, 3/8" ID X
3	1	100097	SCREEN - FILTER-FILL VALVE
4	2 EA	15503	NUT,KEP,#10-24
5	1	100098	BRACKET,WATER SOLENOID 26D
6	2 EA	10104	SCREW,MACH,PLTD,#10-24 X 1/2
7	1 EA	100542	VALVE,SOLENOID,SUPLY,120V,S-54
8	1 EA	100092	VALVE,SOLENOID,SUPLY,240V,S-54
9	1 EA	30083	CLIP,JOHN GUEST,1/4" LOCKING
10	1 EA	30082	ELBOW,90,JG,1/4TUBEX1/8MPT
11	1 EA	30004	COUPLER,BRASS,3/4"FGHT-1/8"FPT
12	1 EA	80006	WASHER,BLK NEOPREAN,1"x5/8x1/8


Parts Diagram: Solenoid Valve Assembly

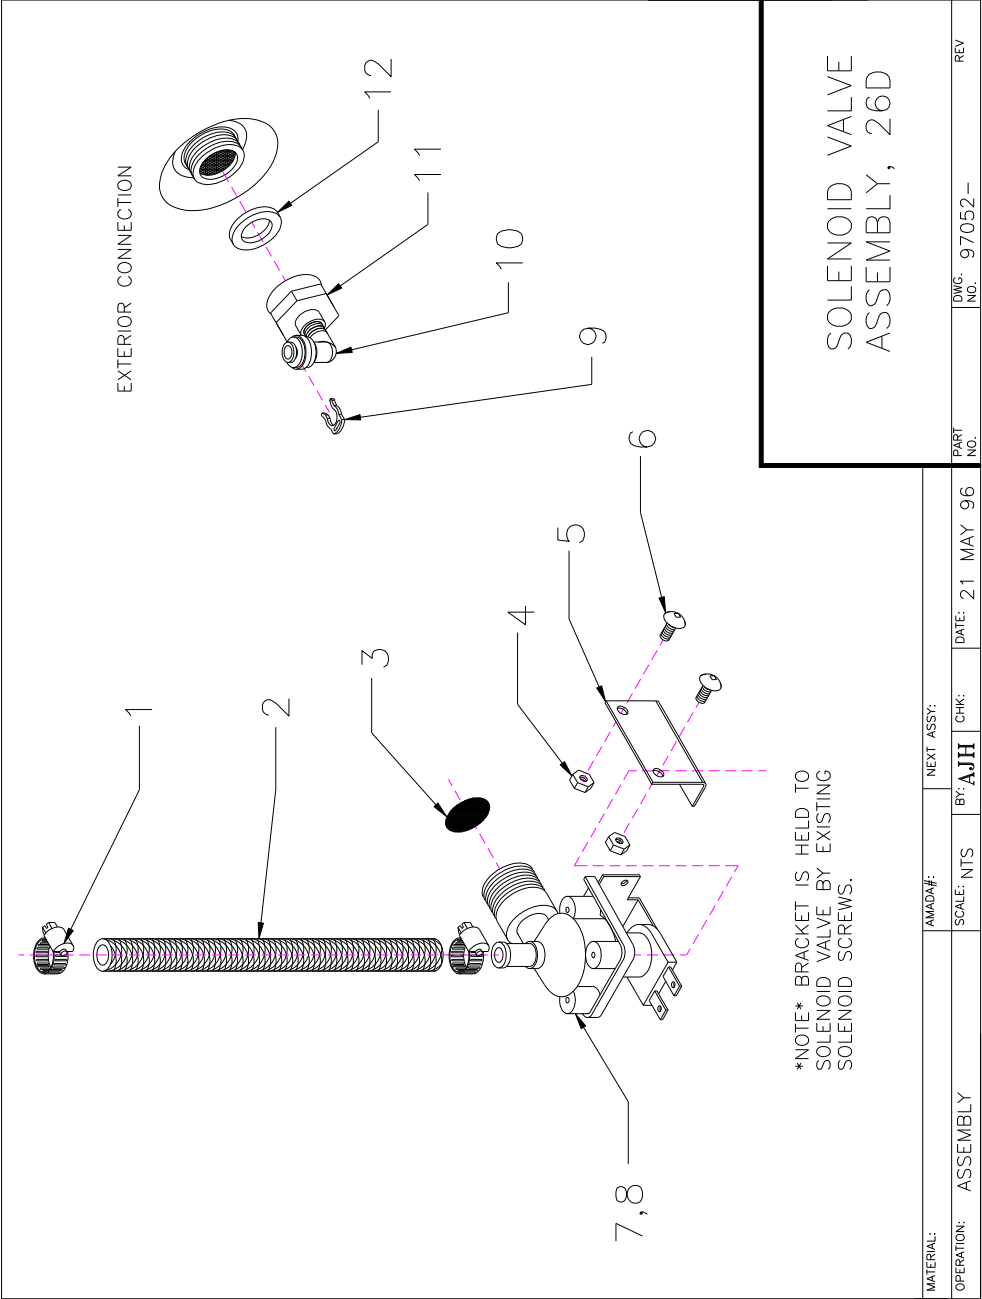

Parts List: Boiler Tank Assembly

Line	Qty	Item	Description
1	1	100073	INSULATION-26D, B.T. SIDES,
2	1	15001	WASHER, FLAT, SS, 5/32 X 3/8"
3	1 EA	100060	FLOAT,BRASS CONTACT
4	2	15003	WASHER, FLAT,S.S.,5/16"X11/16"
5	2 EA	15501	HEX NUT, SS, 1/4" - 20
6	1	100062	BOILER TANK FLOAT WASHER
7	1	100067	BOILER TANK FLOAT GASKET,NTEAR
8	1	100066	BOILER TANK FLOAT GASKET SILIC
9	1 EA	15204	WASHER,SS,OVRLKTOOTH,EXTRNL #8
10	1 EA	100058	FLOAT BALL, 2.5" S.S.
11	1	100513	26D BOILER FLOAT ROD, W.A.
12	1	100068	BOILING TANK LID GASKET SILICO
13	1	100369	BOILER TANK,26 AUTOS,W.A.,S3
14	1	100065	HEATING ELEMENT GASKET, SILICO
15	1	100451	INSULATION, 26D B.T. BOTTOM
16	1	100063	HEATING ELEMENT CLIP WELD ASSE
17	1 EA	100177	HEATING ELEMENT,1100W,125V
18	1 EA	100178	HEATING ELEMENT,1100W,230V
19	4	15003	WASHER, FLAT,S.S.,5/16"X11/16"
20	4 EA	15501	HEX NUT, SS, 1/4" - 20
21	1	15002	WASHER, FLAT, SS, 5/16"X 1"
22	1 EA	15501	HEX NUT, SS, 1/4" - 20

Parts Diagram: Boiler Tank Assembly

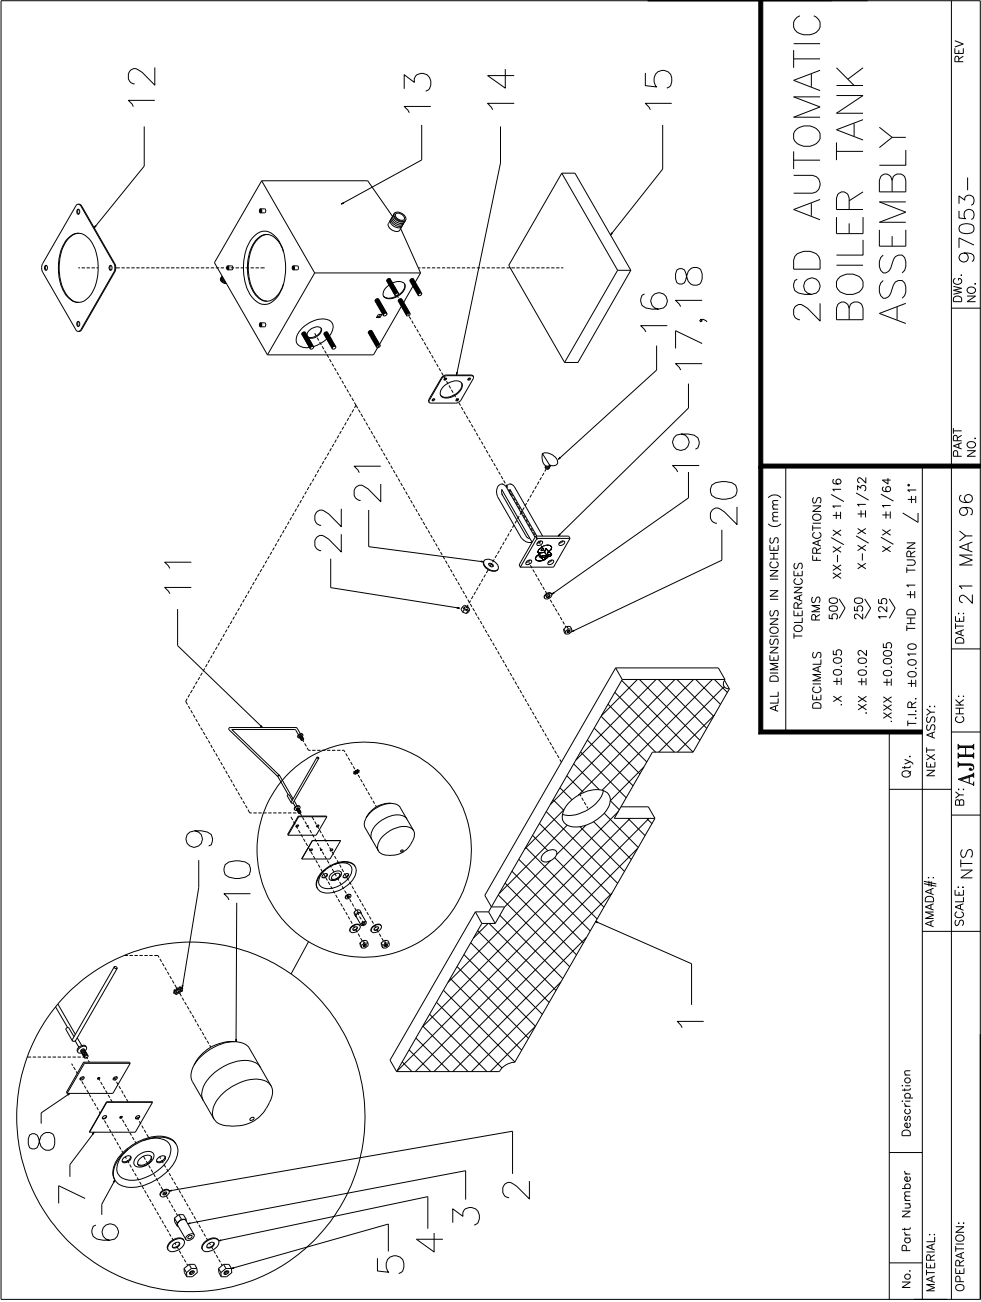

Other Miscellaneous Parts

Line	Qty	Item	Description
1	1	99001	MANUAL, 26-CT, BOUND
2	1	100237	CLEAR STERILIZATION DRIP TUBE, 24"
3	1	100027	PBD CT-STAND
4	1	80214	CHARCOAL, 250G, JAR OF
5	1	80265	CHARCOAL, 500G, JAR OF
6	1	80215	DESCALER, 600G, JAR OF
7	1	80266	DESCALER, 1.5KG, JAR OF
8	1	100095	VALVE, SADDLE, 1/4"
9	1	100094	TUBE, LDPE, 16' ROLL - 1/4"


26-CT REPLACEMENT DECALS

Part# Description

80195 Polar Bear Decal



80194 Combination Sheet Decal

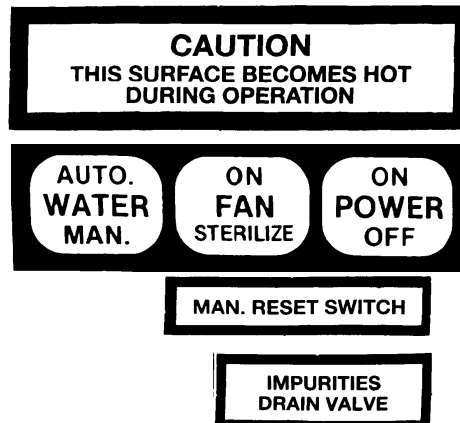

Dealer Information

For Dealer information, please contact:

Polar Bear Water Distillers Mfg. Co. Ltd.
P.O. Box 113 Main Street
Pickardville, Alberta
CANADA T0G 1W0

Telephone: (403) 349-4872
Facsimile: (403) 349-5904

This page intentionally left blank.