

Boiling Tank Water Level Measurements

Warning electrical shock! *Unplug water distiller before removing front panel to make any adjustments.*

All measurements are from the top of the heater element to the water level (see Image A).

The micro-switches, or actuator bar, should be adjusted accordingly: (see Image B)

- Lower micro-switch activates and turns on the fan and heater element at 1 5/8"-1 3/4".

- Lower micro-switch de-activates and turns off the fan and heater element at 1 1/2". It's very important that you have the distiller shut off at or above 1 1/2".


- Upper micro-switch activates and turns on the feed water solenoid valve at 2"-2 1/4".

- Upper micro-switch de-activates and turns off the feed water solenoid valve at 2 1/2".

- Actuator bar & float rod set screws (2 qty) may be loosened to increase or decrease all settings.



Image A

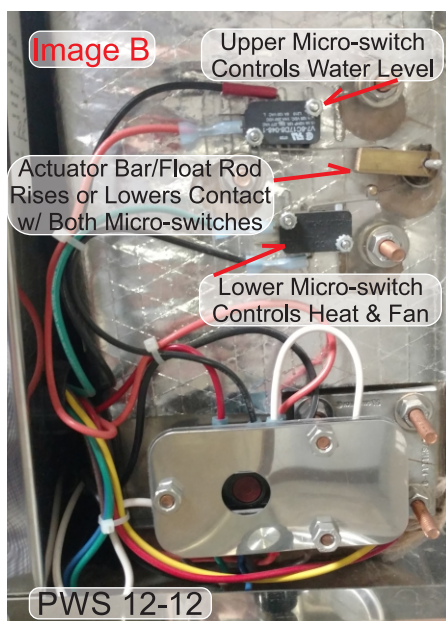

PWS 12-12

Questions, please contact us via website or phone (801) 281-4911.