

BOILING TANK LID INSTALLATION KIT

Please read complete instructions before replacing components.


Parts Included

Your kit will include the following:

Part #	Qty	Description
100287	1	BOILING TANK LID ASSM,PB

Assembly Instructions

1. Remove the old lid and discard.
2. Remove any protective plastic coating (white or clear blue) from new lid.
3. Loosen the lid knob (turn counter-clockwise). Tip the bar at the bottom.
4. Slip bar under the rim of boiling Tank opening.
5. Center lid knob over the opening and tighten.

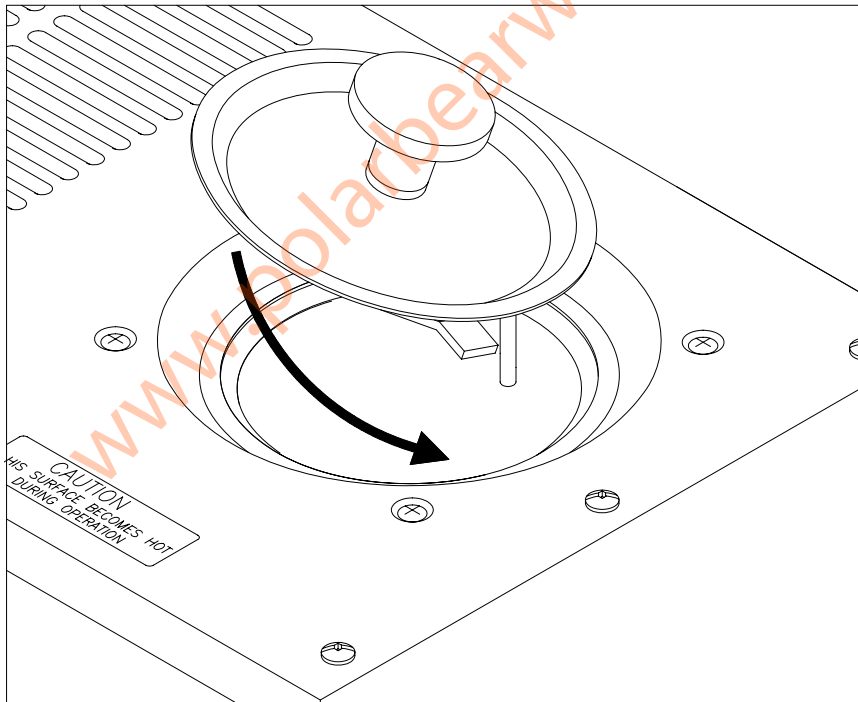

The distiller should now operate properly. If steam is leaking from the lid, we suggest replacing the lid gasket, part# 100068.