




# Precision Water Distillers Owners' Guide

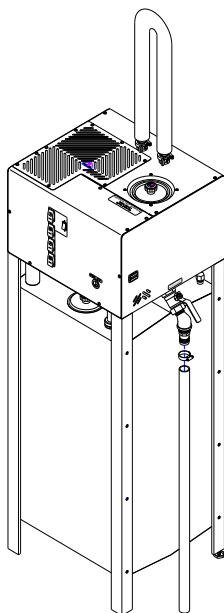

## Model: PWS 45-75

|                 |        |        |
|-----------------|--------|--------|
| Part No. 520000 | 520001 | 520002 |
| 208V            | 220V   | 240V   |

Manufactured By:  
Precision Design & Manufacturing Inc.  
9024-100 Street,  
Westlock, AB, Canada  
T7P 2L4  
<http://www.precisioncanada.com>  
e-mail: [info@precisioncanada.com](mailto:info@precisioncanada.com)  
Phone: (780) 349 4933

**Please read this Owners' Guide  
completely  
before installing or operating  
your Precision Water Distiller.  
Specifications are subject to change  
without notice.**

This page left intentionally blank

# Table of Contents

|                                                                                     |           |
|-------------------------------------------------------------------------------------|-----------|
| <b>TABLE OF CONTENTS .....</b>                                                      | <b>3</b>  |
| <b>INTRODUCTION.....</b>                                                            | <b>4</b>  |
| <b>RECORDS .....</b>                                                                | <b>5</b>  |
| <b>PRECISION WATER DISTILLER WARRANTY .....</b>                                     | <b>6</b>  |
| <b>IMPORTANT SAFETY PRECAUTIONS.....</b>                                            | <b>7</b>  |
| ADDITIONAL SAFETY RECOMMENDATIONS .....                                             | 7         |
| <b>PRECISION WATER DISTILLER OWNERS' SUMMARY .....</b>                              | <b>8</b>  |
| <b>WATER DISTILLER FEATURES .....</b>                                               | <b>9</b>  |
| <b>9 FACTORS THAT WILL AFFECT YOUR WATER DISTILLER PRODUCTION .....</b>             | <b>10</b> |
| <b>UNDERSTANDING HOW PURE WATER IS PRODUCED.....</b>                                | <b>12</b> |
| <b>FINDING A GOOD INSTALLATION LOCATION.....</b>                                    | <b>13</b> |
| <b>UNPACKING YOUR WATER DISTILLER.....</b>                                          | <b>14</b> |
| <b>MANUAL DRAIN VALVE TUBE INSTALLATION.....</b>                                    | <b>16</b> |
| <b>FEED WATER LINE CONNECTION .....</b>                                             | <b>17</b> |
| <b>BOILING TANK LID INSTALLATION .....</b>                                          | <b>21</b> |
| <b>STORAGE TANK LID REMOVAL AND INSTALLATION .....</b>                              | <b>21</b> |
| <b>OPERATION.....</b>                                                               | <b>23</b> |
| CONTROLS - POWER, FAN, WATER PUMP, OVERHEAT RESET AND FUSE.....                     | 23        |
| BEFORE INITIAL WATER DISTILLER OPERATION.....                                       | 28        |
| NORMAL OPERATION.....                                                               | 29        |
| <b>MAINTENANCE AND CLEANING .....</b>                                               | <b>30</b> |
| REGULAR INSPECTION AND CLEANING OF BOILING TANK .....                               | 30        |
| CLEANING THE BOILING TANK USING CLEANER DESCALER .....                              | 31        |
| REPLACING CHARCOAL IN CHARCOAL FILTER CANISTER.....                                 | 34        |
| STERILIZATION.....                                                                  | 35        |
| Liquid Sterilization of Storage Tank and Optional Pump Water Line System .....      | 35        |
| Steam Sterilization of Water Distiller Head.....                                    | 36        |
| Steam Sterilization of Water Distiller Head, Filter Canister and Storage Tank ..... | 38        |
| Maintenance Schedule Table.....                                                     | 41        |
| Owner Maintenance Record Table.....                                                 | 41        |
| <b>TROUBLESHOOTING .....</b>                                                        | <b>42</b> |
| <b>CONTACT INFORMATION .....</b>                                                    | <b>46</b> |
| <b>OPTIONAL ACCESSORIES.....</b>                                                    | <b>47</b> |
| PWS APK-4 PUMP KIT .....                                                            | 47        |
| PWS APK-4 PUMP KIT INSTALLATION.....                                                | 48        |
| FAUCET AND WATER LINE INSTALLATION .....                                            | 51        |
| PWS AED-2 AUTOMATIC ELECTRIC DRAIN KIT INSTALLATION .....                           | 53        |
| ADDITIONAL OPTIONS.....                                                             | 57        |
| WIRING LIST AND SCHEMATIC .....                                                     | 59        |
| <b>WARRANTY REGISTRATION CARD.....</b>                                              | <b>61</b> |

# Introduction

Congratulations on the purchase of the most advanced water distiller in the industry! When installed and maintained properly, your Precision Water Distiller will provide years of safe, trouble free service. It is important to observe and follow the safety and maintenance instructions carefully. If you have any questions or concerns regarding installation or operation of your water distiller, please contact your dealer.

The PWS 45-75 is certified to cCSAus Classes 2831-02 and 2831-82 under the Canadian and American Electrical Code.

All water distillers are factory tested with a high voltage 'Dielectric Strength Test' and ground fault test prior to shipping.

Precision Water Distillers have been tested by EnviroTest Laboratories which found the water distillation units to be very effective water treatment systems capable of removing both harmful pathogens and toxic chemicals from water. In their study all pathogens were eliminated and none were found in the distilled water. The water distillation system also effectively removed all of the soluble inorganic chemicals tested. Removal efficiencies of 99% or greater were achieved for almost every chemical tested.


All Precision Water Distillers are operated and tested at the factory and have produced distilled water to make sure all components are functioning properly. All water distillers are wiped clean before shipping, but there may be a water ring inside the boiling tank. There may also be an off-colour line at the seams of the storage and boiler tank. This is caused by the TIG welding process used during manufacturing. This is normal and is not a sign of a problem. Follow all the **Before Initial Water Distiller Operation** procedures and you will have pure water in no time.

Your Precision Water Distiller must be installed according to any Local, State or Provincial Regulations.

# Records

Please record all of the important information below to assist you and the service center in case there is any service work required in the future. All of the information is required to properly identify your water distiller and will make servicing much easier. The information is located on the serial plate on the side of the water distiller head. The **Serial Plate Location Diagram** below shows a sample serial plate.

**Serial Plate Location Diagram**

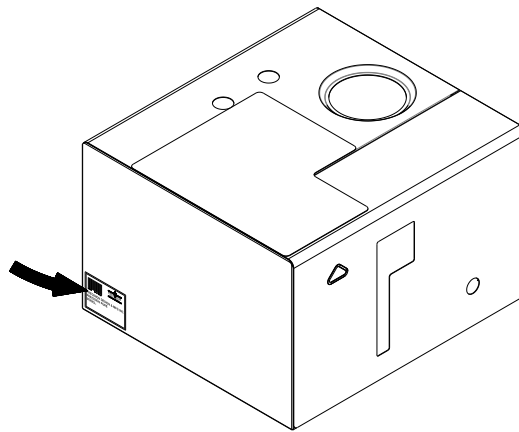

**Model:** PWS 45-75

**Series:**

*eg: 0016*

**Serial Number:**

*eg: 1723012*

**Date of Purchase:** \_\_\_\_\_

**Dealer Purchased From:** \_\_\_\_\_

**Optional Pump Serial No:** \_\_\_\_\_

**Series:** \_\_\_\_\_

**Optional Drain Serial No:** \_\_\_\_\_

**Series:** \_\_\_\_\_

## **Precision Water Distiller Warranty**

- The warranty for your Precision Water Distiller covers defects in materials for one (1) year on all parts and labor to the original purchaser.
- With this warranty it is the responsibility of the distiller owner to properly maintain the distiller. If there is any misuse or abuse the warranty will be void.
- Precision Water Systems does not warrant any transportation charges incurred to complete the repair. The distiller owner is responsible for all shipping charges to and from the service center.
- Warranty is void if the distiller is found to have been consumer damaged or misused, caused by acts of God, unauthorized alteration, repair or vandalism.

# Important Safety Precautions

When using electrical appliances, basic safety precautions should always be followed including the following:

- 1. Read all instructions.**
- 2.** Do not touch hot surfaces. Use handles or knobs.
- 3.** To protect against electrical shock do not immerse cords or plugs in water or other liquid.
- 4.** Close supervision is necessary when any appliance is used near children.
- 5.** Do not allow children to operate this appliance.
- 6.** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 7.** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest service facility for examination, repair or adjustment.
- 8.** The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 9.** Do not use outdoors.
- 10.** Do not let cord hang over edge of table counter, or touch hot surfaces.
- 11.** Do not place on or near a hot gas or electric burner, or in a heated oven.
- 12.** Extreme caution must be used when moving an appliance containing hot water.
- 13.** Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any controls to "off", then remove plug from wall outlet.
- 14. Save these instructions.**

## Additional Safety Recommendations

- 1.** Always unplug appliance before servicing.
- 2.** Do not use extension cords with appliance.
- 3.** Ensure there is adequate air space around the appliance to allow the heat from the appliance to be removed and supply adequate fresh air for cooling.


# Precision Water Distiller Owners' Summary

The following is a summary of the information contained in this Owners' Guide and required to install and operate your Water Distiller


- 1) Find a good location for installing your Water Distiller – See **Finding a Good Installation Location**.
- 2) Unpack the water distiller and parts.
- 3) Assemble the Water Distiller – See  
**Impurities Drain Valve Tube Installation**  
**Feed Water Line Connection**  
**Boiling Tank Lid Installation**
- 4) Install all purchased Options - See **Optional Accessories** for installation instructions.
- 5) Steam sterilize boiling tank and storage tank – See **Steam Sterilization** in the **Maintenance and Cleaning** section.
- 6) Load Charcoal Filter Canister – See **Replacing Charcoal in Charcoal Filter Canister** in the **Maintenance and Cleaning** section.
- 7) Follow procedure in **Normal Operation** section.
- 8) Enjoy pure, distilled water!

# Water Distiller Features

## Water Distiller Front View

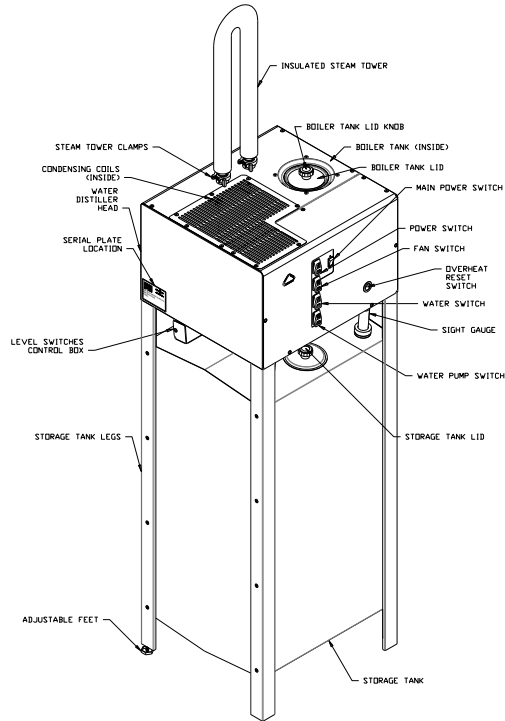

## Water Distiller Rear View

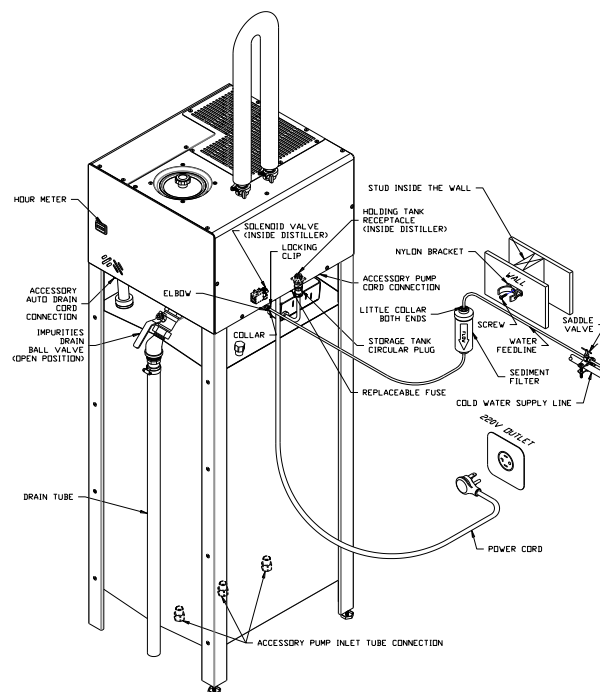

## **9 Factors That Will Affect Your Water Distiller Production**

### **1. Water Volume Measurement**

a) How are you measuring your water? The most accurate is by weight.

1 litre of pure water = 1 kg = 1000 g = 2.2046 lbs

b) Water distillers are rated in US gallons, NOT Imperial Gallons.

1 US Gallon = 3.785 litres = 3.785 kg = 8.344 lbs = 0.833 Imp. Gallons

### **2. Line Voltage**

The line voltage at the outlet where the distiller is connected should be checked with a voltmeter. Matching the unit to the voltage available will provide the highest efficiency to produce the maximum volume of distilled water. Line voltage is often much less than expected, especially in rural areas. Line voltage will also usually drop off dramatically when the daily commercial load hits the grid from approximately 8 am to 5 pm. Line voltage lower than the distiller rated voltage (on the serial plate) will drastically lower the water production.

### **3. Fill Water Temperature**

The water used to fill the machine may affect the water production. Cooler fill water will take more time/energy to heat to the boiling point than hot water.

### **4. Ambient Air Temperature**

Water distillers with cooling fans must have sufficient ventilation so that the boiled steam can be cooled and condensed into distilled water. Restriction of air flow (such as a small room) will result in a hot ambient air build up which will not allow all of the steam to condense into distilled water and some water production may escape as steam into the atmosphere through the charcoal filter or volatile gas release vent. This steam loss can also occur in hot summer periods or very warm climates.

## **5. Heating Elements and Boiler Cleanliness**

As the water distiller removes impurities some of the impurities may cling to the boiler tank and the heating elements. Any of this scale may build up around the heating element and actually insulate them, which will drastically decrease the thermal efficiency of the heating element and require more time/energy to boil water, which will decrease the water production.

## **6. Altitude**

The water distiller is rated at the altitude of the manufacturer, which is approximately 675 m (2214 ft) above sea level. Locations lower than this (closer to sea level) will have reduced water production due to the higher boiling point of water at higher atmospheric pressures at lower altitudes.

## **7. Operating Time, Warm-up Period & Suitable Storage**

When checking the water distiller production, the start time should be when the first few drops of water have entered the charcoal filter canister. Do not start timing when the distiller turns on as it takes a few minutes for the heating element, boiler tank and water to heat up. The distiller production rating does NOT account for this time, but rather the continuous production after the distiller is up to temperature. Ensure when checking production that you have suitable water storage for holding the amount of water that will be produced.

## **8. Boiling Tank Heating Element**


Once all other factors have been eliminated or checked, have an authorized service center check that the proper heating element has been installed in your distiller. Always replace heating elements with the manufacturers supplied heating elements. Other elements are available from hardware stores, home repair centers, etc. and look like the same element but they are almost always not the same. Even if the voltage and wattage are the same, they usually have different wattage densities and most likely different element sheath materials, which will result in premature heater burnout in continuous water distillation of raw water. These heating elements will also likely affect your water distillation capacity.

## **9. Combination of the above Factors.**

Often a reduced water distiller's production is a combination of many or all of the above factors. To ensure maximum production from your water distiller, keep your water distiller clean and operate it in a well-ventilated area and use room temperature feed water where possible.

## Understanding How Pure Water is Produced

Your water distiller operates the same as Nature's hydrological cycle. See the **Hydrological Cycle Diagram** below. Nature uses the heat of the sun to vaporize surface water and draw it into the atmosphere leaving the impurities behind. As the vapour cools it condenses and returns back to the earth as rain or snow. When rain or snow falls it passes through smog, dust and many other types of contaminants. These contaminants can be picked up by the falling rain or snow. Additional contamination of water can occur when it moves through the ground.

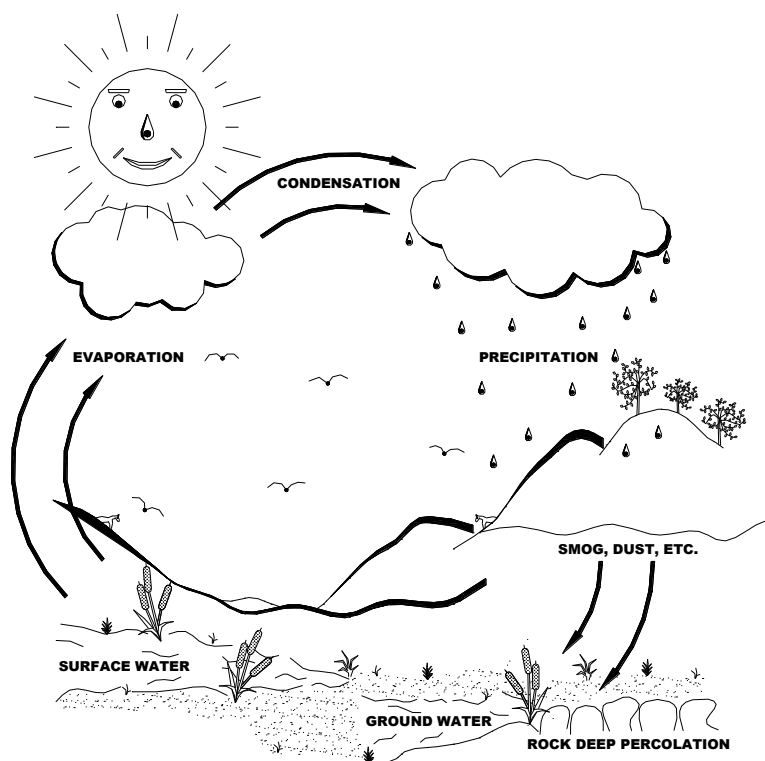

**Hydrological Cycle Diagram**

Water Distillers complete their own hydrological cycle. The advantage of a water distiller over Nature is that the water is produced in a closed environment free of pollution and contaminants.

Your water distiller uses the boiling tank to heat the feed water to create steam. The steam rises from the boiling tank leaving almost all of the impurities behind. The steam enters the condensing coil and is cooled by the fan. As the steam cools it condenses into pure distilled water and is stored in a stainless steel storage tank. The charcoal filter between the condensing coil and storage tank and the volatile gas vent remove any contaminants that boil at lower temperatures than the boiling point of water. The impurities from the process remain in the boiling tank and are drained to a suitable drain.


## Finding a Good Installation Location

Before installing your water distiller it is important to find a good location. Following the points listed below will provide the best location for your water distiller:

- 1.** The water distiller must be plugged directly into a dedicated 208, 220, or 240 VAC 30 Amp wall outlet.
- 2.** The water distiller requires sufficient airflow around it to operate. The air is used to cool the water distiller condensing coil. Locate the water distiller in an area that will provide enough room for good air flow. Do not place the water distiller in an enclosed area like a closet.
- 3.** With the Automatic Feed Water Line Connection to the water distiller, locate the water distiller close to an existing cold water line (after a water softener if available).
- 4.** Locate the water distiller where a pail or suitable container can be used for the impurities drain. Close to a floor drain (sewer) is best especially if the Automatic Drain Kit is installed.
- 5.** When unpacking the water distiller and options note, the sizes and consider this when picking an installation location.
- 6.** Locate the water distiller away from an office or other area where the noise of the water distiller may be undesirable.
- 7.** Locate the water distiller close to the dispenser or faucet location.
- 8.** Locate the water distiller in an area that is clean and free of dust so the cooling coils remain clean when the fan is drawing fresh air.

## Unpacking Your Water Distiller

Your Water distiller has been shipped in one box. Any optional accessories have been shipped in a separate box(s). The **Water Distiller Box Components Diagram** shown as follows displays all of the parts that will be in the water distiller box.

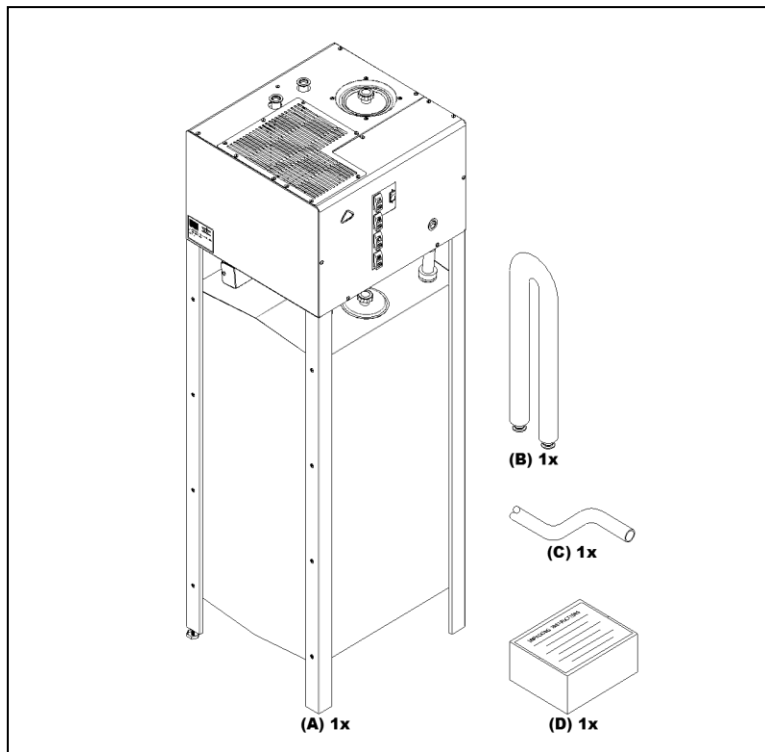






**Water Distiller Box Components Diagram**

### Water Distiller Box Check List

#### Check List

- ☐ (A) 1 – PWS 45-75 Water Distiller Head and Storage Tank
  - ☐ (B) 1 – Tower, w/Insulation
  - ☐ (C) 6' – 1 ¼ " x 1 ½ " Drain Tube
  - ☐ (D) 1 – Parts Box with UNPACKING INSTRUCTIONS
- (**Water Distiller Parts Box Components Diagram** shown as follows)
     
## Water Distiller Parts Box Components Diagram


|                                            |                                                                                   |                                              |                                                                                   |                                                  |                                                                                     |                                                         |                                                                                      |
|--------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------|-----------------------------------------------------------------------------------|--------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------|--------------------------------------------------------------------------------------|
| a)(1) Descaler Sample Jar<br>#080115       |  | b)(1) Coconut Charcoal Sample Jar<br>#080116 |  | c)(1) Filter Canister Stainless Steel<br>#520233 |  | d)(1) Valve, Self Piercing<br>#036005                   |   |
| e)(1) Lid, Boiling Tank<br>#500148         |  | f)(1) Lid, Holding Tank<br>#500248           |  | g)(1) Gear Clamp stainless<br>#080221            |  | h) 4' Clear Drip Sterilization Tube #052002             |   |
| i) (16') 1/4" Feed Line<br>#052000         |  | j) (1) Ball Valve Stainless Steel<br>#030024 |  | k) (1) Elbow with Coupler<br>#030025 & #034032   |  | l) (2) Clamp Ring Assembly<br>#080175. #080176 & 080177 |   |
| m) (1) Sediment Filter, In-Line<br>#080054 |  | n) (1) Mounting Clip, Filter<br>#054073      |  | o) (1) Screws<br>#10- 1" #010008                 |  | p) (1) PWS 45-75 Owners Guide<br>#097045                |  |

1. Remove all loose pieces from the water distiller box and save all packaging until all the parts are identified and located.
2. Check inside boiler tank for any parts that may be shipped in that area. If any parts are missing or if you feel you have been given the wrong part, DO NOT return the water distiller unit. Contact your dealer for the required parts. They will be pleased to assist you.
3. Remove any remaining protective plastic from distiller head, storage tank, boiling tank lid, storage tank lid, and distiller legs.

## Manual Drain Valve Tube Installation

**NOTE:** If you have purchased the Automatic Electric Drain Kit, Go to the **PWS AED-2 Automatic Electric Drain Kit Installation** section of the guide and install it now.

1. Refer to the **Manual Drain Valve Tube Installation Diagram** shown below. Push the drain tube onto the elbow and secure with gear clamp using a slotted screwdriver. Run the drain tube to a container or suitable floor drain like the sewer.

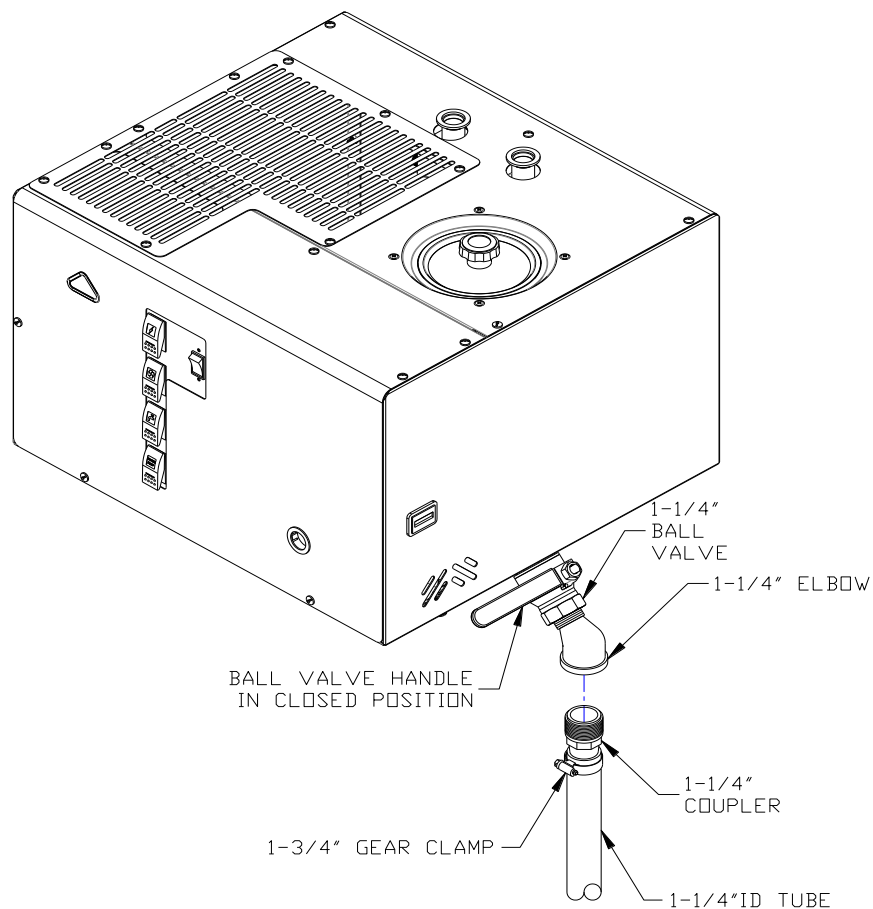


**Manual Drain Valve Tube Installation Diagram**

# Feed Water Line Connection

## TOOLS REQUIRED:

### For Feed Water Line Connection


- (A) Slotted Screwdriver
- (B) Drill with 1/8" drill bit (For Steel or Brass Water Line)
- (C) 1/2" Open End Wrench or
- (D) Pliers
- (E) Utility Knife

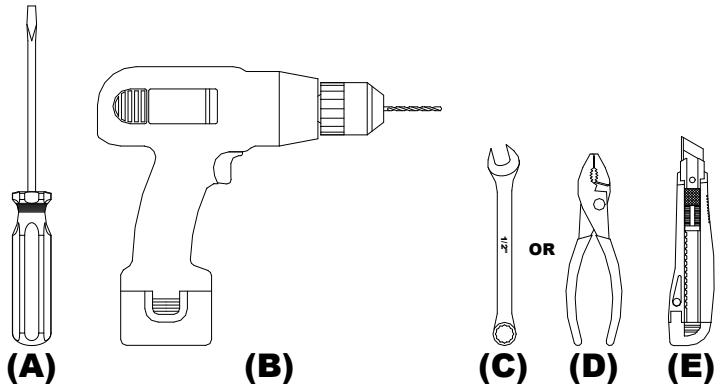

Select a water line to supply the water distiller with feed water. Be sure to use a cold water line and pick a suitable location closest to the water distiller location.

**NOTE:** If you have a water softener be sure to connect the water distiller feed line on the outlet side of the softener as soft water will reduce cleaning and maintaining of the water distiller. Using a water supply from the outlet of a hot water heater is not recommended as some of the internal components of the water distiller are not designed to be used with water temperatures above normal cold water supply. Scale and sediment from hot water tanks can also cause problems by plugging the water distiller raw water plumbing components.

## Feed Water Line Installation Diagram

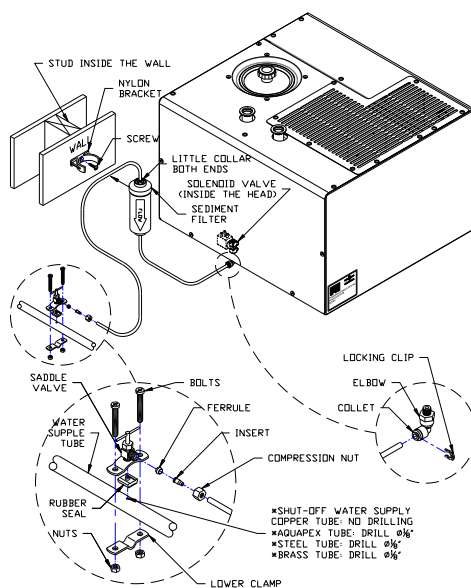

1. Refer to the **Feed Water Line Installation Diagram** above. Install the self-piercing valve kit onto the household water feed line with a slotted screwdriver. Detailed instructions for installing the valve are listed below.

**Instructions:**

**For Copper and Plastic Water Line:**

NO DRILLING OR WATER SHUT– OFF REQUIRED.

**Caution:** Be sure piercing pin is completely backed up into valve body by turning handle counter-clockwise.

1. Loosely assemble one side of top clamp to bottom clamp with screw and nut provided.
2. Be sure rubber gasket is in place over piercing needle and position valve assembly on copper or plastic water line.
3. Assemble other side of top clamp to bottom clamp with remaining screw and nut and tighten both pieces with a slotted screwdriver until valve assembly is firmly attached to water line.
4. Complete compression connection to valve outlet.
5. Turn valve handle clockwise to pierce the supply line and close the valve.
6. Open valve by turning handle counter-clockwise to desired water flow rate.


**For Steel and Brass Water Line:**

1. Turn off the household water supply.
2. Drill a 1/8" hole at the bottom of the steel or brass water line that will be used for the water distiller water feed line.
3. Loosely assemble one side of top clamp to bottom clamp with screw and nut provided.
4. Be sure the piercing pin is turned into the valve body. Place the rubber gasket over the piercing needle and position needle into drilled 1/8" hole.
5. Assemble other side of top clamp and bottom clamp with remaining screw and nut and tighten both pieces with a slotted screwdriver until valve assembly is firmly attached to the water line.
6. Complete compression connection to valve outlet.
7. Turn on household water supply.
8. Open flow rate by turning saddle valve handle counter-clockwise to desired flow rate.


2. Attach the 1/4" water line to the self piercing valve with a ferrule, insert and compression nut using a 1/2" open end wrench or pliers. Route the 1/4" tubing to the inlet on the back of the water distiller head. Cut approximately two foot longer than needed with suitable water line routing.
3. Push the 1/4" feed line fully into the elbow and reinstall the locking clip between the elbow and collet.

4. You may install the #080054 Sediment Filter with #054073 Mounting Clip and #010008 screw at this time. Install anywhere between the saddle valve and your water distiller.


1. Before you install your Sediment Pre-filter, see the diagram and parts list for all necessary parts.
2. Make sure there are no electricals in the surrounding area.
3. Make sure the water is still turned off.
4. Remove the rubber plug tube on each end of the filter by holding the little collar down evenly around the plug in order to release the plug. You should be able to pull plugs out easily.
5. Mount the Nylon Bracket to the wall with the screw, in a horizontal direction, (if available)
6. Snap the filter into the nylon bracket with the big round end on top where you want the water going in at; and the smooth end where you want the water going out to the distiller.
7. Install the filter in between the saddle valve and the distiller (see diagram below). Install the  $\frac{1}{4}$ " water feedline from the saddle valve end to the big round end of the filter, by pushing it in until it seats; on the smooth end of the filter. Install the  $\frac{1}{4}$ " feedline to the quick connect elbow on the back of the distiller.
8. Turn on the water and check for leaks

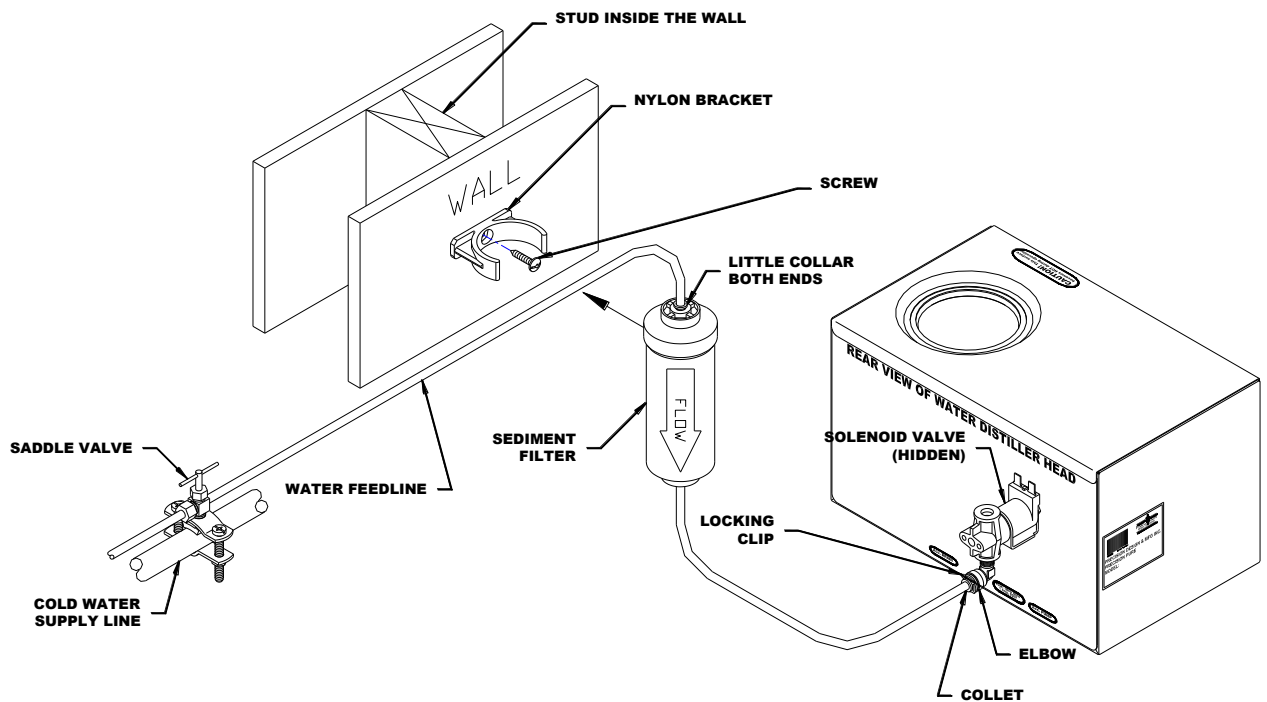

5. Make sure the Control Cable is connected between the water distiller head and the storage tank by turning the plug until the splines lock and then turn the locking ring until finger tight. See the **Holding Tank Control Cable Connection Diagram** below.

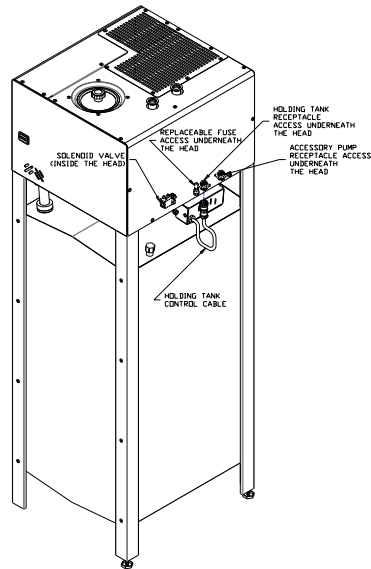

**Holding Tank Control Cable Connection Diagram**

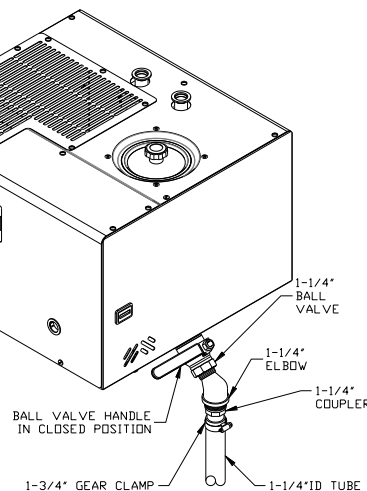


**Boiling Tank Drain Valve Diagram**

6. Refer to the **Boiling Tank Drain Valve Diagram** above. Close the boiling tank drain ball valve at the rear of the water distiller (ball valve is shown in the closed position). If the water distiller is equipped with the PWS AED-2 Automatic Electric Drain the ball valve should be in the open position.
7. Tighten the saddle valve handle completely by turning clockwise to pierce the water supply line (copper or plastic water line only). Open the water supply to the water distiller by turning the saddle valve handle counter-clockwise. Check for leaks.

## Boiling Tank Lid Installation

1. Remove any protective plastic coating (white, blue or clear plastic) from the lid.

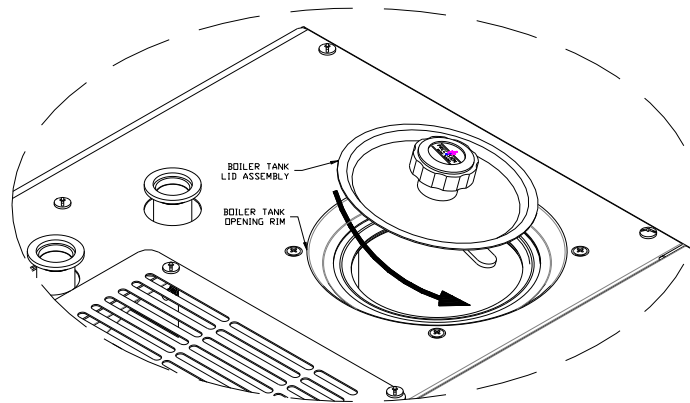

**Boiling Tank Lid Operation Diagram**

2. Refer to the **Boiling Tank Lid Operation Diagram** above. Take the boiling tank lid in your hand. Hold the Tee Bar bracket and turn the Lid Knob counter-clockwise so that there is  $\frac{1}{2}$ " of space between the Tee Bar bracket and the lid.
3. Tip the lid so that the Tee Bar bracket slips under the rim of the boiling tank opening on one side, and then slide the lid so the Tee Bar bracket slips under the other side of the rim. Center the lid.
4. Turn clockwise to tighten the lid onto the boiling tank. The water level pin inside the boiling tank will prevent the lid from turning while tightening. Practise removing and replacing the lid a few times as the lid will need to be removed each time the water distiller is cleaned.

## Storage Tank Lid Removal and Installation


1. To remove the storage tank lid, turn the Lid Knob counter-clockwise while lifting. Lifting while turning holds the Tee Bar bracket under the lid and allows you to loosen the lid. Continue turning and lifting until there is  $\frac{1}{2}$ " of space between the Tee Bar bracket and the lid.
2. Tip the lid so that the Tee Bar bracket slips out from under the rim of the storage tank opening on one side, and then slide the lid so the Tee Bar bracket slips out from under the other side of the rim.

- 3.** To replace the storage tank lid, tip the lid so that the Tee Bar bracket slips under the rim of the storage tank opening on one side, and then slide the lid so the Tee Bar bracket slips under the other side of the rim. Center the lid.
- 4.** While lifting up on the storage tank lid knob, turn clockwise to tighten the lid onto the storage tank. Tighten until snug only.

# Operation

**NOTE:** Read all parts of the Owners Guide before operating the water distiller. Follow the Before Initial Water Distiller Operation steps and be sure to complete a Steam Sterilization of the Water Distiller Head, Filter Canister and Storage tank before distilling water for use for the first time or after a period of storage or non-use.


## Controls

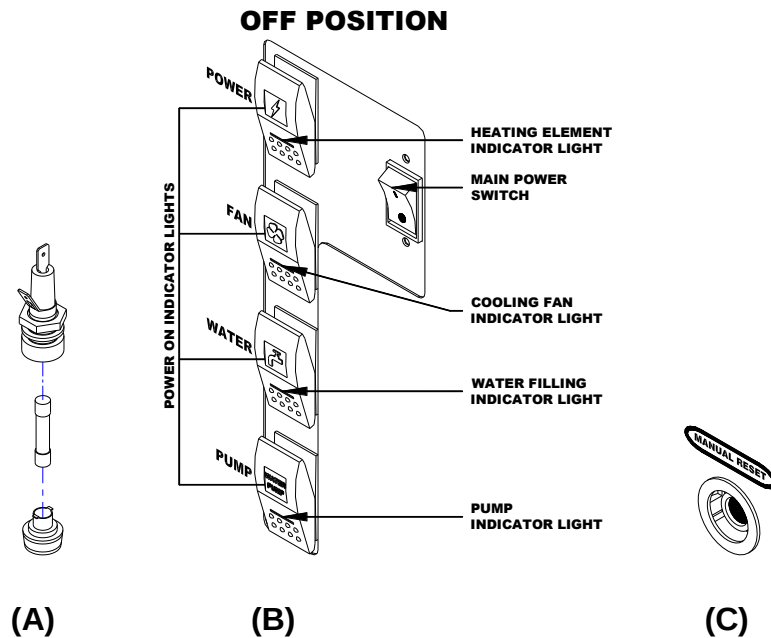

**Operation Switches Diagram**


Refer to the **Operation Switches Diagram** above. There is a replaceable 1 Amp Slow Blow 240V fuse **(A)** on the bottom rear of the water distiller head. There are four grey control switches **(B)** and one overheat manual reset switch **(C)** on the front of the water distiller head that allow you to control all functions of the water distiller

## Main Power – ON/OFF

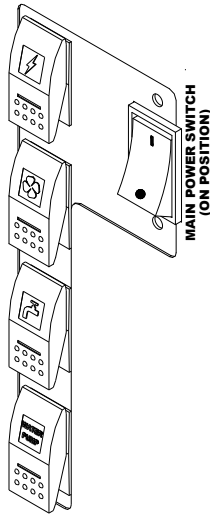

- Black machine Breaker Switch.
- Shuts entire machine off.
- No other switches will work if this switch is not on.


## Heating Element Power – ON/OFF

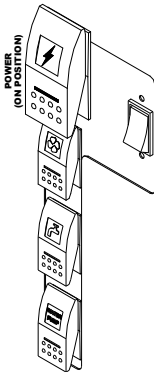

- Red indicator light with a lightning bolt logo.
- Normally ON when water distiller is operating. Controls power to the entire water distiller.
- Top square indicator light is illuminated whenever the switch is on. It will remain illuminated even when the water distiller is not operating.
- Bottom rectangular indicator light is illuminated only when the heating element in the boiler is on.
- Turn power switch to OFF to stop Water distiller operation.


**NOTE:** A clicking sound may be heard if the Water distiller is plugged into the wall electrical outlet, the power and water switches are in the 'ON' position and the boiler is empty. The clicking sound is the internal water solenoid valve activating.

## Fan – ON/OFF

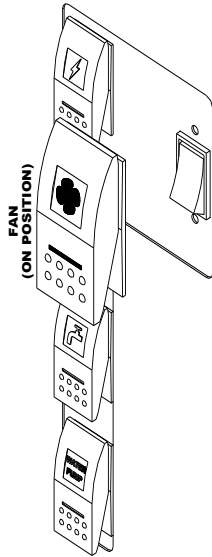


- Amber indicator light with a fan blade logo.
- Normally ON when water distiller is operating. Controls power to the cooling coil fan.
- Top square indicator light is illuminated whenever the switch is on. It will remain illuminated even when the water distiller is not operating.
- Bottom rectangular indicator light is illuminated only when the fan is on. Fan should be running if the water distiller is distilling water.
- Turn Fan Switch to OFF only when performing a steam sterilization of the water distiller.

## Water – ON/OFF

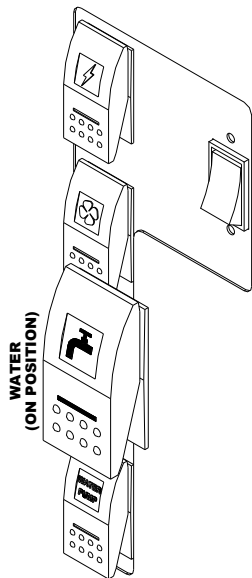


- White indicator light with a water tap logo.
- Normally ON when water distiller is operating with automatic feed water supply line. Will automatically fill the boiler tank from the water supply line.
- Top square indicator light is illuminated whenever the switch is on. It will remain illuminated even when the water distiller is not operating.
- Bottom rectangular indicator light is illuminated only when the water is entering the boiling tank. The boiler will fill with water until the upper boiler water level is achieved.

## Pump – ON/OFF

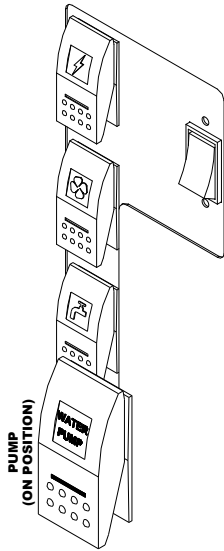


- White switch indicated as water pump
- Normally On with Accessory Pump Attached
- Controls Power to the Pump
- Top Square indicator lit with Main Power on. It will remain lit even when water distiller not operating.
- Bottom rectangular bar indicator light is on when pump is running and power safety float is on, indicating water is in holding tank.

## Overheat Reset Switch – Manual Reset

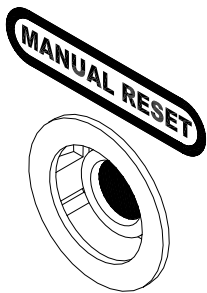

- Recessed into the front of the water distiller head front cover.
- The reset button will shut the unit off if the water distiller has overheated, it may be reset once the water distiller has cooled off. If the situation continually repeats itself this may also indicate a problem and should be looked at by a service center.
- The reset button is a safety feature and is designed to shut the water distiller down should it overheat.
- Push your finger through the hole in the front cover labelled 'Manual Reset' to reset. A snap will be heard when the switch is reset and distilling can resume.


## Fuse – 1 Amp Slow Blow 240V

 

- This is a feature to protect the pump option electrical circuit and is located on the bottom of the water distiller head at the rear.
- Always replace with the proper fuse.


## Before Initial Water Distiller Operation

1. Ensure the boiling and storage tank lids are in place and tight.
2. Make sure all control switches are turned off. (See Operation-Controls Section if not sure how to operate).
3. Ensure the water supply saddle valve is turned fully on by turning counter-clockwise from tight.

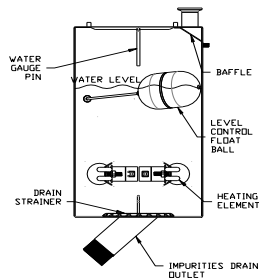

**Boiling Tank Water Gauge Pin Diagram**

4. Plug Water distiller into the designated outlet.
5. Turn Power, Fan, Element and Water Pump switches ON
6. Water should be entering the boiling tank. Remove the boiling tank lid to check. Replace lid if water is entering. The fan and heater should turn on as soon as the water level is above the heating element.
7. Check for leaks around the saddle valve and supply pipe and around the water solenoid on the water distiller head. See **Water Solenoid Valve in Water Distiller Head Diagram** below.

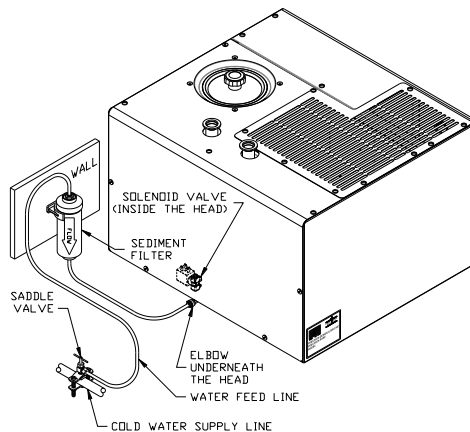


**Water Solenoid Valve in Water Distiller Head Diagram**

8. If there are no leaks and the water distiller is operating as described above, shut all control switches off and perform steam sterilization on the water distiller head, filter canister and storage tank as described in the **Maintenance and Cleaning** section.

## Normal Operation

1. Ensure boiling and storage tank lids are in place and tight.
2. Ensure all electrical plugs are properly connected and the water supply valve is turned on.
3. Turn the Power, Fan, Element and Water switches to the ON position. Water will enter the boiling tank, the heating element will energize and the cooling fan will start.
4. The water distiller will continue operating and distilling water until the storage tank is full. At this time the water distiller will turn off until the storage tank is drained to approximately 2/3 full and then the automatic water distiller will start producing distilled water again.
5. To prevent a buildup of scale and contaminants in the boiling tank, it is recommended that the impurities from the boiling tank be drained after each distillation process or ten gallons of distilled water. Routinely draining the impurities will prolong the life of the water distiller and reduce cleaning.

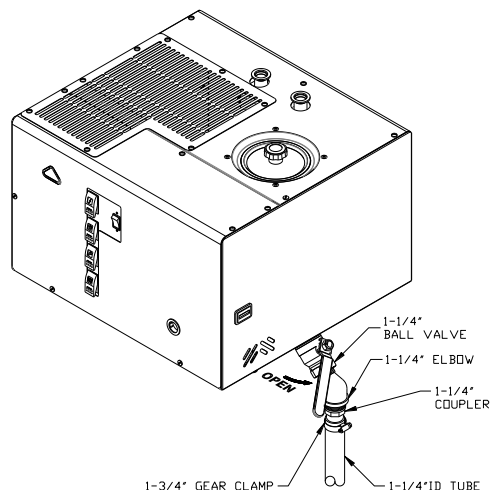

**Manual Drain Valve Location Diagram**

6. Refer to the **Manual Drain Valve Location Diagram** above. The water distiller boiling tank can be drained by opening the ball valve and draining into a suitable floor drain or container (valve is shown in the close position). The drain may be operated automatically by installation of the Optional Automatic Electric Drain System. See **PWS AED-2 Automatic Electric Drain Kit Installation** in the **Optional Accessories Section** for a diagram of the kit and installation instructions

# Maintenance and Cleaning

## Introduction


A water distiller effectively removes the impurities and chemicals from your water and returns the taste of pure water so that it is pleasing and healthy to drink. Also used in Laboratories, Dental Offices, Hospitals and any other location that requires Pure Clean Water.

It is important to also keep the water distiller clean so that it can perform properly and efficiently. Regular cleaning and maintenance will allow the water distiller to continually provide pure water for a very long time.

**NOTE:** Regular Cleaning is much easier than trying to clean after a prolonged period of time!

## Regular Inspection and Cleaning of the Boiling Tank

1. To prevent a buildup of scale and contaminants in the boiling tank, it is recommended that the impurities from the boiling tank be drained weekly or daily if used in a high volume location. There may be an off colour line at the seams of the boiler tank, this is caused by the TIG welding process used during manufacturing. This is normal and is not a sign of any concern.

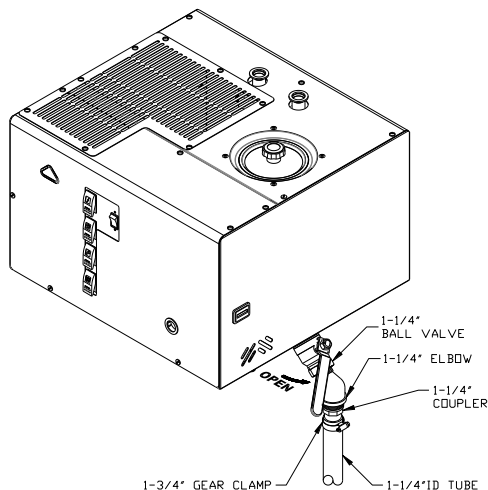

### Manual Drain Valve Location Diagram


2. Refer to the **Manual Drain Valve Location Diagram** above. The water distiller boiling tank can be drained by opening the ball valve and draining into a suitable floor drain or container (ball valve is shown in the open position).

3. The drain may be operated automatically by installation of the Optional Automatic Electric Drain System. See **PWS AED-2 Automatic Electric Drain Kit Installation** in the **Optional Accessories Section** for a diagram of the kit and installation instructions.
4. With the manual drain valve or the Automatic Electric Drain it is important to develop a regular maintenance routine. Every two weeks, take a look inside the boiling tank when the water distiller is cool.
5. Check for scale build up on the walls of the boiler tank and the heating element. The heating element is the most critical. If there is 1/8" of build up or more on the heating element, then it is time to clean the boiling tank using the descaler cleaner. This process is described in the next section.
6. After checking the boiling tank every two weeks for about three months, you will be able to set up your own schedule as to how often the boiling tank needs to be cleaned with the descaler cleaner. Distilled water quantity use and raw water quality will determine your schedule.

## Cleaning the Boiling Tank using the Cleaner Descaler

1. Turn all switches off and allow the water distiller to cool down.
2. If the water distiller is equipped with an Automatic Electric Drain, close the ball valve behind the water distiller head.
3. Remove any loose scale from inside the boiling tank by hand through the boiler lid. Remove the drain strainer and inspect for sediment or plugged holes. Clean if necessary. See the **Boiling Tank Strainer Removal Diagram** below to see how to remove the strainer.

**Boiling Tank Strainer Removal Diagram**

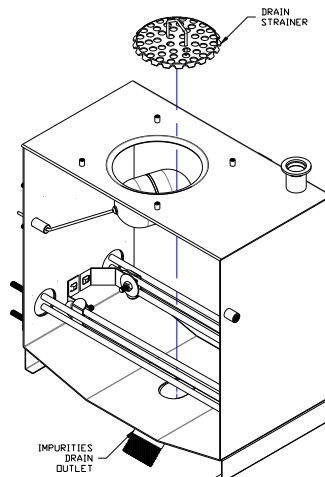


4. Remove the filter canister and place the sterilization tube onto the coil tube to by-pass the storage tank. See **Steam Sterilization of Water Distiller Head** in this **Maintenance and Cleaning** section for more details.

5. Sprinkle small amounts of descaler cleaner at a time to the boiling tank to avoid frothing.

**CAUTION:** Descaler is a corrosive and poisonous substance. Read safety precautions on the package. As the initial water is added to the descaler in the boiling tank it will produce a bubbling foam substance. Do not overfill the boiling tank. Always leave boiling tank lid off when ever the boiling tank is being descaled to reduce fumes travelling through the cooling coil. Dispose of the first gallon of distilled water as a precaution.

6. Fill the boiling tank half full with hot tap water.
7. Mix the cleaning solution well to dissolve the descaler in the water.
8. Fill up the remaining portion of the boiling tank with hot tap water to the bottom of the water gauge pin. See **Inside Boiling Chamber Diagram** below.

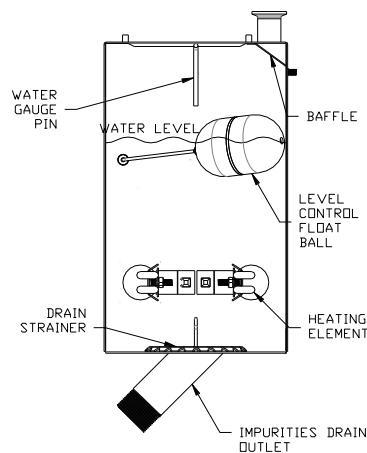

**Inside Boiling Chamber Diagram**

9. Let the solution stand overnight. Leave the boiling tank lid off during cleaning to prevent descaler fumes from entering the cooling coil.
10. The next morning or when the mineral content is soft, drain the boiling tank using the ball valve. Remove any remaining loose scale by hand using rubber gloves.
11. Repeat cleaning if necessary.
12. Once all the scale has been removed, rinse the boiling tank several times with warm tap water and remove any large pieces of scale by hand.
13. Replace the drain strainer. The strainer stops large impurities from plugging the ball drain valve or Automatic Electric Drain valve.
14. Replace the boiling tank lid and complete steam sterilization process on the boiling tank. See **Steam Sterilization** in this **Maintenance and Cleaning** Section. Reinstall the filter canister.
15. The boiling tank is now clean and ready to produce pure water again.

## CLEANING THE BOILING TANK USING REGULAR WHITE VINEGAR

1. Pour full strength vinegar to, and slightly over, the visible water line.
2. Let Stand overnight or longer. (*Heat up to near boiling if mineral build-up is excessive to speed up and aid the cleaning process.*)
3. Drain out the vinegar, use a cloth and wipe out the sediment remaining.
4. If distiller is not clean, the vinegar is not strong enough, refill with full strength vinegar once again and repeat #2-#3.
5. Once the scale has been removed, rinse the boiling tank several times with warm tap water.
6. Complete the steam sterilization process on the boiling tank. See **Steam Sterilization** section. Reinstall the filter canister.
7. Machine is now ready for use.

**Please Note:** This is a 'Green' alternative to clean the boiling tank, depending on your water source; you may have to use the Descaler Cleaner product supplied through your dealer.

Always remember to drain the impurities out of your boiling tank after each use! This will cut down on the amount of manual cleaning required.


You may also take advantage of the **Precision Auto Drain** Accessory to automatically drain the impurities out of your boiling tank after each cycle is completed. Ask your Precision Dealer about the **PWS AED-2**, Automatic Drain Kit!

## Replacing Charcoal in Charcoal Filter Canister

**NOTE:** Replace charcoal in filter every month or every 500 gallons of distilled water.

1. Turn all switches off and allow the water distiller to cool down.

### Charcoal Replacement Diagram

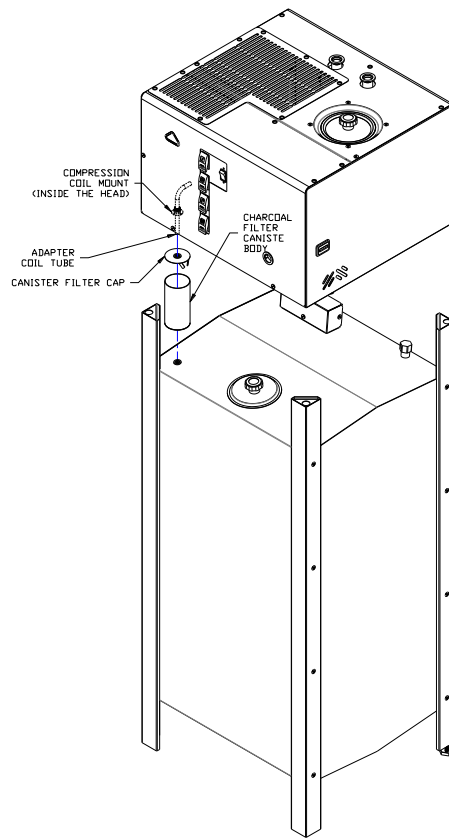

2. Refer to the **Charcoal Replacement Diagram** above. Remove the complete charcoal filter canister by lifting the front corner of the water distiller head.
3. Over a sink or suitable garbage can, remove the lid of the filter completely and empty charcoal from canister and rinse.
4. Fill canister 2/3 full with new charcoal and rinse over a sink or pail with approximately 2 cups of distilled water until water runs clear.
5. Press the filter cap back on to the filter canister.
6. Lift the corner of water distiller head and slide the filter into the storage tank and lower the water distiller head so the 3/8" tube enters the top of the filter.

# Sterilization

## Introduction:

Steam Sterilization should be performed on the water distiller boiler, filter canister and storage tank before the water distiller is used for the first time or after a period of storage or non-use. After initial sterilization, the boiler should be steam sterilized after any maintenance is performed and/or cleaning including the descaling process. The storage tank requires cleaning and steam sterilization after any maintenance, or if there are any problems with the quality of the distilled water.

If there is a water quality concern and the system may be contaminated, it is important to first remove the source of contamination and remove all contaminated debris and then complete a Liquid Sterilization before a Steam Sterilization.

## Liquid Sterilization of Storage Tank and Optional Pump Water Line System

**NOTE:** This is performed whenever it is suspected that the water distiller head, storage tank or pump water line system are contaminated.


1. It important to first remove the source of contamination and remove all contaminated debris before liquid sterilization.
2. Drain the water distiller and water lines as much as possible.

**NOTE:** Liquid Sterilization Solutions can be made from Household bleach. The bleach should be diluted to 100-200 PPM. Products such as Javex, have 6% Sodium Hypochlorite and should diluted by placing 3 teaspoons per gallon of water. Always use Chlorine bleach that does not contain any other ingredients. Alternatively, Hydrogen Peroxide solutions may be used by placing 3 teaspoons per gallon of water.

3. Add 2 gallons of Liquid Sterilizing solution to the water distiller storage tank. If desired, spray some of the solution throughout the inside of the storage tank. You may need more sterilization solution if you are using more that 25 feet of pump water line.
4. Run the pump by opening the faucet or running your dispenser to put sterilizing solution through all water lines and dispensers. All the lines will be full of sterilization solution when you can smell the solution at the faucet. Wait 20 minutes.
5. Rinse the entire inside of the storage tank with at least 2 gallons of distilled water. Run the pump to clear the lines of the sterilizing solution.
6. Repeat the flushing of the storage tank with distilled water 2-3 times, rinsing the pump and all water lines at the same time. Continue until no chlorine smell is coming from the faucet.
7. Complete a Steam Sterilization of the boiling and storage tanks.

## Steam Sterilization of Water Distiller Head

1. Make sure the water distiller is cool before starting.

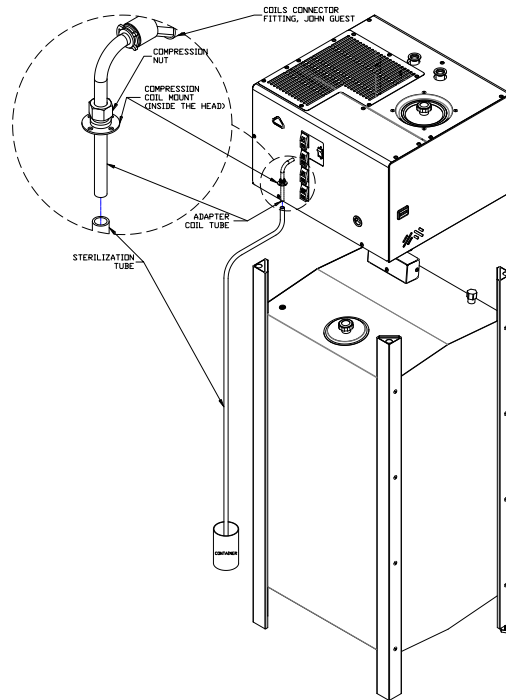


### Water Distiller Head Steam Sterilization Diagram

2. Refer to the **Water Distiller Head Steam Sterilization Diagram** above. Lift the front corner of the water distiller head.
3. Remove the charcoal filter.
4. Install the sterilization tube. Place the sterilization tube on the 3/8" stainless steel filter inlet tube on the bottom of the water distiller head.
5. Place the other end of the steam sterilization tube into a container as it will drip water and steam.

**NOTE:** If Water Distiller is filled manually, fill the boiling tank with water to the bottom of the water gauge pin.

6. If you are completing the steam sterilization for the first time, plug the water distiller into the dedicated wall outlet.


### Steam Sterilization Operation Switches Diagram

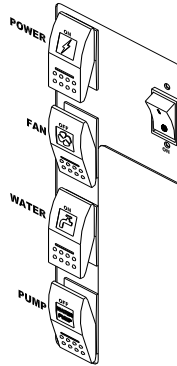

7. Refer to **Steam Sterilization Element Switches Diagram** above. Turn only the power and water switches ON. Leave the fan switch OFF. As the water distiller continues to heat up, it will sterilize the water distiller with steam by allowing pure steam to travel out of the cooling coil. Water and steam will drip from the sterilization tube. **Caution: The Water Distiller is extremely hot during sterilization.**
8. Leave the water distiller on for 1 hour.
9. After sterilization cycle is complete, turn the fan switch ON and allow any water in the cooling coil to drain. Leave the water distiller running with the fan on for about 15 minutes.
10. The water distiller will be very hot so turn all switches OFF (power, element, water, fan) and let the water distiller cool down for approximately 1 hour.
11. Remove the sterilization drip tube by pulling the plastic tube off the stainless steel charcoal filter inlet tube (keep the sterilization tube for future sterilizations).
12. Replace the charcoal in the charcoal filter canister. See **Replacing Charcoal in Charcoal Filter Canister** in this **Maintenance and Cleaning Section**.
13. The water distiller head is sterilized and ready for operation.

## Steam Sterilization of Water Distiller Head, Filter Canister and Storage Tank

1. Make sure the water distiller is cool before starting.

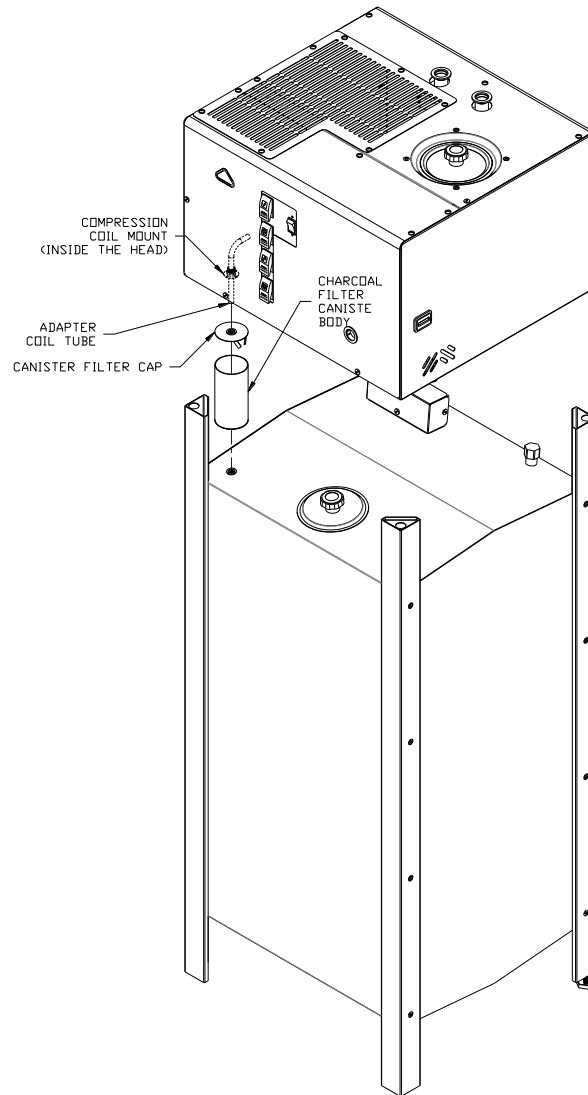


### Water Distiller Head, Filter Canister and Storage Tank Steam Sterilization Diagram

2. Refer to the **Water Distiller Head, Filter Canister and Storage Tank Steam Sterilization Diagram** above. Lift the front corner of the water distiller head.

3. Remove the charcoal filter canister. Remove all charcoal and rinse until clean. Replace empty filter canister between water distiller head and storage tank

**NOTE:** If Water Distiller is filled manually, fill the boiling tank with water to the bottom of the water gauge pin.

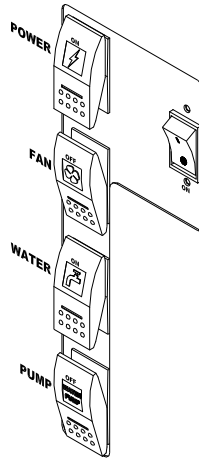

#### Steam Sterilization Operation Switches Diagram

4. Refer to **Steam Sterilization Operation Switches Diagram** above. Turn only the power and water switches ON. Leave the fan switch OFF. As the water distiller continues to heat up, it will sterilize the water distiller head, filter canister and storage tank with steam by allowing pure steam to travel out of the cooling coil. **Caution: The Water Distiller is extremely hot during sterilization.**
5. Leave the water distiller on for 1 hour.
6. After sterilization cycle is complete. Turn the fan switch ON and allow any water in the cooling coil to drain. Leave the water distiller running with the fan on for about 15 minutes.
7. The water distiller will be very hot so turn all switches OFF (power, water, element, fan) and let the water distiller cool down for approximately 1 hour.
8. Remove one of the ½" caps on the base of the storage tank to drain tank completely.

- 9.** Replace the charcoal in the charcoal filter canister. See **Replacing Charcoal in Charcoal Filter Canister** in this **Maintenance and Cleaning Section**.
- 10.** The water distiller head, filter canister and storage tank are sterilized and ready for operation.

## Maintenance Schedule Table

|                                                        | Initially | Weekly | Monthly | Semi-Annually | Annually | As Needed |
|--------------------------------------------------------|-----------|--------|---------|---------------|----------|-----------|
| 1) Check Scale Build Up.                               |           | X      |         |               |          | X         |
| 2) Change Charcoal in Charcoal Filter Canister.        | X         |        | X       |               |          | X         |
| 3) Clean Boiling Tank using Cleaner Descaler.          |           |        | X       |               |          | X         |
| 4) Steam Sterilization of Boiling Tank after cleaning. |           |        |         |               |          | X         |
| 5) Steam Sterilization of Boiler and Storage Tanks.    | X         |        |         |               |          | X         |
|                                                        |           |        |         |               |          |           |

## Owner Maintenance Record Table

|              | Change Charcoal in Charcoal Filter Canister | Clean Boiling Tank using Cleaner Descaler | Steam Sterilization of Boiling Tank | Steam Sterilization of Boiling and Storage Tanks |  |
|--------------|---------------------------------------------|-------------------------------------------|-------------------------------------|--------------------------------------------------|--|
| Date         | Jan 21/03                                   |                                           |                                     |                                                  |  |
| Completed By | BDR                                         |                                           |                                     |                                                  |  |
| Date         |                                             |                                           |                                     |                                                  |  |
| Completed By |                                             |                                           |                                     |                                                  |  |
| Date         |                                             |                                           |                                     |                                                  |  |
| Completed By |                                             |                                           |                                     |                                                  |  |
| Date         |                                             |                                           |                                     |                                                  |  |
| Completed By |                                             |                                           |                                     |                                                  |  |
| Date         |                                             |                                           |                                     |                                                  |  |
|              |                                             |                                           |                                     |                                                  |  |
| Completed By |                                             |                                           |                                     |                                                  |  |

## Troubleshooting

**Caution! Always Disconnect Water Distiller Electrical plug and Let the Water Distiller cool down completely before completing any Troubleshooting.**

| PROBLEM                                                            | CAUSE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A) Water distiller does not operate.</b>                        | <ol style="list-style-type: none"> <li>1. Water distiller is not plugged in securely to the wall outlet or the circuit breaker is off.</li> <li>2. Power switch on the water distiller is turned off.</li> <li>3. Reset button has shut the unit off. The reset button will shut the unit off if the water distiller has overheated, it may be reset once the water distiller is cooled off. This may also indicate a problem and should be looked at by a service center. The reset button is a safety feature and is designed to shut the water distiller down should it overheat. Push your finger through the hole in the front cover labelled 'Manual Reset' to reset.</li> <li>4. Reset button is faulty and needs to be replaced. Call Service Center.</li> <li>5. The Storage tank is full of water. The storage tank water level must be lowered below 2/3 before the water distiller will operate.</li> <li>6. Saddle valve is turned off. Turn it on.</li> </ol> |
| <b>B) Water is coming out from the top of the charcoal filter.</b> | <ol style="list-style-type: none"> <li>1. Charcoal is old and compacted. Replace coconut charcoal. See Maintenance section- Replacing Charcoal in Charcoal Filter Canister.</li> <li>2. Water solenoid valve has malfunctioned and is stuck open allowing water to flow from the boiling tank to the storage tank before it is distilled. Call Service Center.</li> <li>3. The boiler fill micro switch requires adjustment or is faulty and needs to be replaced. The boiler tank overfills and flows into the charcoal filter. Call Service Center.</li> <li>4. Check to see that boiler tank water level float is floating. If it is not floating properly this could be the problem. Call Service Center.</li> <li>5. Charcoal filter is more than 2/3 full. There must be an air gap between the charcoal and the top of the filter. Remove Charcoal filter and make sure charcoal filter is only 2/3 full.</li> </ol>                                                 |

**PROBLEM****CAUSE**

|                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>C) Steam or water is escaping from the top of the cooling coil.</b>                                                                  | <ol style="list-style-type: none"><li>1. The cooling coil is equipped with a gas release vent, a very small hole in the top of the coil. This is to release certain volatile gases. Steam may escape from this hole. This is normal.</li><li>2. If little or no water is being produced the cooling coil may have become disconnected from the boiling tank. Call Service Center.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>D) Charcoal Filter is very hot and steam is escaping from the filter.</b>                                                            | <ol style="list-style-type: none"><li>1. The fan switch is turned off. Check Switch.</li><li>2. Fan motor is not running properly, may be defective, or the fan motor switch may be defective. Call Service Center.</li><li>3. Cooling coil fins are plugged with dust, dirt, or grease. Remove and clean or take to a service center for maintenance.</li><li>4. The location of the water distiller does not provide enough airflow for good cooling. Move the water distiller to an area with more air movement.</li></ol>                                                                                                                                                                                                                                                                                          |
| <b>E) Boiling tank will not fill with water.</b>                                                                                        | <ol style="list-style-type: none"><li>1. The self-piercing saddle valve is turned off. Check and turn on if necessary.</li><li>2. The direct water feed line may be obstructed or kinked. Check and fix.</li><li>3. The water switch and/or the power switch are off. Check switches.</li><li>4. The float in the boiling tank may be stuck. Check by opening boiler tank and lifting gently up on ball float.</li><li>5. Opening for water feed line inside the boiling tank may be scaled up. Check by opening boiler tank and checking scale build up.</li><li>6. Manual reset button has tripped. See A) 3. above.</li><li>7. Storage tank is over 2/3 full. Normal Operation.</li><li>8. Water Fill Micro Switch Faulty. Call Service Center.</li><li>9. Solenoid valve is faulty. Call Service Center.</li></ol> |
| <b>F) Water distiller may start to boil, then shuts off. It may restart after cooling down. Very small amount of water is produced.</b> | <ol style="list-style-type: none"><li>1. Faulty Reset button. After letting water distiller cool down and trying to reset several times, call Service Center.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

**PROBLEM****CAUSE**

|                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>G) Water distiller runs properly but little or no water is produced.</b> | <ol style="list-style-type: none"><li>1. Improper Heating Elements are installed or Heating Elements are faulty. Call Service Center.</li><li>2. Auto drain valve is partially stuck open due to scale build up in the valve. Check valve and/or flush by pouring water through the top of the boiler tank opening.</li><li>3. Auto drain valve is open because it is not plugged into the water distiller head. Check and re-connect.</li><li>4. Boiler tank lid is loose. Check by moving Boiler Tank Lid Knob.</li><li>5. Reset button may be defective or weak. See A) 3 above.</li><li>6. Water supply may be restricted. Turn off saddle valve. Remove Feed Water line from back of water distiller. Place Feed Water line into a pail, turn on saddle valve and check water flow.</li></ol> |
| <b>H) Strange taste in Distilled Water.</b>                                 | <ol style="list-style-type: none"><li>1. Boiling tank and/or storage tank may require cleaning. See maintenance section on cleaning water distiller.</li><li>2. Boiling tank has over filled, float system or water solenoid has failed and allowed un-distilled water to overflow into the cooling coil. Open boiler tank and check float operation.</li><li>3. Charcoal filter requires new Coconut Charcoal.</li><li>4. Auto-Drain has malfunctioned. Check boiling tank for scale build up. See maintenance section.</li><li>5. Distilled water line may need cleaning. See maintenance section.</li></ol>                                                                                                                                                                                     |
| <b>I) Fan does not operate automatically.</b>                               | <ol style="list-style-type: none"><li>1. Fan switch is in OFF position. Check Switch.</li><li>2. Fan motor may be defective. Call Service Center.</li><li>3. Storage tank is full and the water distiller has shut itself off until the storage tank is only 2/3 full.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

| <b>PROBLEM</b>                                                                | <b>CAUSE</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>J) With the Pump Option, there is no water at the faucet or Dispenser.</b> | <ol style="list-style-type: none"> <li>1. Pump plug on the water distiller head is loose. Check plug at rear of water distiller head.</li> <li>2. Storage tank is empty. Water distiller has quit. See A) above.</li> <li>3. There is no power to the pump. Check to make sure the pump is plugged into the water distiller head. Check to make sure there is power at the wall outlet. Check pump switch on front of unit.</li> <li>4. Fuse on the water distiller head needs replacing.</li> <li>5. Pump motor failure. Call Service Center.</li> <li>6. Kinked water line between the pump and the faucet. Check water line for kinks.</li> <li>7. Pump float in the storage tank is stuck or faulty. Open water distiller storage tank and check level sensor. Call Service Center.</li> </ol> |
| <b>K) With Pump Option, pump starts and stops without drawing any water</b>   | <ol style="list-style-type: none"> <li>1. Small leak in the water line, faucet or dispenser. Check water line for leaks.</li> <li>2. Loose fittings on pump or lines. Check fittings for leaks-with proper wrench. See Pump Kit Installation Section.</li> <li>3. Check-valve in pump may be stuck open. Call service center.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>L) Water distiller does not operate and storage tank is empty.</b>         | <ol style="list-style-type: none"> <li>1. Storage tank float assembly is faulty. Call Service Center.</li> <li>2. Storage tank level sensor relay is faulty. Call Service Center.</li> <li>3. Check the Solenoid Valve for any blockage.</li> <li>4. Check if the Saddle Valve is turned on and not plugged off with debris.</li> <li>5. Control Cable is not connected. Check connection between water distiller head and storage tank.</li> <li>6. Check to make sure there is power at the wall outlet.</li> <li>7. Make sure all control switches are on.</li> </ol>                                                                                                                                                                                                                           |
| <b>(M) Distiller does not seem to produce as much water as specified.</b>     | <b>See Section in Guide:</b> 10 Factors That Will Affect Your Water Distiller Production.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

**Contact any Precision Water System Service Center to correct any problems with your water distiller that are not covered in this guide.**

To locate a Service Center in your area contact the manufacturer at:


Precision Design &  
Manufacturing Inc.  
9024 - 100 Street,  
Westlock, Alberta, Canada  
T7P 2L4  
<http://www.precisioncanada.com>  
e-mail:  
info@precisioncanada.com  
  
Phone: (780) 349 4933

## Optional Accessories

### PWS APK4- Pump Kit

The PWS APK-4 Pump Kit allows the convenience of having distilled water at a sink or to a dispenser. The pump also allows you to connect other appliances that would benefit from distilled water like ice makers, water dispensers, humidifiers etc. The PWS APK-4 Pump Kit mounts near the distiller.

Your Optional pump kit has been shipped in one box. The diagram below shows all of the parts that will be in the pump kit box.

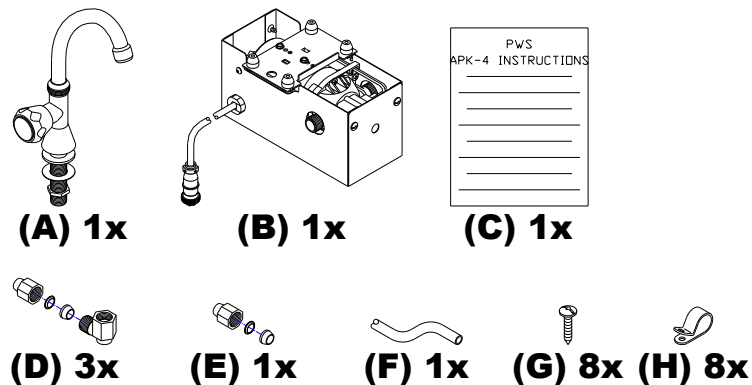

#### PWS APK-1 Pump Kit Box Components

#### PWS APK-1 Pump Kit Box Check Off List

Check


| List                         | Part No. |                                        |
|------------------------------|----------|----------------------------------------|
| <input type="checkbox"/> (A) | 080052   | 1 – Chrome Faucet                      |
| <input type="checkbox"/> (B) | 520143   | 1 - 3.0 GPM Pump Assembly              |
| <input type="checkbox"/> (C) | 097051   | 1 - PWS APK-4 Instruction Sheet        |
| <input type="checkbox"/> (D) | 034002   | 3 - Elbow, 90, 1/2" FPT x 1/2" OD Tube |
| <input type="checkbox"/> (E) | 034003   | 1 - Nut/Cone/Ring Set                  |
| <input type="checkbox"/> (F) | 052001   | 25' - 1/2" OD Plastic Water Line       |
| <input type="checkbox"/> (G) | 010008   | 8 - #10 x 1" Wood screws               |
| <input type="checkbox"/> (H) | 054006   | 8 - White Wall Mount Line Clips        |

# PWS APK-4 Pump Kit Installation


## TOOLS REQUIRED:

### For PWS APK-4 Pump Kit Installation

- (A) Basin Wrench
- (B) #2 Robertson Screwdriver
- (C) 10" Adjustable Wrench
- (D) 3/8" Drill
- (E) 3/8" Nut Driver **or**
- (F) Pliers **or**
- (G) Ratchet with 3/8" socket
- (H) Utility Knife
- (I) 5/8" Wood Bit (minimum length of 8")
- (J) 7/8" Hole saw for sink

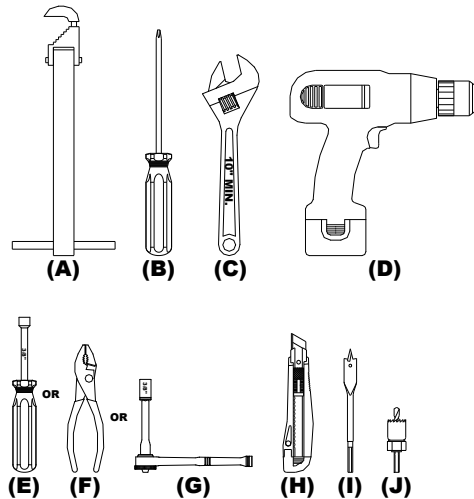

1. Remove all loose pieces from the pump kit box and save all packaging until all the parts are identified and located. If any parts are missing or if you feel you have been given the wrong part, DO NOT return the pump kit. Contact your dealer for the required parts. They will be pleased to assist you.
2. Disconnect the electrical cord and unscrew the Control Cable plug counter-clockwise. If the water distiller has been in use before, be sure to turn off the feed water line saddle valve. Mount the pump on a wall or cabinet near your water distiller.
3. The **Automatic Pump Mounting Diagram** on the next page, shows the correct inlet/outlet orientation for the pump.
4. Remove one of the Grey 1/2" cap from the 1/2" drain nipple on the bottom of the storage tank with a 10" adjustable wrench or pliers.
5. Screw one 1/2" FPT x 1/2" elbow to the nipple where the cap was removed. Tighten using a 10" adjustable wrench so that the elbow points towards the outlet of the pump (No thread sealant is required as these fittings seal with a compression cone).
6. Remove any blue caps from the pump inlet and outlet by unscrewing counter-clockwise (pliers may be required).

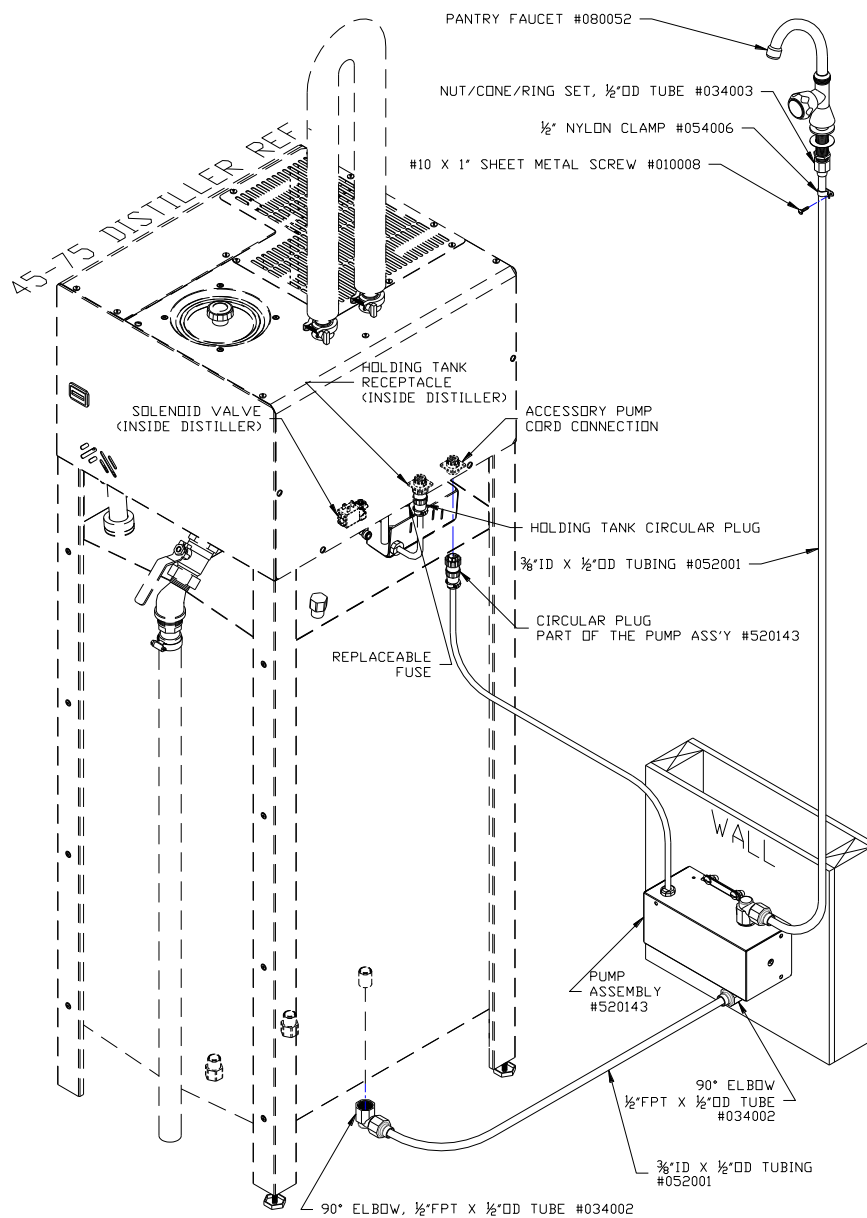

### Automatic Pump Mounting Diagram


7. Remove the Nut, Cone and Ring from the remaining two  $\frac{1}{2}$ " FPT x  $\frac{1}{2}$ " elbows by unthreading counter-clockwise. Keep these in order and available, do not lose them!
8. Screw an elbow onto the inlet side of the pump. Tighten using a 10" adjustable wrench and position towards the first elbow installed on the storage tank drain. Use caution not to over-tighten the elbow onto the pump.
9. Remove the Nut, Cone and Ring from the tank drain elbow.

- 10.** Cut a section of 1/2" OD water line to fit between tank drain elbow and pump inlet elbow.

**NOTE:** Measure the distance between elbows and add 1 1/2" to allow for inserting hose into elbows: hose length of about 11 inches. See the following Diagram.

### PWS APK-4 Hose Installation Diagram

- 11.** Slide a Nut/Cone/Ring over each end of the 1/2" OD tube and insert the hose into each elbow. Slide the nut to the threads and tighten using a 10" adjustable wrench. Use caution. Do not over tighten.
- 12.** Screw the third elbow to the outlet of the pump. Tighten with a 10" Adjustable wrench in a position that will work for routing the hose to the faucet (usually toward the ceiling or floor). Be careful not to over tighten as you could damage the pump.

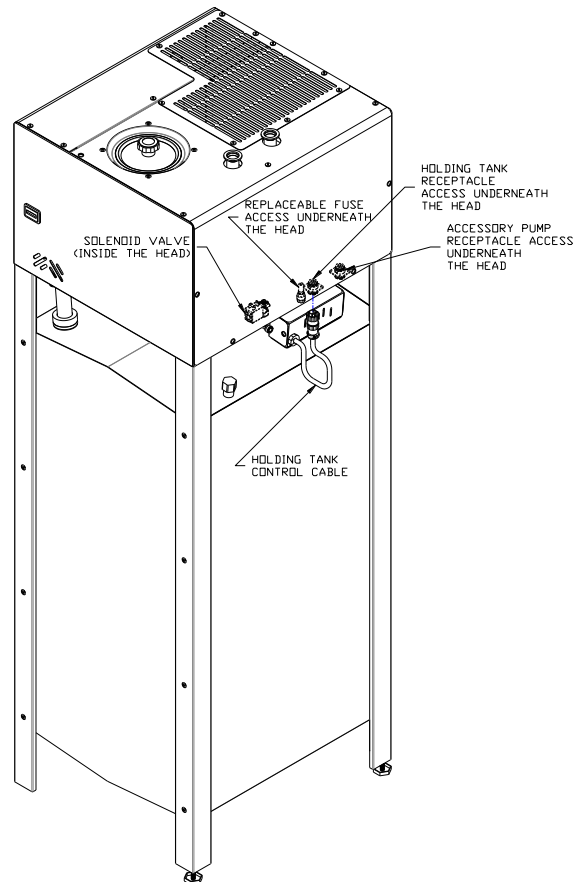


**Holding Tank Control Cable Installation Diagram**

- 13.** Check that all fittings are tight.

## Faucet and Water Line Installation for PWS APK-4

1. Now you are ready to attach the pantry faucet to the sink. To install the faucet you will need to drill a 7/8" hole in the sink and counter where you want the faucet.

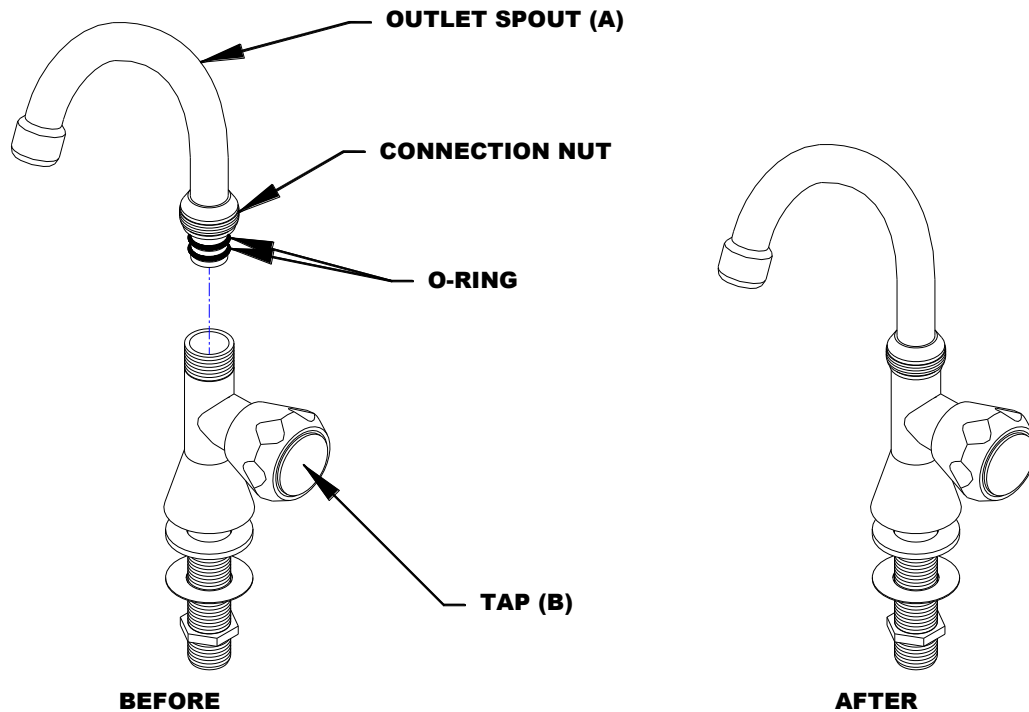

### Pantry Faucet Assembly Diagram

2. See **Pantry Faucet Assembly Diagram** above. Connect the two pieces of the pantry faucet by first wetting the O rings on the outlet spout (A) with water or dish soap. Be careful not to damage the O rings when inserting. Slowly rock the spout as you push it into the tap section (B). Use a cloth wrapped around the nut first to prevent damage to the nut when tightening. Turn the nut on the spout with pliers so that it is snug. Do not over tighten. The O rings will provide the seal for the water. The spout can be swivelled for convenience after installation is complete.
3. Install the faucet gasket on the faucet threads and insert the pantry faucet threaded base through the 7/8" hole in the sink. Secure the faucet to the sink with the faucet nut. Tighten with a basin wrench or pliers.

4. Attach ½" OD water tube to the pump outlet elbow with a ½" Nut/Cone/Ring. Tighten with a 10" adjustable wrench or basin wrench.
5. Route the ½" OD water tube from the water distiller pump to the sink faucet. When routing the water line, consider other possible distilled water uses along the route.
6. Attach the ½" OD water line to the faucet with a ½" Nut/Cone/Ring. Tighten with a 10" adjustable wrench or basin wrench. Secure the water line using ½" wall mount line clips and #10 x 1/2" screws.
7. If the Automatic Electric Drain option is installed on your water distiller, see the **PWS AED-2 Plumbing Diagram** on page 55. Reconnect the four-pin circular plug from the Automatic Drain Kit into the receptacle labelled 'Accessory Drain' on the bottom of the water distiller head. If the Automatic Electric Drain option is not installed on your distiller, close the manual drain valve. Connect the wall stabilizer clamp. Connect the feed water line and turn the feed water line saddle valve on. Plug the electrical cord into the wall outlet.
8. It is a good idea to fill your storage tank approximately ½ full with distilled water after you install the pump to check the fittings for leaks. If you do not have any distilled water available, let the water distiller run.


|                                                                                                              |
|--------------------------------------------------------------------------------------------------------------|
| <p><b>NOTE:</b> Keep pump unplugged until you are available to check for leaks upon initial installation</p> |
|--------------------------------------------------------------------------------------------------------------|

9. Once the storage tank is approximately ½ full, connect the seven-pin circular plug from the pump into the receptacle labelled 'Accessory Pump' on the bottom of the water distiller head. Turn the pump switch on and the pump will pressurize your water line. When this happens, check for leaks.
10. To enjoy water at the pantry faucet, open the faucet. The pump will start and stop as required to keep distilled water flowing at the faucet.


# PWS AED-2 Automatic Electric Drain Kit Installation

## TOOLS REQUIRED:

- (A) 12" Adjustable Wrench
- (B) 10" Adjustable Wrench
- (C) Slotted Screwdriver

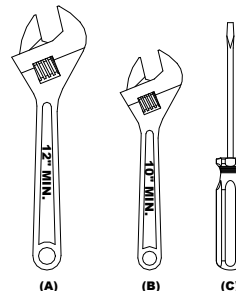

**Introduction:** The PWS AED-2 Automatic Electric Drain Kit is designed to drain the water distiller boiling tank of impurities automatically, so that you don't have to. Every time you distil water and your storage tank fills up, the water distiller will shut off and the Automatic Electric Drain Option will open and drain the boiling tank of all soluble impurities. The boiler will remain empty until the water distiller restarts, then the drain valve will automatically close and let your water distiller boiling tank refill with fresh water and begin the distillation cycle again. Your Optional PWS AED-2 kit has been shipped in one box. The Diagram below shows all of the parts that will be in the PWS AED-1 box.

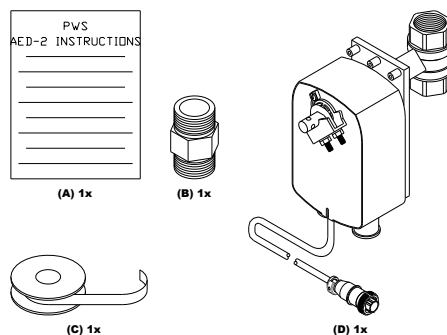

## PWS-AED-1 Box Components Diagram PWS AED-1 Box Check Off List


Check

| List                         | Part No. |                                    |
|------------------------------|----------|------------------------------------|
| <input type="checkbox"/> (A) | 097056   | 1- Instruction Sheet               |
| <input type="checkbox"/> (B) | 030041   | 1-Nipple Hex, 1-1/4" MPT           |
| <input type="checkbox"/> (C) | 080109   | 1- Roll Teflon Tape                |
| <input type="checkbox"/> (D) | 520219   | 1- PWS AED Motor, Ball Valve, 240V |

Remove all loose pieces from the automatic electric drain kit box and save all packaging until all the parts are identified and located. If any parts are missing or if you feel you have been given the wrong part, DO NOT return the automatic electric drain kit. Contact your dealer for the required parts. They will be pleased to assist you.


## Installation

1. If the water distiller has been used without the PWS Automatic Electric Drain, turn off the water distiller, drain the boiling tank and wait for the water distiller to cool off.
2. Disconnect the electrical cord and unscrew the Control Cable plug counter-clockwise. Turn off the feed water line saddle valve, and disconnect the feed water line.
3. If the PWS APK-4 Pump Kit is installed on the water distiller, disconnect the seven-pin circular plug from the Accessory Pump receptacle on the bottom of the water distiller head.

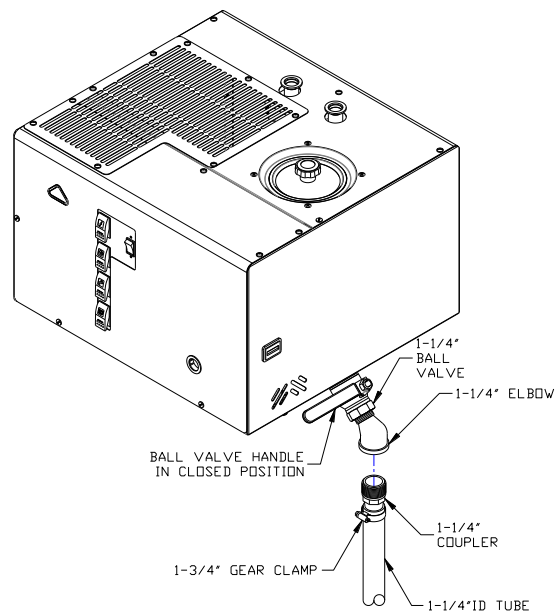

### Drain Tube Removal Diagram

4. Refer to the Drain Tube Removal Diagram above. Remove the gear clamp and drain hose from the barbed coupler on the rear of the water distiller head.
5. Remove the water distiller head from the charcoal filter canister and storage tank by lifting off from the storage tank.
6. Turn your water distiller head upside down.
7. Remove the drain elbow assembly and ball valve assembly using a 12" adjustable wrench. Save this to reinstall as part of the PWS AED-2.

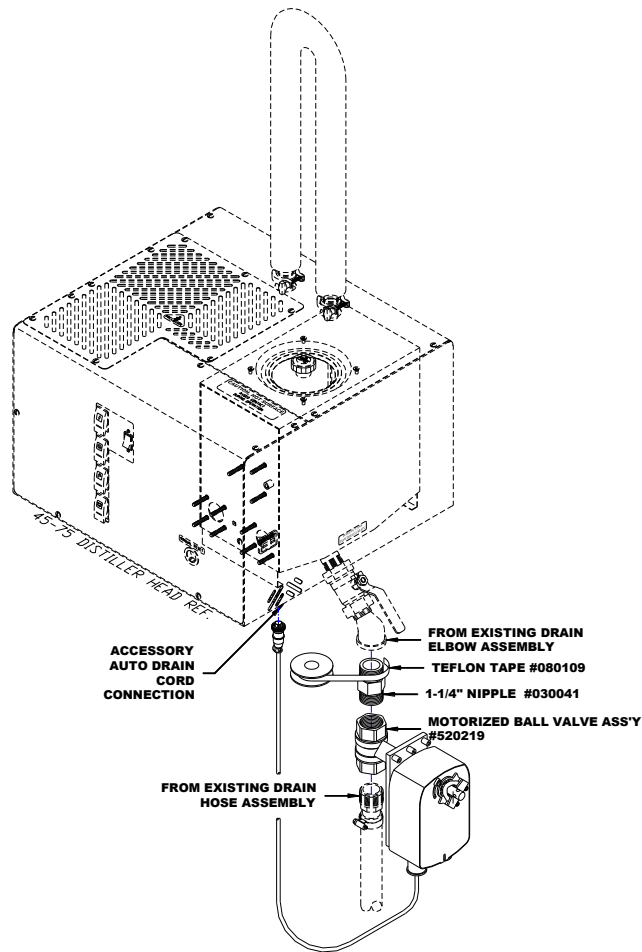

**PWS AED-2 Plumbing Diagram**

- 8.** Refer to the **PWS AED-2 Plumbing Diagram** above. Use Teflon tape on all fittings to seal threads. Thread the Valve Body to the existing drain elbow. An arrow on the valve indicates the direction of flow. Flow is from the water distiller head down to the floor drain.
- 9.** Remove the hose barb connector on the end of the drain line.
- 10.** Install the motorized ball valve assembly with all included fittings as shown in the diagram above
- 11.** Tighten using a backup wrench to ensure the tank fitting does not bend.

- 12.** After checking that all fittings are tight, return the water distiller head to the upright position and reinstall on the charcoal filter canister and storage tank. Reconnect the control cable plug on the storage tank to the control cable receptacle on the bottom of the water distiller head by turning the plug until the splines lock and then turn the locking ring until finger tight.
- 13.** Attach the drain hose to the barbed coupler secure with a gear clamp using a slotted screwdriver. Run the drain hose to a suitable floor drain. The drain hose must have an air gap between the end of the hose and the floor drain. The air gap is necessary so that water cannot be siphoned up the drain hose into the boiling chamber and also so that sewage gases do not rise up the drain hose and contaminate the water distiller.
- 14.** Connect the feed water line and turn the feed water line saddle valve on.
- 15.** Connect the four-pin circular plug from the motorized drain valve into the receptacle labelled 'Accessory Drain' on the bottom of the water distiller head. If the PWS APK-4 Pump Kit is installed on the water distiller connect the seven-pin circular plug from the pump into the receptacle labelled 'Accessory Pump'.

**NOTE:** PWS APK-4 Pump and PWS AED-2 cord lengths are designed so they cannot be plugged into the incorrect receptacle.

- 17.** Plug the electrical cord into the wall outlet. Leave the ball valve in the open position during normal operation. The distiller is now ready to operate and drain the boiling tank automatically.

**NOTE:** With the automatic drain kit installed the ball valve is always left open while the water distiller is operating. When the water distiller is shut down for cleaning, the ball valve needs to be closed so the cleaning solution in the boiler tank will not drain out. This procedure is described in more detail in the maintenance section of the guide.


## Additional Options

### Water Distiller Cleaner and Descaler

600 g #500102

1600 g #500103

5kg #500104

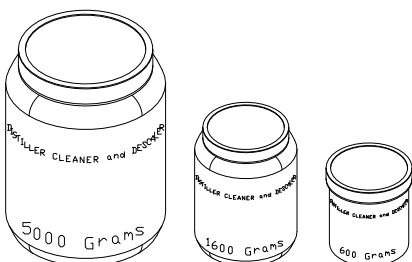


Used for regular maintenance to clean the scale out of the boiling tank. Dissolves water minerals in water distillers, coffeepots, dishwashers or most metal products where water scale is a problem.

### Pure Activated Coconut Charcoal for Refillable Charcoal Filter Canisters

250 g #500106

600 g #500107

1.8 kg #500108

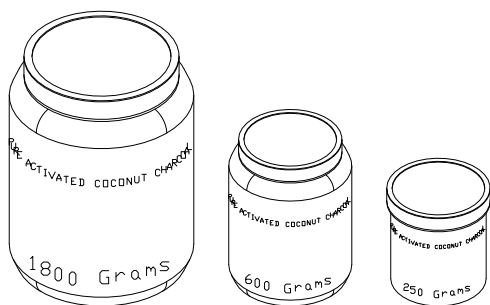


Contains 100% pure crushed coconut shells that have been steam activated at extremely high temperatures creating a porous grade of activated charcoal. This coconut charcoal can be used along with any type of home or commercial water distiller. Coconut charcoal is used to trap any gases or obnoxious odors that may escape the distillation process. Do not use any other charcoal such as aquarium type.

**All Options are available from your Precision Water Systems Dealer or Service Center**

| Wiring List - PWS (45GPD Auto) Part # 520129-S7A |        |       |    |        |                |                      |                                |
|--------------------------------------------------|--------|-------|----|--------|----------------|----------------------|--------------------------------|
| No.                                              | Part#  | Color | Ga | Length | From Conn.     | Series 7<br>To Conn. | To Location                    |
| 1                                                | 520118 | GRN   | 10 | 6"     | #10RING#10-#12 | POWER CORD           | GROUND                         |
| 2                                                | 520118 | BLK   | 10 | 6"     | #10RING#10-#12 | POWER CORD           | TERMINAL BLOCK #3              |
| 3                                                | 520118 | WHT   | 10 | 6"     | #10RING#10-#12 | POWER CORD           | TERMINAL BLOCK #2              |
| 4                                                | 520118 | RED   | 10 | 6"     | #10RING#10-#12 | POWER CORD           | TERMINAL BLOCK #1              |
| 5                                                | 095077 | BLK   | 10 | 28"    | #10RING#10-#12 | #10RING#10-#12       | BREAKER SWITCH 30A             |
| 6                                                | 095078 | RED   | 10 | 28"    | #10RING#10-#12 | #10RING#10-#12       | BREAKER SWITCH 30A             |
| 7                                                | 095079 | BLK   | 10 | 10"    | F250#10-#12    | #10RING#10-#12       | RELAY #4                       |
| 8                                                | 095080 | RED   | 10 | 10"    | F250#10-#12    | #10RING#10-#12       | RELAY #8                       |
| 9                                                | 095081 | BLK   | 10 | 12"    | F250#10-#12    | #10RING#10-#12       | RESET SWITCH #1                |
| 10                                               | 095082 | WHT   | 10 | 5"     | #10RING#10-#12 | #10RING#10-#12       | HEATING ELEMENT 1 A            |
| 11                                               | 095083 | RED   | 10 | 11"    | #10RING#10-#12 | F250#10-#12          | HEATING ELEMENT 1 B            |
| 12                                               | 095084 | WHT   | 10 | 6"     | #10RING#10-#12 | #10RING#10-#12       | HEATING ELEMENT 2 A            |
| 13                                               | 095085 | BLK   | 10 | 7"     | #10RING#10-#12 | #10RING#10-#12       | HEATING ELEMENT 2 B            |
| 14                                               | 095041 | ORG   | 16 | 5"     | F250#14-#16    | #10RING#14-#16       | HOURLMETER                     |
| 15                                               | 095042 | BRN   | 16 | 5"     | F250#14-#16    | #10RING#14-#16       | HOURLMETER                     |
| 16                                               | 095043 | BRN   | 16 | 14"    | #10RING#14-#16 | #10RING#14-#16       | RESET SWITCH #3                |
| 17                                               | 095044 | BLK   | 16 | 19"    | F250#14-#16    | #10RING#14-#16       | TERMINAL BLOCK #3 BLK          |
| 18                                               | 095045 | RED   | 16 | 13"    | F250#14-#16    | #10RING#14-#16       | TERMINAL BLOCK #9 RED          |
| 19                                               | 095046 | BRN   | 16 | 12"    | F187#14-#16    | F250#14-#16          | LOWER MICROSWITCH NC           |
| 20                                               | 095047 | ORG   | 16 | 13"    | BARE           | PIGG                 | FAN MOTOR-N                    |
| 21                                               | 095048 | GRN   | 16 | 27"    | PIGG           | PIGG                 | SOLENOID VALVE A               |
| 22                                               | 095049 | WHT   | 16 | 10"    | FPIN           | F250#14-#16          | HOLDING TANK RECEPTACLE #2     |
| 23                                               | 095050 | BRN   | 16 | 33"    | F250#14-#16    | F250#14-#16          | WATER SWITCH #6                |
| 24                                               | 095051 | BLU   | 16 | 20"    | F250#14-#16    | BARE                 | FAN SWITCH #3                  |
| 25                                               | 095052 | GRN   | 16 | 17"    | F250#14-#16    | F250#14-#16          | HEATER SWITCH #2               |
| 26                                               | 095053 | BLK   | 16 | 14"    | F250#14-#16    | F250#14-#16          | WATER SWITCH #2                |
| 27                                               | 095054 | BRN   | 16 | 13"    | F250#14-#16    | F250#14-#16          | PUMP SWITCH #2                 |
| 28                                               | 095055 | ORG   | 16 | 30"    | FPIN           | F250#14-#16          | HOLDING TANK RECEPTACLE #1     |
| 29                                               | 095056 | ORG   | 16 | 14"    | F250#14-#16    | F187#14-#16          | HEATER SWITCH #3               |
| 30                                               | 095040 | BLK   | 16 | 5"     | F250#14-#16    | PIGG                 | FAN SWITCH #2                  |
| 31                                               | 095057 | YLW   | 16 | 16"    | F250#14-#16    | F187#14-#16          | WATER SWITCH #3                |
| 32                                               | 095040 | BLK   | 16 | 5"     | F250#14-#16    | PIGG                 | HEATER SWITCH #7               |
| 33                                               | 095058 | BLK   | 16 | 29"    | FPIN           | F250#14-#16          | HOLDING TANK RECEPTACLE #4     |
| 34                                               | 095059 | YLW   | 16 | 10"    | F250#14-#16    | PIGG                 | FAN SWITCH #7                  |
| 35                                               | 095060 | BLK   | 16 | 7"     | PIGG           | FPIN                 | FUSE SIDE                      |
| 36                                               | 095061 | YLW   | 16 | 5"     | FPIN           | F250#14-#16          | HOLDING TANK RECEPTACLE #5     |
| 37                                               | 095062 | BLU   | 16 | 29"    | F250#14-#16    | FPIN                 | TERMINAL BLOCK #11 RED         |
| 38                                               | 095063 | GRN   | 16 | 4"     | FPIN           | #10RING#14-#16       | HOLDING TANK RECEPTACLE #7     |
| 39                                               | 095064 | GRN   | 16 | 7"     | FPIN           | #10RING#14-#16       | PUMP RECEPTACLE #7             |
| 40                                               | 095190 | GRN   | 16 | 42"    | FPIN           | #10RING#14-#16       | 4 PIN RECEPTACLE #1 AUTO DRAIN |
| 41                                               | 095066 | YLW   | 16 | 14"    | F250#14-#16    | F250#14-#16          | HEATER SWITCH #8               |
| 42                                               | 095010 | WHT   | 16 | 3"     | PIGG           | F250#14-#16          | HEATER SWITCH #3               |
| 43                                               | 095010 | WHT   | 16 | 3"     | PIGG           | F250#14-#16          | FAN SWITCH #3                  |
| 44                                               | 095086 | BLU   | 16 | 7"     | F250#14-#16    | F250#14-#16          | WATER SWITCH #7                |
| 45                                               | 095067 | RED   | 16 | 14"    | PIGG           | F187#14-#16          | WATER SWITCH #6                |
| 46                                               | 520174 | GRN   | 18 | 10"    | MPIN           | #1/4RING#18-#22      | HOLDING TANK PLUG #7           |
| 47                                               | 095069 | WHT   | 16 | 14"    | F250#14-#16    | F250#14-#16          | TERMINAL BLOCK #12 RED         |
| 48                                               | 095070 | BLU   | 16 | 30"    | F250#14-#16    | F250#14-#16          | FUSE SIDE                      |
| 49                                               | 095040 | BLK   | 16 | 5"     | F250#14-#16    | PIGG                 | FAN SWITCH #8                  |
| 50                                               | 095040 | BLK   | 16 | 5"     | F250#14-#16    | PIGG                 | WATER SWITCH #8                |
| 51                                               | 095040 | BLK   | 16 | 5"     | F250#14-#16    | PIGG                 | PUMP SWITCH #8                 |
| 52                                               | 520174 | ORG   | 18 | 10"    | F187#18-#22    | MPIN                 | HT MICROSWITCH NC              |
| 53                                               | 520174 | WHT   | 18 | 10"    | F187#18-#22    | MPIN                 | HT MICROSWITCH COM             |
| 54                                               | 520174 | BLK   | 18 | 10"    | F187#18-#22    | MPIN                 | PUMP #1 MICROSWITCH NO         |
| 55                                               | 520174 | YLW   | 18 | 10"    | F187#18-#22    | MPIN                 | PUMP #1 MICROSWITCH COM        |
| 56                                               | 520174 | BLU   | 18 | 10"    | F187#18-#22    | MPIN                 | PUMP #2 MICROSWITCH COM        |
| 57                                               | 520174 | RED   | 18 | 10"    | F187#18-#22    | MPIN                 | PUMP #2 MICROSWITCH NO         |
| 58                                               | 095087 | RED   | 16 | 6"     | FPIN           | FPIN                 | PUMP RECEPTACLE #6             |
| 59                                               | 095189 | BRN   | 16 | 27"    | FPIN           | #10RING#14-#16       | 4 PIN RECEPTACLE #3 AUTO DRAIN |
| 60                                               | 095188 | BLK   | 16 | 21"    | FPIN           | PIGG                 | 4 PIN RECEPTACLE #2 AUTO DRAIN |

## Wiring Diagram, PWS, 45GPD, Auto

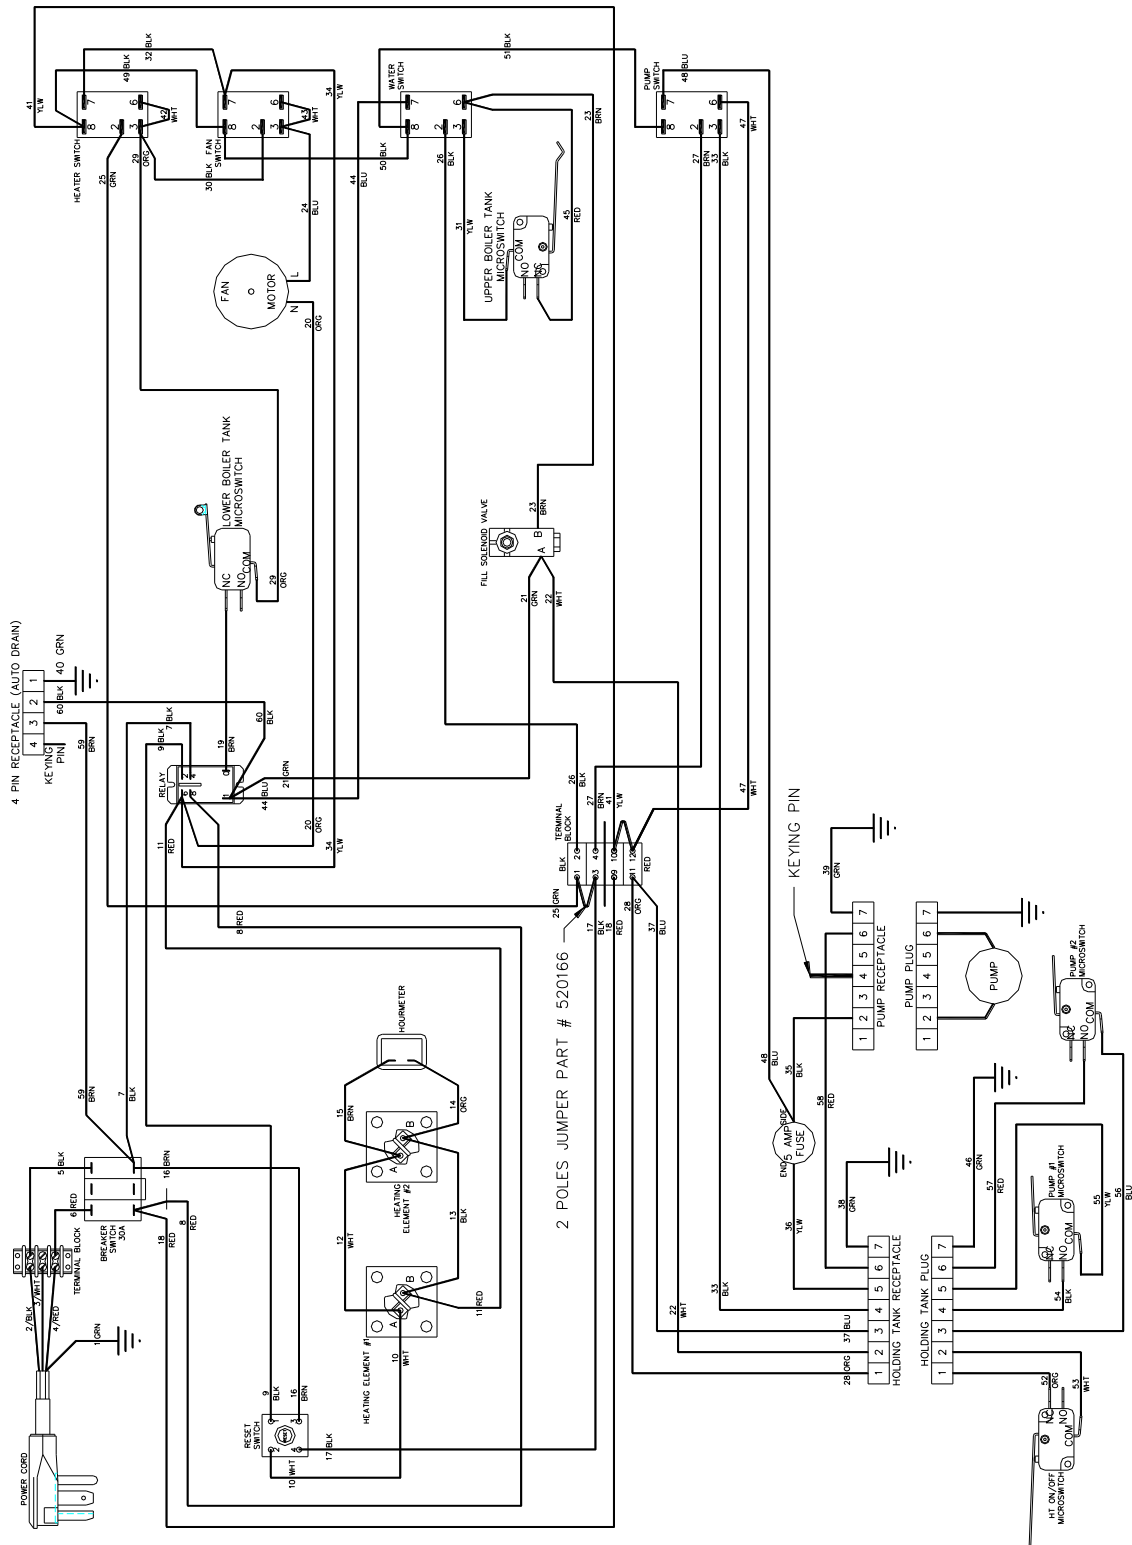

This page left intentionally blank

# Precision Water Distiller Warranty Registration

**IMPORTANT!**      **Precision Design & Mfg Inc.**      **IMPORTANT!**

Thank you for purchasing this fine Precision Water Distiller.  
Please complete the information below and return it within the next ten days so we may register your purchase.

|                             |  |                          |  |             |  |             |  |                      |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
|-----------------------------|--|--------------------------|--|-------------|--|-------------|--|----------------------|--|--|--|-----------------------|--|--|--|----------------|--|--|--|----------------|--|--|--|
| <b>Last Name</b>            |  |                          |  |             |  |             |  |                      |  |  |  | <b>First Name</b>     |  |  |  |                |  |  |  |                |  |  |  |
| <div></div>                 |  |                          |  |             |  |             |  |                      |  |  |  | <div></div>           |  |  |  |                |  |  |  |                |  |  |  |
| <b>Address: (Mailing)</b>   |  |                          |  |             |  |             |  |                      |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
| <div></div>                 |  |                          |  |             |  |             |  |                      |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
| <b>City</b>                 |  |                          |  |             |  |             |  |                      |  |  |  | <b>Province/State</b> |  |  |  | <b>Country</b> |  |  |  |                |  |  |  |
| <div></div>                 |  |                          |  |             |  |             |  |                      |  |  |  | <div></div>           |  |  |  | <div></div>    |  |  |  |                |  |  |  |
| <b>Zip Code/Postal Code</b> |  |                          |  |             |  |             |  |                      |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
| <div></div>                 |  |                          |  |             |  |             |  |                      |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
| <b>Month</b>                |  | <b>Date of Purchase:</b> |  | <b>Day</b>  |  | <b>Year</b> |  | <b>Phone Number:</b> |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
| <div></div>                 |  | <div></div>              |  | <div></div> |  | <div></div> |  | <div></div>          |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
| <b>PWS Model Number</b>     |  |                          |  |             |  |             |  |                      |  |  |  | <b>Serial Number</b>  |  |  |  |                |  |  |  | <b>Series:</b> |  |  |  |
| <b>PWS 45-75</b>            |  |                          |  |             |  |             |  |                      |  |  |  | <div></div>           |  |  |  |                |  |  |  | <div></div>    |  |  |  |
| <b>Purchased From:</b>      |  |                          |  |             |  |             |  |                      |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |
| <div></div>                 |  |                          |  |             |  |             |  |                      |  |  |  |                       |  |  |  |                |  |  |  |                |  |  |  |

Please fill in information completely and mail directly to:

Precision Design & Manufacturing Inc.  
9024 – 100<sup>TH</sup> Street  
Westlock, Alberta, Canada  
T7P 2L4

Or email to: [info@precisioncanada.com](mailto:info@precisioncanada.com)