


Precision Water / Purely Natural Self-Serve Water Dispenser Owners' Guide

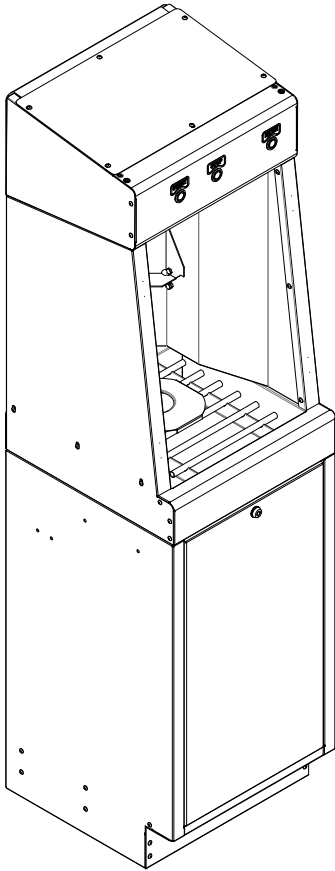


Model: BFDSA-1

Part No: 330016 Series: 0012

Manufactured By:
Precision Design & Manufacturing Inc.
9020-100 Street
Westlock, AB, Canada
T7P 2L4

<http://www.precisionwatersystems.ca>
Phone: (780) 349 4933

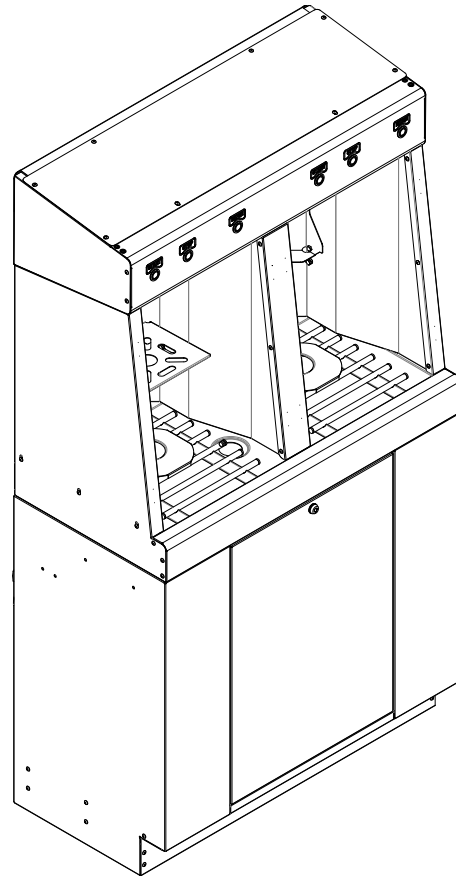

Model: BFDSA-2

Part No. 330017 Series: 0012

**Please read this Owners' Guide
completely before installing or
operating your
Precision Water Systems
Water Dispenser.**

*Specifications are subject to
change without notice.*

THIS PAGE INTENTIONALLY LEFT BLANK

Table of Contents

TABLE OF CONTENTS	3
INTRODUCTION	4
RECORDS	4
WARRANTY & IMPORTANT SAFETY PRECAUTIONS	5
FEATURES	6
<i>Water Dispenser & Ozone Rinse Station</i>	
<i>Bottle Washer and Fill Station Rear Bottom View Features Diagram</i>	
FINDING A GOOD INSTALLATION LOCATION	7
UNPACKING YOUR WATER DISPENSER & RINSE STATION	8
<i>Bottle Washer and Fill Station Unpacking Diagram</i>	
INSTALLATION	9
<i>Pre-Installation Preparation</i>	
<i>Pure Water & Drain Connections</i>	
<i>Electrical Connections</i>	
<i>Bottle & Shelf Attachments</i>	
OPERATION	12
<i>Ultraviolet (UV) Assembly</i>	
<i>Ozonator</i>	
<i>Adjusting Fill Capacity</i>	
<i>Adjusting Timer</i>	
MAINTENANCE AND CLEANING	16
<i>Daily House Keeping</i>	
TROUBLESHOOTING	17
SPECIFICATIONS AND TECHNICAL INFORMATION	18-22
<i>Wiring List & Schematic for BFDSA-1</i>	
<i>Wiring List & Schematic for BFDSA-2</i>	
<i>Wiring List Ozone Generator</i>	
<i>Wiring Schematic Ozone Generator</i>	
WARRANTY	
REGISTRATION	23


Introduction

Congratulations on the purchase of your new Precision Water System (PWS) / Purely Natural (PN) Water Dispenser. When installed and maintained properly, your water dispenser will provide years of safe, trouble free service. It is important to observe and follow the safety and maintenance instructions carefully. If you have any questions or concerns regarding installation or operation of your water dispenser please contact your dealer.

Your water dispenser must be installed according to any Local or State Regulations.

Records

Please record all of the important information below to assist you and the service centre in case there is any service work required in the future. All of the information is required to properly identify your water dispenser and will make servicing much easier. The information is located on the serial plate, which is located on the side of the water dispenser as shown below.

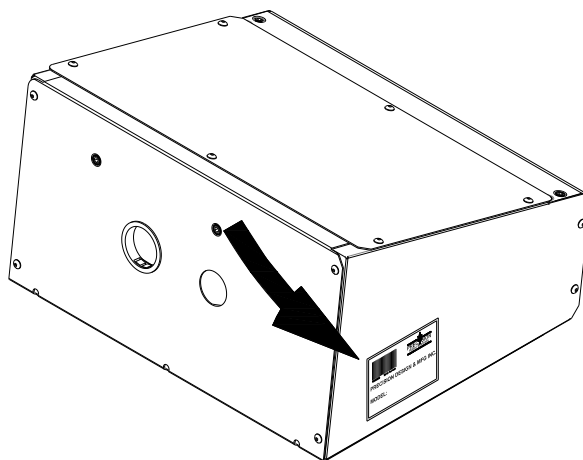

Model:

 -

eg: BFDSA-2

Series:

 eg: 0010

Serial Number:

 eg: 2201812

Date of Purchase: _____

Warranty

- The warranty for your water dispenser covers defects to all components and electrical parts for one (1) year to the original purchaser.
- Stainless Steel parts are warranted for one (1) year. With this warranty it is the responsibility of the water dispenser owner to properly maintain the water dispenser. If there is any misuse or abuse the one (1) year warranty will be void.
- PWS / PN does not warrant any transportation charges incurred to complete the repair. The water dispenser owner is responsible for all shipping charges to and from the service centre.
- Warranty is void if the water dispenser is found to have been consumer damaged or misused, caused by acts of God, unauthorized alteration, repair, or vandalism.

Important Safety Precautions


When using electrical appliances, basic safety precautions should always be followed including the following:

- 1. Read all instructions.**
- 2.** To protect against electrical shock do not immerse cords or plugs in water or other liquid.
- 3.** Close supervision is necessary when any appliance is used near children.
- 4.** Do not allow children to operate this appliance.
- 5.** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest service facility for examination, repair or adjustment.
- 6.** This appliance is intended for commercial use only.
- 7. Save these instructions.**


Features

The water dispensers have the following features shown in the diagrams below:

Water Dispenser Front View Features Diagram

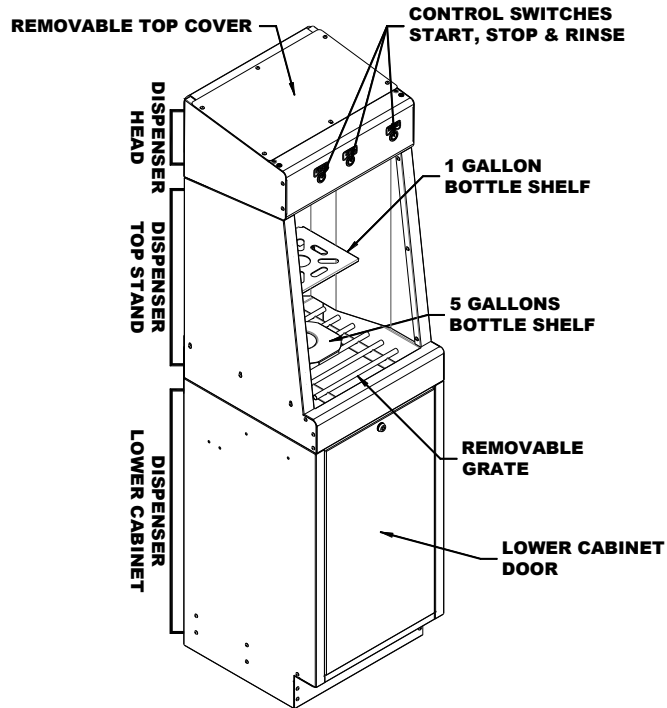

Water Dispenser Rear View Features Diagram

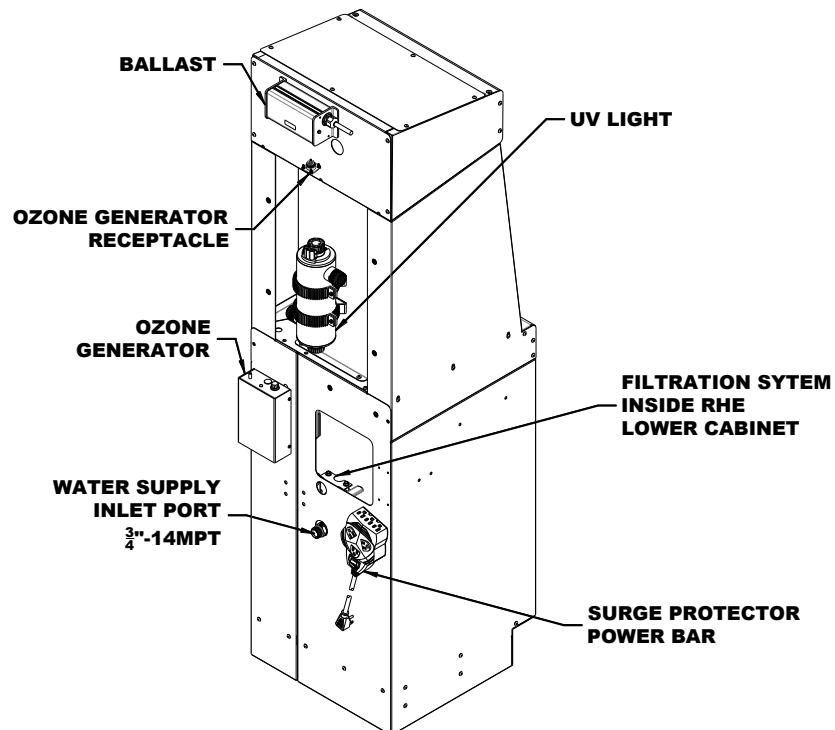


Finding a Good Installation Location

Before installing your water dispenser, it is important to find a good location. Following the points listed below will provide the best location for your water dispenser.

1. There needs to be adequate room for a customer to place a bottle in the water dispenser for rinsing and filling.
2. Plan for electrical and plumbing requirements for the water dispenser. The **Pre-Installation Preparation** section in the **Installation** section of this guide explains the electrical and plumbing requirements in detail. The most critical component of the installation, in regards to plumbing, is the floor drain location. A wall drain may be your only option. If a wall drain is used, be sure there is sufficient slope to follow local plumbing codes. If a floor or wall drain is not accessible, a pump out tank option is available to pump water to a drain in another remote location.
3. Good lighting is required to make sure the water dispenser can be operated properly. Lighting may be added to an installation location easier than plumbing or floor drains.
4. An open area that can be kept clean and maintained is important when considering the location for your water dispenser. The installation location should not be near an overhead door.
5. The water dispenser area should be in the general traffic flow of your store for optimum exposure.

Unpacking Your Water Dispenser

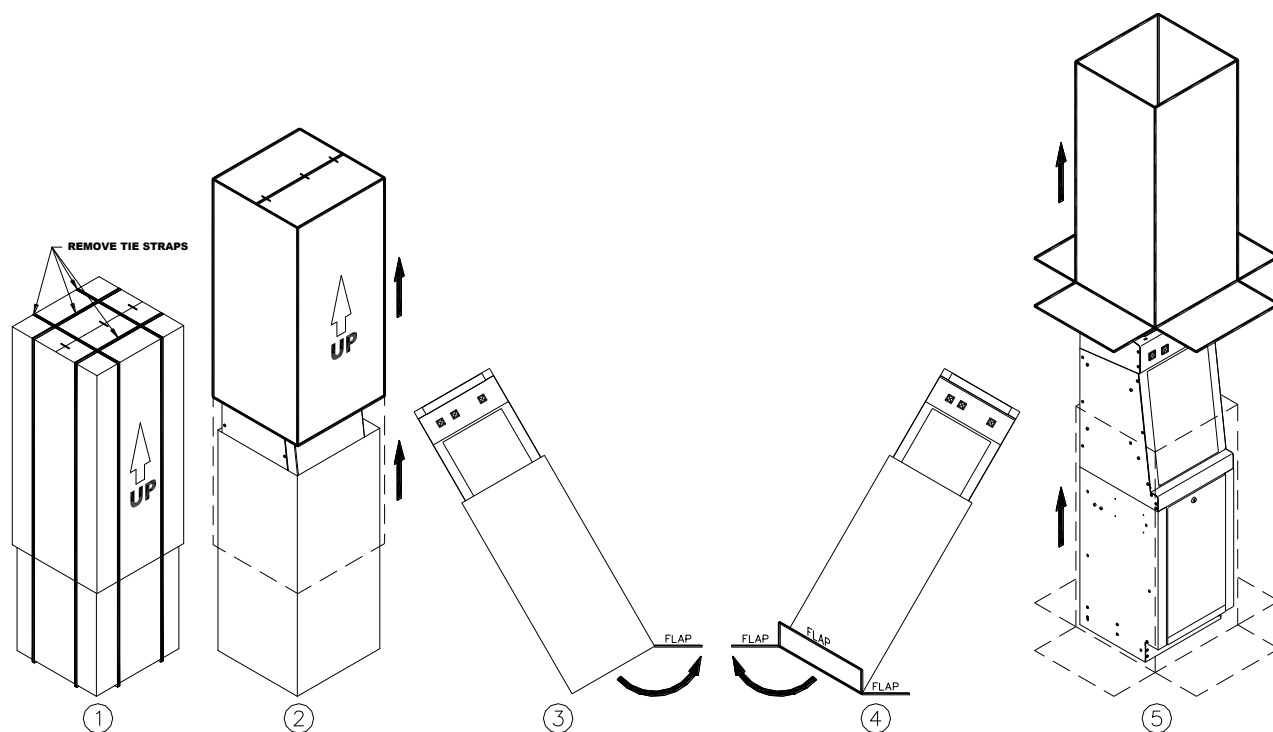

Water Dispenser Unpacking Diagram

Your water dispenser has been shipped in a strapped, 2-sleeve, box. Unpack the water dispenser by:

1. Remove the straps off the cardboard box.
2. Lift the top cardboard sleeve off the dispenser.
3. Tip the dispenser slightly and pull out the half flaps.
4. Tip the other 3 directions to pull out the other 3 flaps.
5. Return the dispenser to the upright position with all 4 flaps outward.
6. Lift the remaining cardboard sleeve over the top of the dispenser.

Assembly

Your water dispenser comes fully assembled. If you purchased the optional bottle shelving unit, they will need to be installed.

Installation


Pre-Installation Preparation

Introduction

To ensure that installation of your water dispenser can be completed as quickly as possible, it is best to have all the electrical supplies and plumbing fittings installed before your station arrives. All connections should be located so when your water dispenser arrives, all you have to do is assemble it, slide it against the wall, and connect the electrical and plumbing with a minimum amount of labour. The water dispenser should be installed according to local electrical and plumbing codes. If you are unable to install the station according to code, then have a plumber and electrician complete all connections for you.

Pure Water & Drain Connections

One water supply and one drain connection are required on single station water dispensers and 2 water supply** and one drain connection are required for double dispensers.

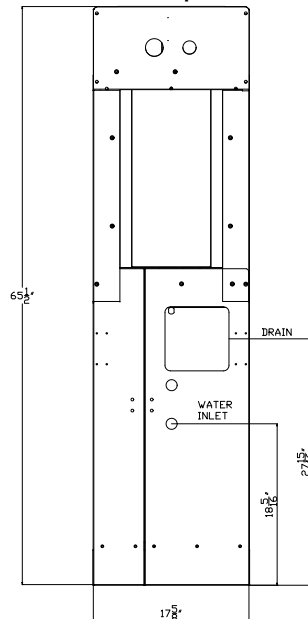

The **Water Dispenser Plumbing Diagram** following shows the dimensions for the location of all water supply and drain connections.

The **Water dispenser Plumbing Diagram** above shows the dimensions for the location of the drain connections. Be sure to install according to appropriate local building codes.


NOTE: ALL DIMENSIONS ARE ACCURATE AT TIME OF PRINTING BUT ARE SUBJECT TO CHANGE WITHOUT NOTICE.

****Note:** Double dispensers should have 2 individual pure water lines connected to 2 independent pumps.
All pure water lines should be 1/2" ID min. and pumps should be 2-5 gallons per minute.

Electrical Connections

A qualified electrician must be used to complete the electrical connections for the water dispenser. A 120 Volt, 10 Amp, power supply with 2 outlets will be required to provide adequate electrical service for the water dispenser.

Water Dispenser Electrical Connections Diagram

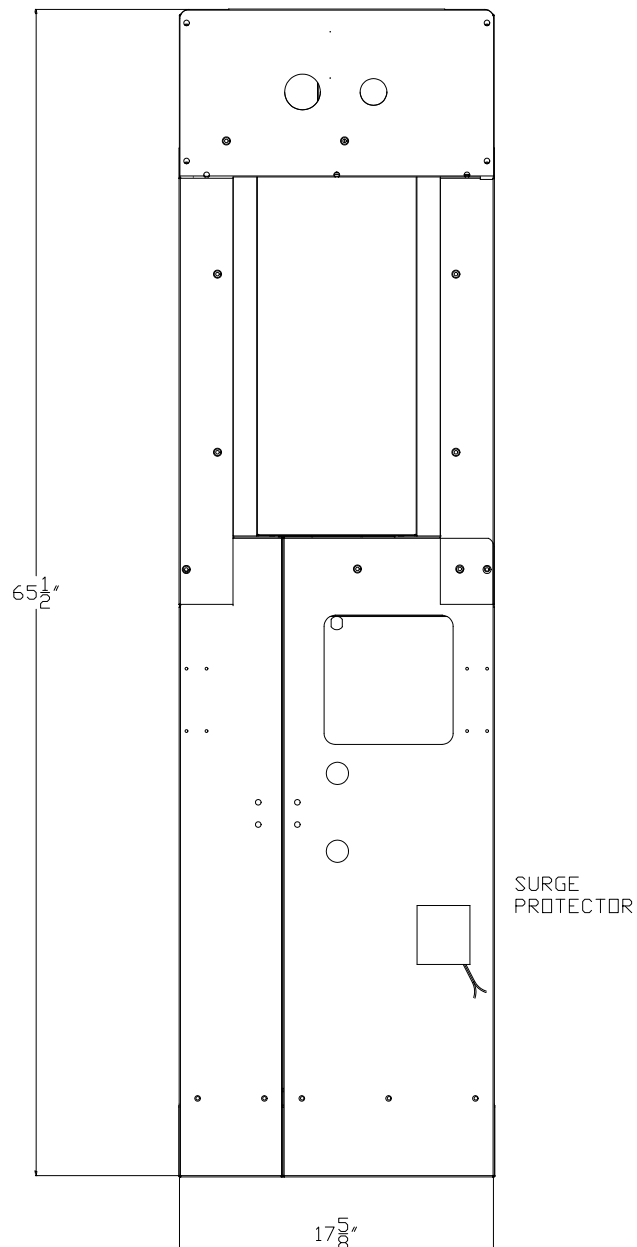

Optional Bottle Shelf Attachment & Set-Up

If you purchase the optional bottle and accessory shelf, please refer to picture below for setup.



Note: Bottles and other accessory not included. Picture above may differ slightly from actual units.

Operation


NOTE: Read all parts of the Owners Guide before operating the Water Dispenser.

Introduction

Your new dispenser has a rinse & semi automatic fill feature. To rinse a new clean bottle, you simply turn the bottle upside down & press the rinse button (*ozone rinse*). Push and hold button, now the bottle is rinsed and ready for a fill. Turn 5&3 Gallon on bottom grate to fill. 5 gallon bottle is preset to shut off once it is filled, for the 3 gallon there is a bottle stop button has to be pushed.

For smaller bottles the bottle shelf should be lowered to reduce the distance between the water outlet spout and the neck opening on the bottle. To lower the shelf, simply pull ahead on the shelf and lower it onto the shelf stopper as shown above. When your have completed filling your bottle and have removed it from the fill chamber, return the shelf to the storage position.

Activation Controls

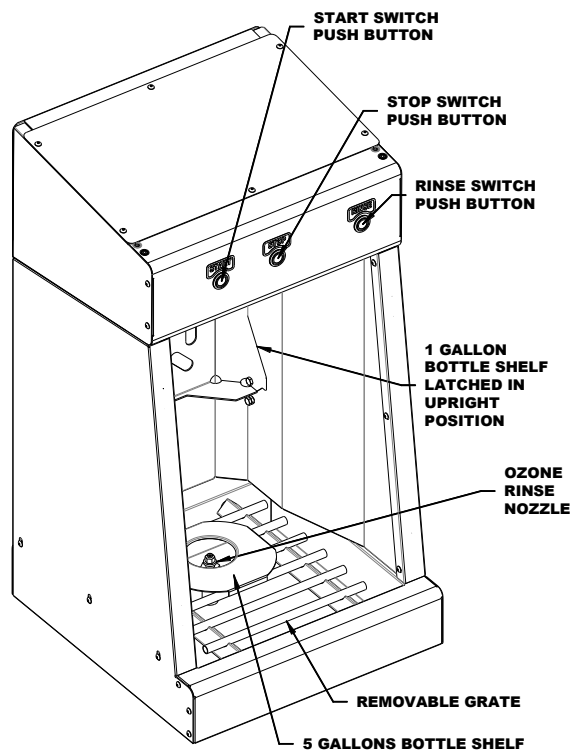


Once the bottle is full, re-apply the cap. New caps for crown neck bottles should be available to the customer at no extra charge. Remove the bottle. For double dispensers, two bottles may be filled at the same time.

Ultraviolet (UV) Assembly

This system is designed to use the most advanced UV technology we understand to be available on the market to provide you with years of trouble-free operation with minimal maintenance. The Purely Natural Water Dispenser is available with this UV Assembly to help you provide safe, healthy, purified water to your customers. It is highly recommended that UV systems are installed and used.

Note: If a dispenser has the UV system removed or the dispenser is purchased without the UV system the manufacturer disclaims any liability respecting the use of the product and the manufacturer's warranty will be voided or shall be void as the case may be. To ensure ongoing optimal operation, UV lamps need to be replaced **annually** with VIQUA factory-supplied replacements. According to information we have received and believe to be reliable, VIQUA lamps are the result of extensive development resulting in a highly efficient platform with extremely stable UV output over the entire 9000 hour lifetime. It's success has led to a proliferation of non-genuine copies in the market. The UV lamp is the heart of the UV system, and there should be no compromise when it's time for a replacement.

Note: Damage arising from the use of non-genuine lamps poses a safety risk and is not covered by equipment warranty. Contact Precision Water Systems or your Dealer for the proper UV Lamp replacement.

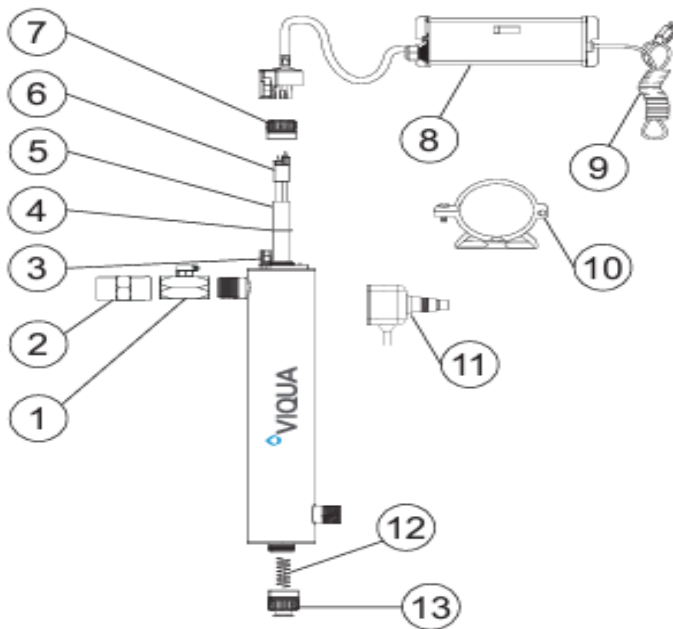

ITEM	PART #	DESCRIPTION
1	440179	Temperature Management Valve (Optional)
2	n/a	Flow Restrictor (Not used on the VH150)
3	270276-R	Lamp Connector Base
4	410867	O-Ring
5	QSO-150 (PWS #080856)	Open-ended, GE 214 fused aquartz sleeve with fire polished ends
6	S150RL-HO (PWS #080830)	Hard Glass, coated HO UV Lamp (Replace Yearly)
7	RN-001	Retaining Nut
8	BA-ICE-CL (PWS #080831)	Controller (Ballast)
9	602636	Power Cord for Controller
10	410076 (PWS #080832)	Mounting Bracket Assembly
11	n/a	Sensor (Not used on this Model)
12	SP008	Spring
13	RN-001/1	Retaining Nut with the Plug

See enclosed manual for full Manufacture's Recommendations and Instructions


Ozonator

Your Water Dispenser is also equipped with an Ozone Generator; another step to insure high quality purified water. The powerful oxidizing agent can remove organic and inorganic contaminants from your water source.


See enclosed manual for full Manufacture's Recommendations and Instructions

Adjusting Bottle Fill Capacity

To adjust fill capacity auto shutoff, first remove dispenser top cover. Locate & put in place a 5 Gal bottle in dispensing compartment, start flow & time filling of the bottle to approximately 90% (Start of the neck of the bottle) as shown in bottle fill illustration. Adjust timer knob to approximate time (each number indicates 1-minute increments). Empty & retest bottle fill & timer, adjust to reach appropriate fill level. Once achieved, reinstall top cover. Operation of timer function is to prevent start button being pushed & unit left to run continuously. For small bottles, start fill & stop when desired fill level reached.

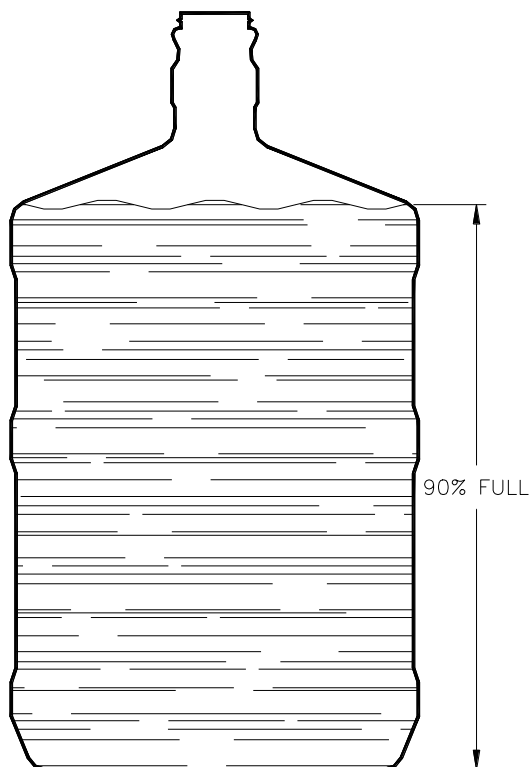

Semi Automatic Dispenser Timer Instructions

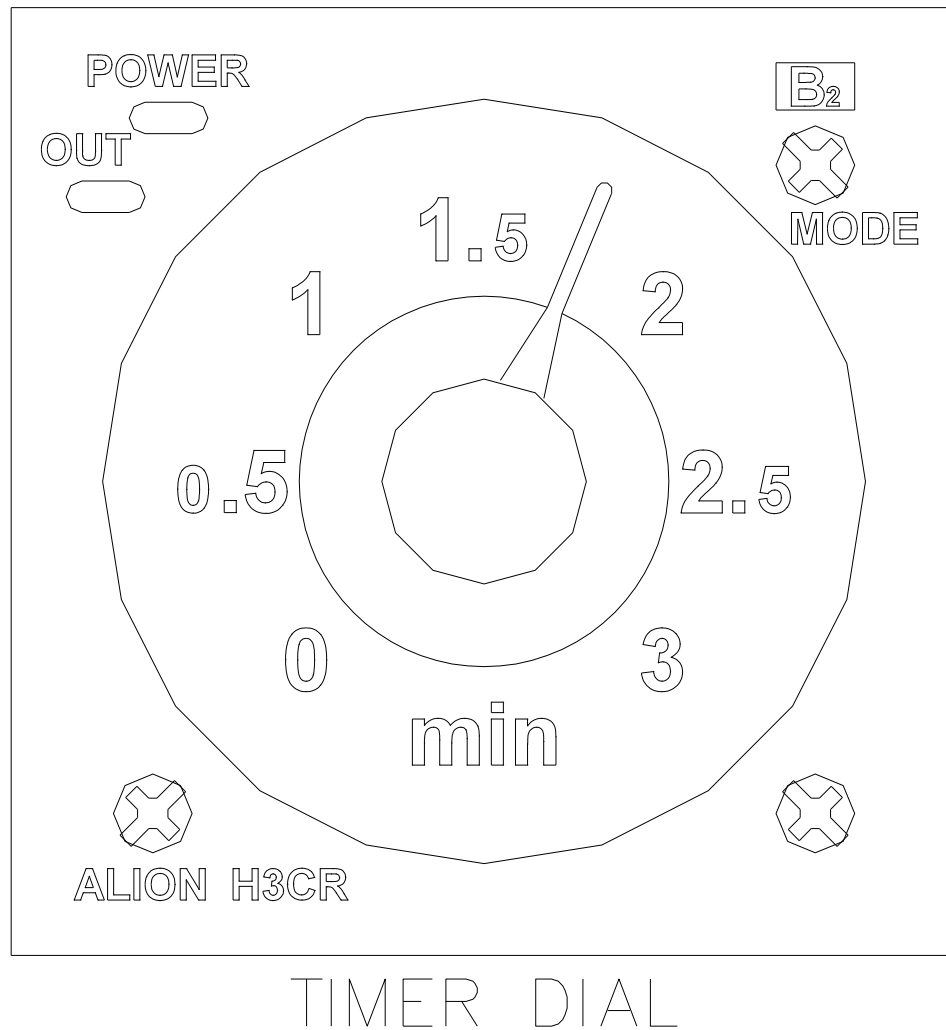

Initial Setting:

Using a small flat blade screwdriver:

- Set Left Hand Mode Dial to 'B'
- Set Center Dial to '0-18' Numbers on the Main Display
- Set Right Hand Range Dial to '10S'

See Diagram above.

Maintenance and Cleaning


Regular Maintenance

Keeping your water dispenser clean on a daily basis is the best maintenance that you can provide.

Wash your overfill tray with a scotchbrite type pad to keep your dispenser sparkling clean.

Note: Never use steel wool type scrubbers as they will contaminate the stainless steel and promote rust.

Bottle grates can easily be removed and reinstalled as show in the diagram. Removal of the bottle grate allows for easy and complete access to the overfill tray in each bottle fill chamber.

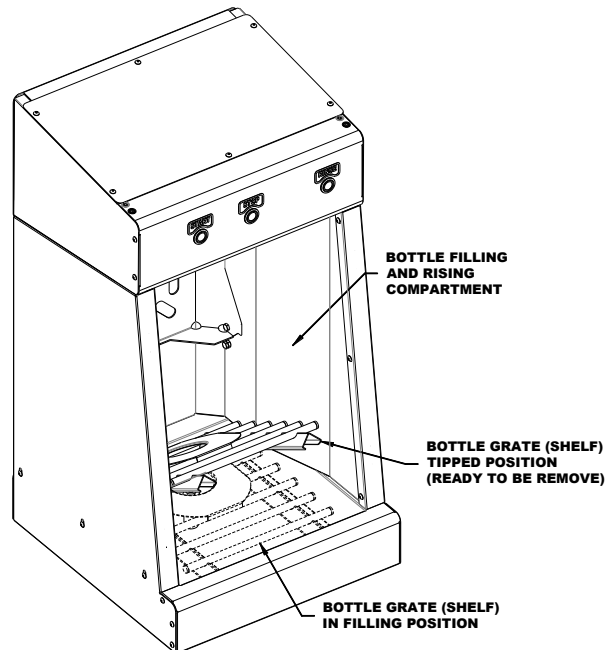

DAILY HOUSE KEEPING

Daily Refuse Removal

At least once per day, the dispenser should be checked for any refuse left by customers inside the fill chambers.

Daily New Bottle & Accessory Restock

If your dispenser is equipped with the optional bottle and accessory racking, ensure a full stock of water bottles and accessories are available for purchase by your customers in your store.

Push-On Caps

Have a supply of new, clean, push on caps available for your customers.

Troubleshooting

Caution! Always Disconnect all power and let the water dispenser cool down completely before completing any Troubleshooting.

PROBLEM	CAUSE
A) No Water Flow when the cycle activation switch is pressed.	1. No power to water dispenser. 2. Ensure that there is sufficient purified water available. 3. Check pump supply.
B) Solenoid Valve does not turn off at the end of cycle.	1. Debris in solenoid valve is holding the valve open. Remove the top off from the solenoid valve by removing screws and check for blockage. Remove blockage and/or flush valve with clean water.

Contact any Precision Water Systems Service Centre to correct any problems with your Water Dispenser that is not covered in this guide.

To locate a Service Centre in your area, contact the manufacturer at:

Precision Design & Manufacturing Inc.
9020-100th Street
Westlock, Alberta, Canada
T7P 2L4

<http://www.precisionwatersystems.ca>
e-mail: info@precisioncanada.com

Phone: (780) 349 4933
1-877-888-7364

Wiring List, BFDSA-1

Wiring List - PURELY NATURAL SINGLE DISPENSER, BFDSA-1 PART # 330443,SD


SERIES 10

No.	Part#	Color	Ga	Length	From Conn.	ToConn.	From Location	To Location
1	330286	BLK/WHT	18	FULL 72"	PLUG	F250 #18-#22	TRANSFORMER	TERMINAL BLOCK (LH TAB)
2	330286	BLK	18	FULL 72"	PLUG	F250 #18-#22	TRANSFORMER	TERMINAL BLOCK (RH TAB)
3	095284	RED	18	14"	F250 #18-#22	BARE	TERMINAL BLOCK (RH TAB)	TIMER BASE 3
4	095285	BLU	18	4"	BARE	BARE	TIMER BASE 2	TIMER BASE 3
5	095286	BRN	18	4"	BARE	BARE	TIMER BASE 6	TIMER BASE 7
6	095287	BLK	18	10"	BARE	F250 #18-#22	TIMER BASE 1	HEAD SOLENOID VALVE
7	095288	WHT	18	10"	BARE	F250 #18-#22	TIMER BASE 8	HEAD SOLENOID VALVE
8	330523	BLK	18	72"	F250 #18-#22	F250 #18-#22	TERMINAL BLOCK (RH TAB)	RINSE SOLENOID VALVE
9	330523	BLK	18	72"	F250 #18-#22	F250 #18-#22	RINSE SOLENOID VALVE	RINSE SWITCH #2 VIOLET
10	060217	#2 VLT	20	14.5"	250TAB #18-#22	F250 #18-#22	RINSE SWITCH #2 VIOLET	RINSE SOLENOID VALVE
11	060217	#1 VLT	20	14.5"	250TAB #18-#22	F250 #18-#22	RINSE SWITCHES #1 VIOLET	EXTENSION CABLE RIBBED WIRE
12	060217	#9 VLT	20	14.5"	250TAB #18-#22	F250 #18-#22	RINSE SWITCHES #9 VIOLET	EXTENSION CABLE SMOOTH WIRE
13	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	LH START SWITCH #5 RED	TERMINAL BLOCK (RH TAB)
14	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	LH START SWITCH #6 BLACK	TERMINAL BLOCK (LH TAB)
15	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	STOP SWITCH #5 RED	TERMINAL BLOCK (RH TAB)
16	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	STOP SWITCH #6 BLACK	TERMINAL BLOCK (LH TAB)
17	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	RINSE SWITCH #5 RED	TERMINAL BLOCK (RH TAB)
18	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	RINSE SWITCH #6 BLACK	TERMINAL BLOCK (LH TAB)
19	060217	#3 YLW	20	14.5"	BARE	SCREW 8	STOP SWITCH #3 YLW	TIMER BASE 8
20	060217	#7 YLW	20	14.5"	F250 #18-#22	LH TAB	STOP SWITCH #7 YLW	TERMINAL BLOCK (LH TAB)
21	060217	#2 VLT	20	14.5"	BARE	SCREW 7	START SWITCH #2 VLT	TIMER BASE 7
22	060217	#10 VLT	20	14.5"	BARE	SCREW 8	START SWITCH #10 VLT	TIMER BASE 8
23	060217	#10 VLT	20	14.5"	F250 #18-#22	LH TAB	RINSE SWITCH #10 VLT	TERMINAL BLOCK (LH TAB)
24	330536	RIBBED WIRE	18	6"	F250 #18-#22	FPIN	EXTENSION CABLE RIBBED WIRE	7 PIN RECEPTACLE #5
25	330536	SMOOTH WIRE	18	6"	F250 #18-#22	FPIN	EXTENSION CABLE SMOOTH WIRE	7 PIN RECEPTACLE #3

NOTES: 1. #1 & #2 WIRES ARE ATTACHED TO THE TRANSFORMER.

2. #8/#9 AND #24/#25 ARE 2 CONDUCTOR WIRES #18-2 BLACK.


330443, Exploded Parts List Wiring Diagram, BFDSA-1

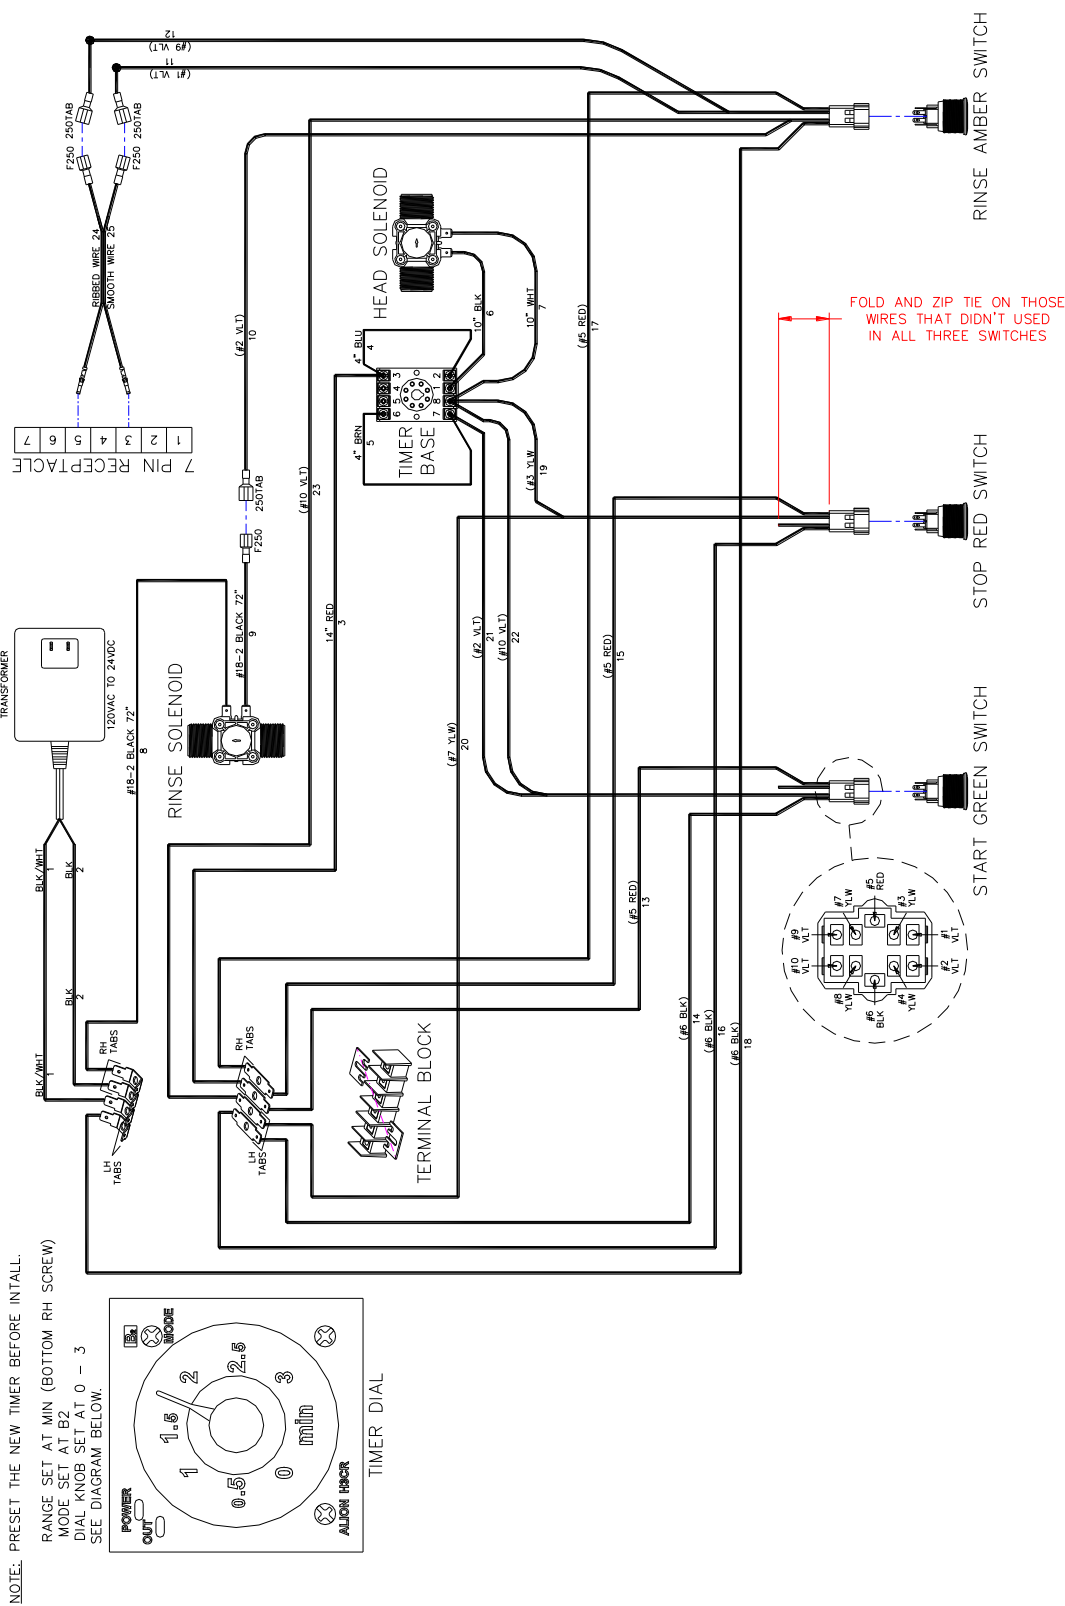

No.	Part#	Color	Ga	Length	From Conn.	ToConn.	From Location	To Location
1	330286	BLK/WHT	18	FULL 72"	PLUG	F250 #18-#22	TRANSFORMER	REAR TERMINAL BLOCK (LH TAB)
2	330286	BLK	18	FULL 72"	PLUG	F250 #18-#22	TRANSFORMER	REAR TERMINAL BLOCK (RH TAB)
3	095284	RED	18	14"	F250 #18-#22	BARE	REAR TERMINAL BLOCK (RH TAB)	LH TIMER BASE 3
4	095285	BLU	18	4"	BARE	BARE	LH TIMER BASE 2	LH TIMER BASE 3
5	095286	BRN	18	4"	BARE	BARE	LH TIMER BASE 6	LH TIMER BASE 7
6	095287	BLK	18	10"	BARE	F250 #18-#22	LH TIMER BASE 1	LH HEAD SOLENOID VALVE
7	095288	WHT	18	10"	BARE	F250 #18-#22	LH TIMER BASE 8	LH HEAD SOLENOID VALVE
8	330523	BLK	18	72"	F250 #18-#22	F250 #18-#22	REAR TERMINAL BLOCK (RH TAB)	LH RINSE SOLENOID VALVE
9	330523	BLK	18	72"	F250 #18-#22	F250 #18-#22	LH RINSE SOLENOID VALVE	LH RINSE SWITCH #2 VIOLET
10	060217	#2 VLT	20	14.5"	250TAB #18-#22	F250 #18-#22	LH RINSE SWITCH #2 VIOLET	LH RINSE SOLENOID VALVE
11	060217	#1 VLT	20	14.5"	250TAB #18-#22	F250 #18-#22	BOTH RINSE SWITCHES #1 VIOLET	EXTENSION CABLE RIBBED WIRE
12	060217	#9 VLT	20	14.5"	250TAB #18-#22	F250 #18-#22	BOTH RINSE SWITCHES #9 VIOLET	EXTENSION CABLE SMOOTH WIRE
13	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	LH START SWITCH #5 RED	FRONT TERMINAL BLOCK (RH TAB)
14	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	LH START SWITCH #6 BLACK	FRONT TERMINAL BLOCK (LH TAB)
15	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	LH STOP SWITCH #5 RED	FRONT TERMINAL BLOCK (RH TAB)
16	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	LH STOP SWITCH #6 BLACK	FRONT TERMINAL BLOCK (LH TAB)
17	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	LH RINSE SWITCH #5 RED	FRONT TERMINAL BLOCK (RH TAB)
18	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	LH RINSE SWITCH #6 BLACK	FRONT TERMINAL BLOCK (LH TAB)
19	060217	#3 YLW	20	14.5"	BARE	LH SCREW 8	LH STOP SWITCH #3 YLW	LH TIMER BASE 8
20	060217	#7 YLW	20	14.5"	F250 #18-#22	LH TAB	LH STOP SWITCH #7 YLW	REAR TERMINAL BLOCK (LH TAB)
21	060217	#2 VLT	20	14.5"	BARE	LH SCREW 7	LH START SWITCH #2 VLT	LH TIMER BASE 7
22	060217	#10 VLT	20	14.5"	BARE	LH SCREW 8	LH START SWITCH #10 VLT	LH TIMER BASE 8
23	060217	#10 VLT	20	14.5"	F250 #18-#22	LH TAB	LH RINSE SWITCH #10 VLT	REAR TERMINAL BLOCK (LH TAB)
24	095284	RED	18	14"	F250 #18-#22	BARE	REAR TERMINAL BLOCK (RH TAB)	RH TIMER BASE 3
25	095285	BLU	18	4"	BARE	BARE	RH TIMER BASE 2	RH TIMER BASE 3
26	095286	BRN	18	4"	BARE	BARE	RH TIMER BASE 6	RH TIMER BASE 7
27	095287	BLK	18	10"	BARE	F250 #18-#22	RH TIMER BASE 1	RH HEAD SOLENOID VALVE
28	095288	WHT	18	10"	BARE	F250 #18-#22	RH TIMER BASE 8	RH HEAD SOLENOID VALVE
29	330523	BLK	18	72"	F250 #18-#22	F250 #18-#22	REAR TERMINAL BLOCK (RH TAB)	RH RINSE SOLENOID VALVE
30	330523	BLK	18	72"	F250 #18-#22	F250 #18-#22	RH RINSE SOLENOID VALVE	RH RINSE SWITCH #2 VIOLET
31	060217	#2 VLT	20	14.5"	250TAB #18-#22	F250 #18-#22	RH RINSE SWITCH #2 VIOLET	RH RINSE SOLENOID VALVE
32	060217	#3 YLW	20	14.5"	BARE	RH SCREW 8	RH STOP SWITCH #3 YLW	RH TIMER BASE 8
33	060217	#7 YLW	20	14.5"	F250 #18-#22	LH TAB	RH STOP SWITCH #7 YLW	REAR TERMINAL BLOCK (LH TAB)
34	060217	#2 VLT	20	14.5"	BARE	RH SCREW 7	RH START SWITCH #2 VLT	RH TIMER BASE 7
35	060217	#10 VLT	20	14.5"	BARE	RH SCREW 8	RH START SWITCH #10 VLT	RH TIMER BASE 8
36	330536	RIBBED WIRE	18	6"	F250 #18-#22	FPIN	EXTENSION CABLE RIBBED WIRE	7 PIN RECEPTACLE #5
37	330536	SMOOTH WIRE	18	6"	F250 #18-#22	FPIN	EXTENSION CABLE SMOOTH WIRE	7 PIN RECEPTACLE #3
38	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	RH START SWITCH #5 RED	FRONT TERMINAL BLOCK (RH TAB)
39	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	RH START SWITCH #6 BLACK	FRONT TERMINAL BLOCK (LH TAB)
40	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	RH STOP SWITCH #5 RED	FRONT TERMINAL BLOCK (RH TAB)
41	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	RH STOP SWITCH #6 BLACK	FRONT TERMINAL BLOCK (LH TAB)
42	060217	#5 RED	20	14.5"	F250 #18-#22	RH TAB	RH RINSE SWITCH #5 RED	FRONT TERMINAL BLOCK (RH TAB)
43	060217	#6 BLK	20	14.5"	F250 #18-#22	LH TAB	RH RINSE SWITCH #6 BLACK	FRONT TERMINAL BLOCK (LH TAB)
44	060217	#10 VLT	20	14.5"	F250 #18-#22	LH TAB	RH RINSE SWITCH #10 VLT	REAR TERMINAL BLOCK (LH TAB)
45	095089	RED	18	3"	F250 #18-#22	F250 #18-#22	REAR TERMINAL BLOCK (RH TAB)	FRONT TERMINAL BLOCK (RH TAB)
46	095090	BLK	18	3"	F250 #18-#22	F250 #18-#22	REAR TERMINAL BLOCK (LH TAB)	FRONT TERMINAL BLOCK (LH TAB)

NOTES: 1. #1 & #2 WIRES ARE ATTACHED TO THE TRANSFORMER.

2. #8/#9, #29/#30 AND #36/#37 ARE 2 CONDUCTOR WIRES #18-2 BLACK.
330447, Exploded Parts List
Wiring Diagram, BFDSA-2

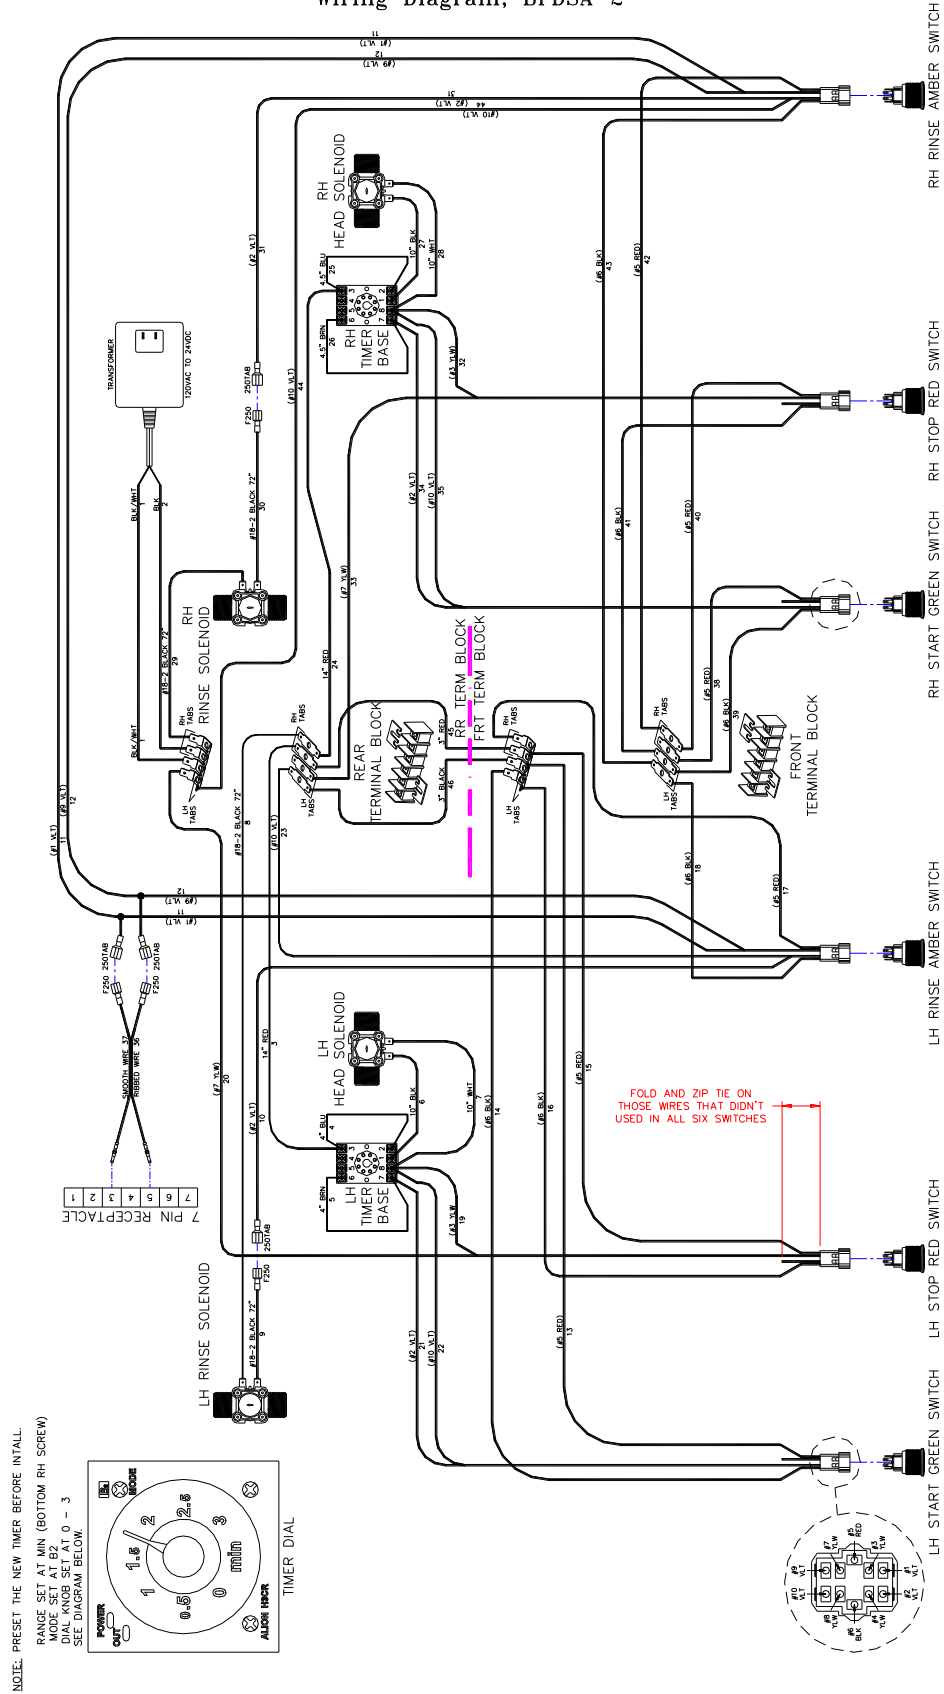


Wiring List - PURELY NATURAL DISPENSER, OZONE GENERATOR PART # 330520A

SERIES 7

No.	Part#	Color	Ga	Length	From Conn.	To Conn.	From Location	To Location
1	330463	BLK	18	FULL	F250 #18-#22	TAB 250 #18-#22	OZONE GENERATOR	7 PIN CIRCULAR PLUG SMOOTH WIRE X 15"
2	330463	BLK	18	FULL	F250 #18-#22	TAB 250 #18-#22	OZONE GENERATOR	7 PIN CIRCULAR PLUG RIBBED WIRE X 15"
3	330518	BLK	18	15"	MALE PIN	FEMALE PIN	7 PIN CIRCULAR PLUG #5	7 PIN RECEPTACLE #5
4	330518	BLK	18	15"	MALE PIN	FEMALE PIN	7 PIN CIRCULAR PLUG #3	7 PIN RECEPTACLE #3

330520, Wiring Schematic
 Dispenser Ozone generator

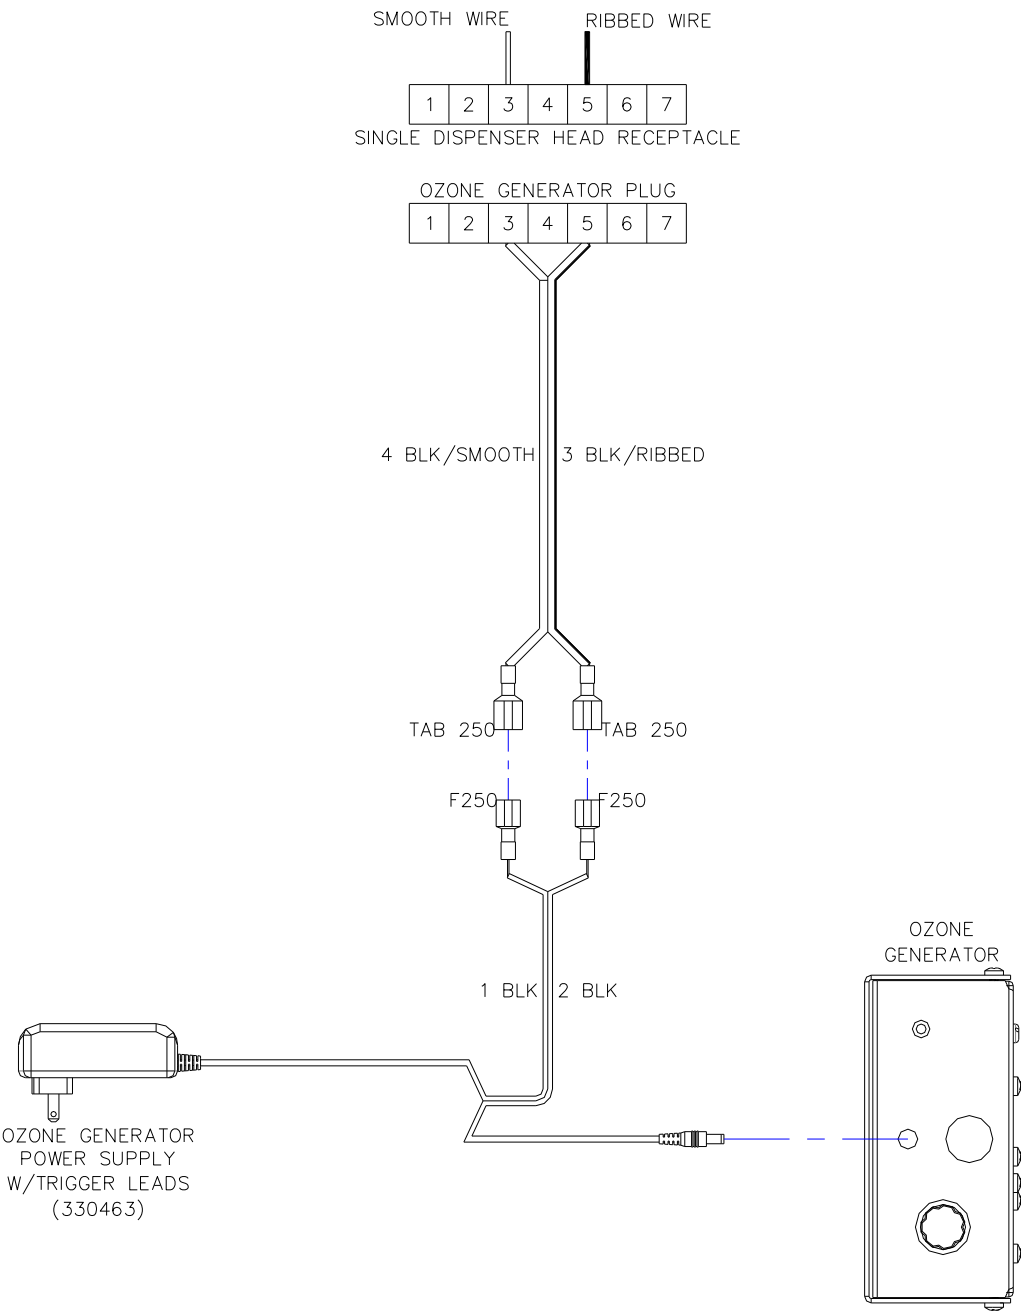

Water Dispenser Warranty Registration

IMPORTANT!

Precision Design & Mfg Inc. IMPORTANT!

IMPORTANT!

Thank you for purchasing this fine Precision Water Systems Water Dispenser.
Please complete the information below and return it within the next ten days so we may register your purchase.

Store Name

[illegible]**Contact Name**[illegible]**Address: (Mailing)**[illegible]

City

[illegible]

Province/State

--	--

Country

[illegible]**Zip Code/Postal Code**

--	--	--	--	--	--

Date of Purchase:

Month

--	--

Day

--	--

Year

--	--

Phone Number:

--	--	--

--	--	--

--	--	--	--

Model Number

--	--	--

--	--	--	--	--

Serial Number

--	--	--	--	--	--	--

Series:

--	--	--	--

Purchased From:[illegible]

Please fill in information completely and mail directly to:

Precision Design & Manufacturing Inc.

9020-100th Street

Westlock, Alberta, Canada

T7P 2L4

Or Email to: info@precisioncanada.com